



# Canon Powershot SD550 Outer Case Replacement

This guide will help you remove the outer case for repairs or replacement.

Written By: Matthew Theiss



---

## INTRODUCTION

The outer case of the PowerShot SD550 is the part that takes the greatest beating. Every time the camera falls, it lands on its case. Some common problems include cracking and paint wear.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Outer Case




- Remove the battery and SD card from the camera.

## Step 2




- Remove the three 3.8 mm screws from the underside of the camera.
- ⓘ Each of the screws is slightly different, so it is important that you note the original location of each screw.

## Step 3

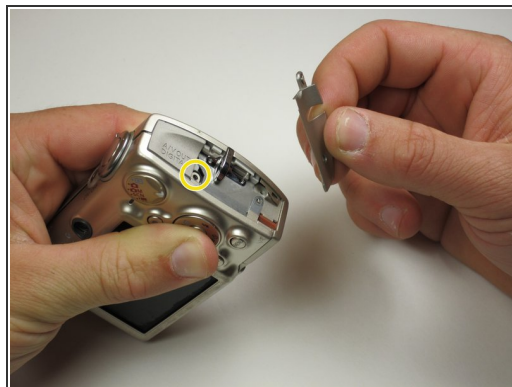

- Remove the 3.2 mm screw from the right side of the camera.
- Remove the 2.2 mm screw from the right side of the camera.
- ⓘ One of these screws is hidden under the USB port cover.
- Lift the side panel off.
- Remove the 1.8 mm screw from underneath the side panel.




## Step 4

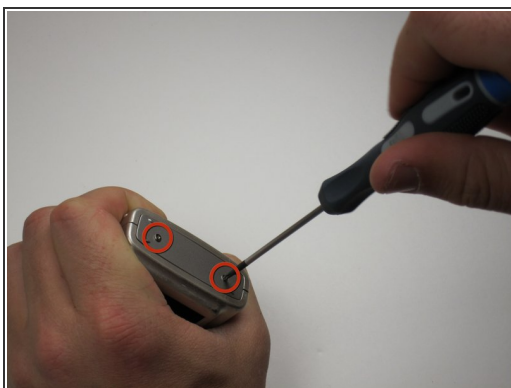

- Remove the two 2.2 mm screws from the left side of the camera.
- Lift the plate from the camera.




## Step 5

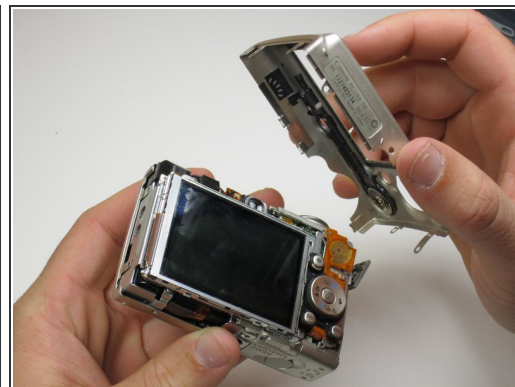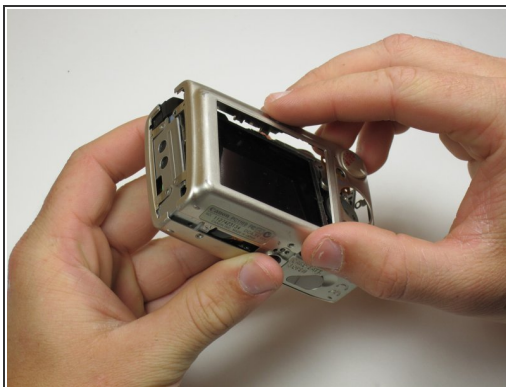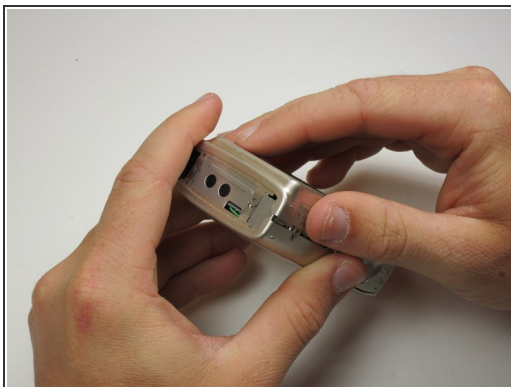

- Gently lift the rear of the case to remove it from the camera.

## Step 6

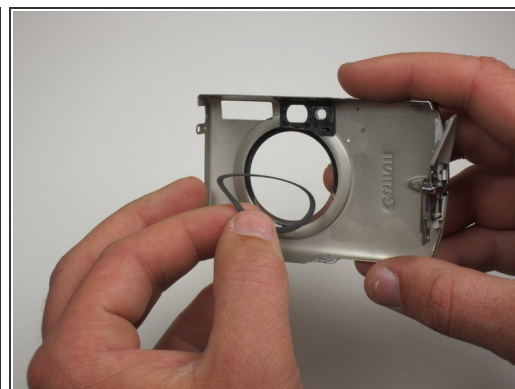

- Remove the front of the camera body.
- ⓘ Be sure to keep track of the rubber ring.

To reassemble your device, follow these instructions in reverse order.