




Black and Decker JS660 Base Replacement

In the unfortunate case of where your black and...

Written By: Andrew Khouri

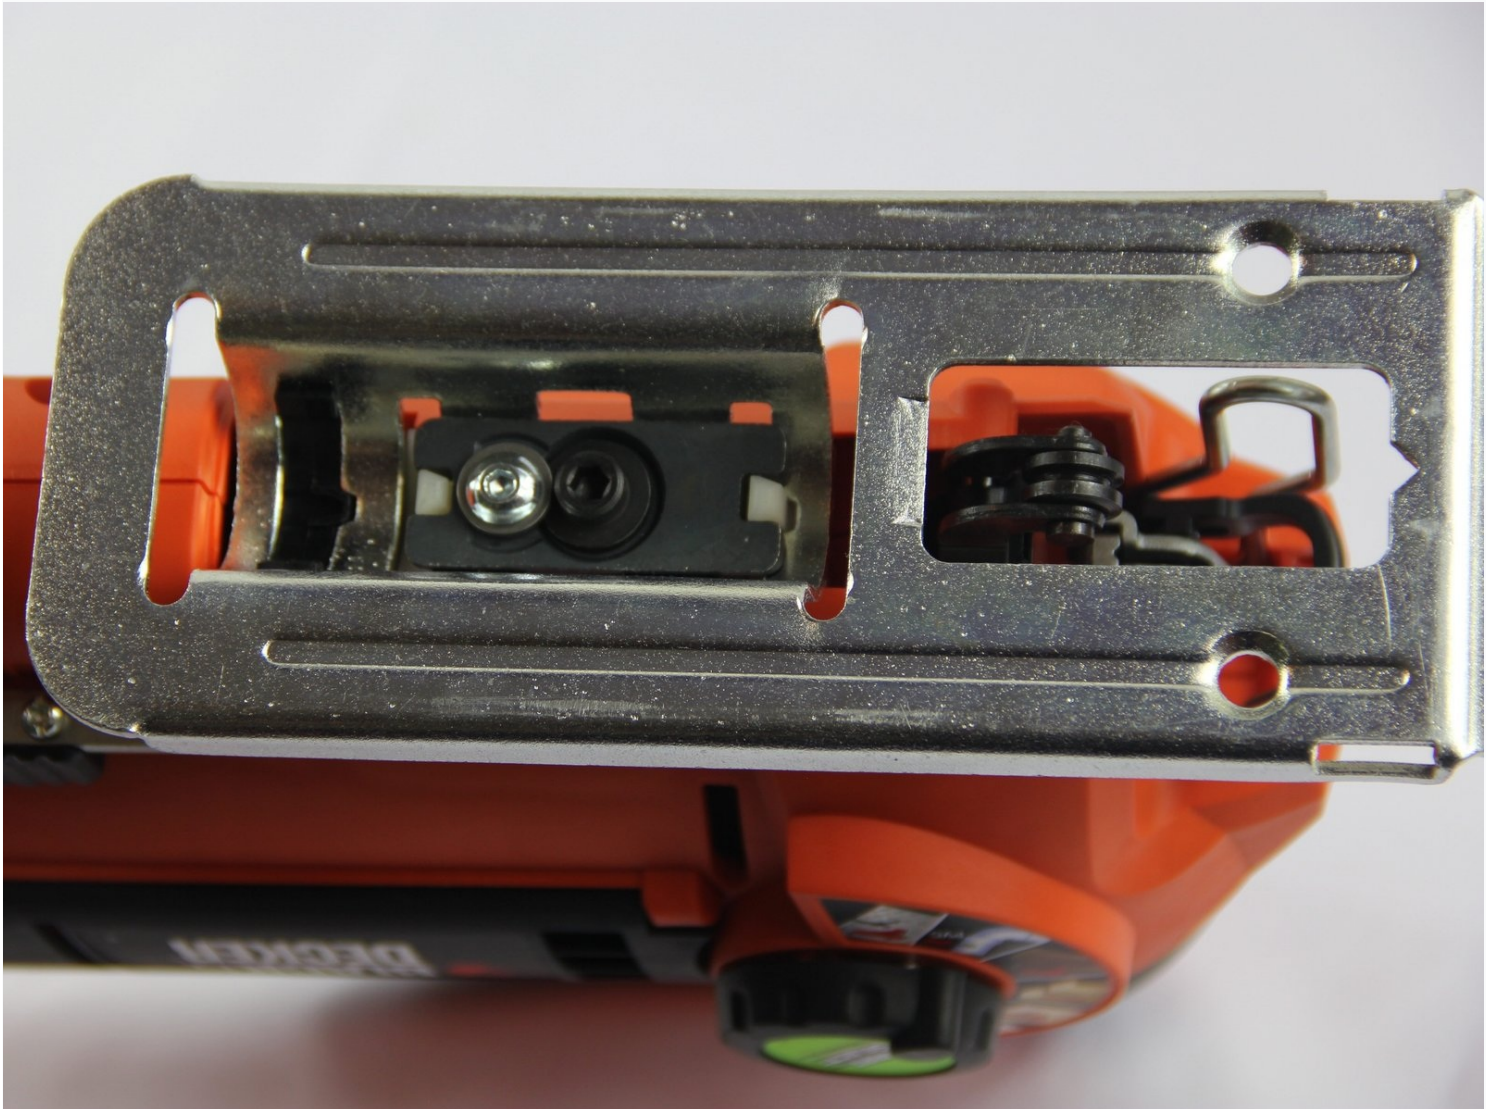

INTRODUCTION

In the unfortunate case of where your black and decker jigsaw base is broken this guide is here to show you how to replace the base. This will require you to remove the existing plate and replace it. Following the guides will show you how to replace the base without damaging any other parts of the jigsaw.

🔧 TOOLS:

Screwdriver (1)

⚙️ PARTS:


Base of Black and Decker Jigsaw (1)

Step 1 — Base





- Unscrew the eight screws to open up the jigsaw.

Step 2

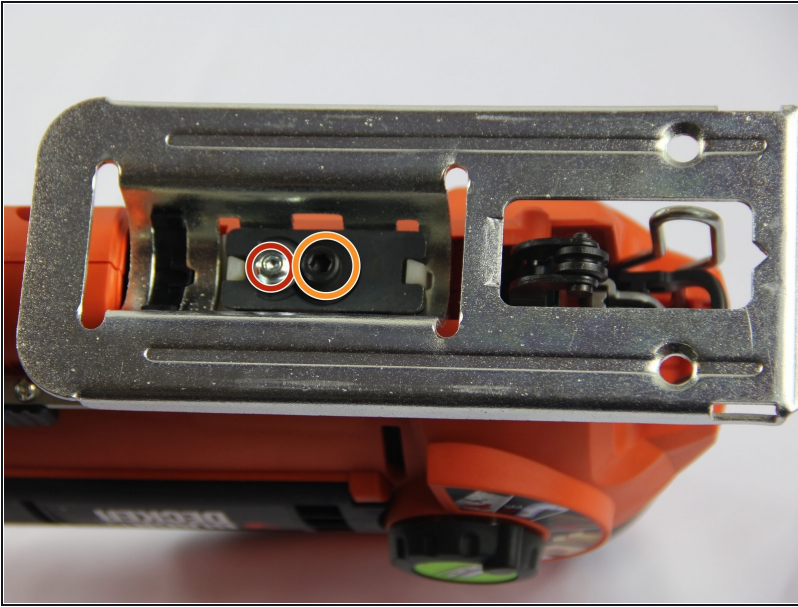

- Use a screwdriver to remove the first screws securing the base to the jigsaw.
- Remove the second screw.
- Remove the base of the jigsaw.

Step 3

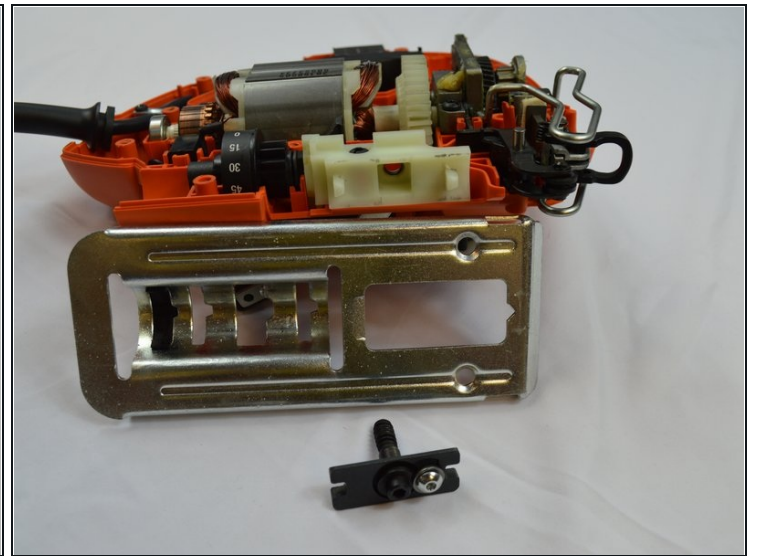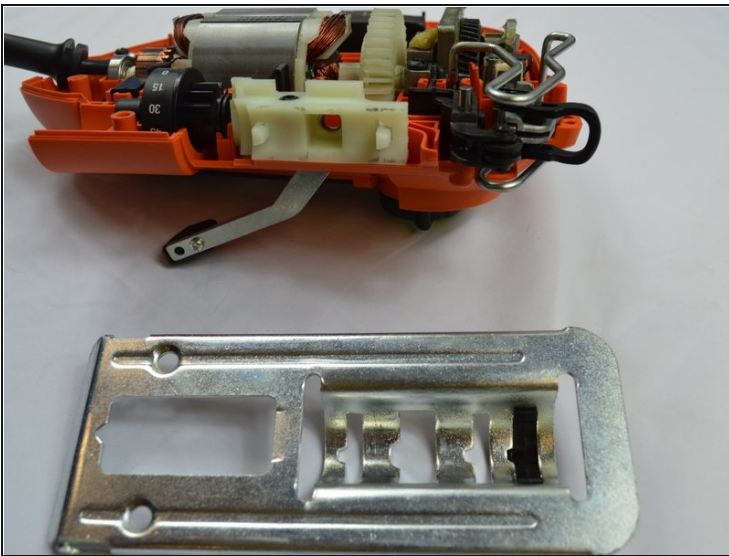

- With the old jigsaw base off, replace it with the new base by following the steps in the reverse order.
- ① Assemble the base on a steady surface.

To reassemble your device, follow these instructions in reverse order.

