




Black and Decker JS660 Blade Holder Replacement

The jigsaw blade may become loose or is not...

Written By: Andrew Khouri

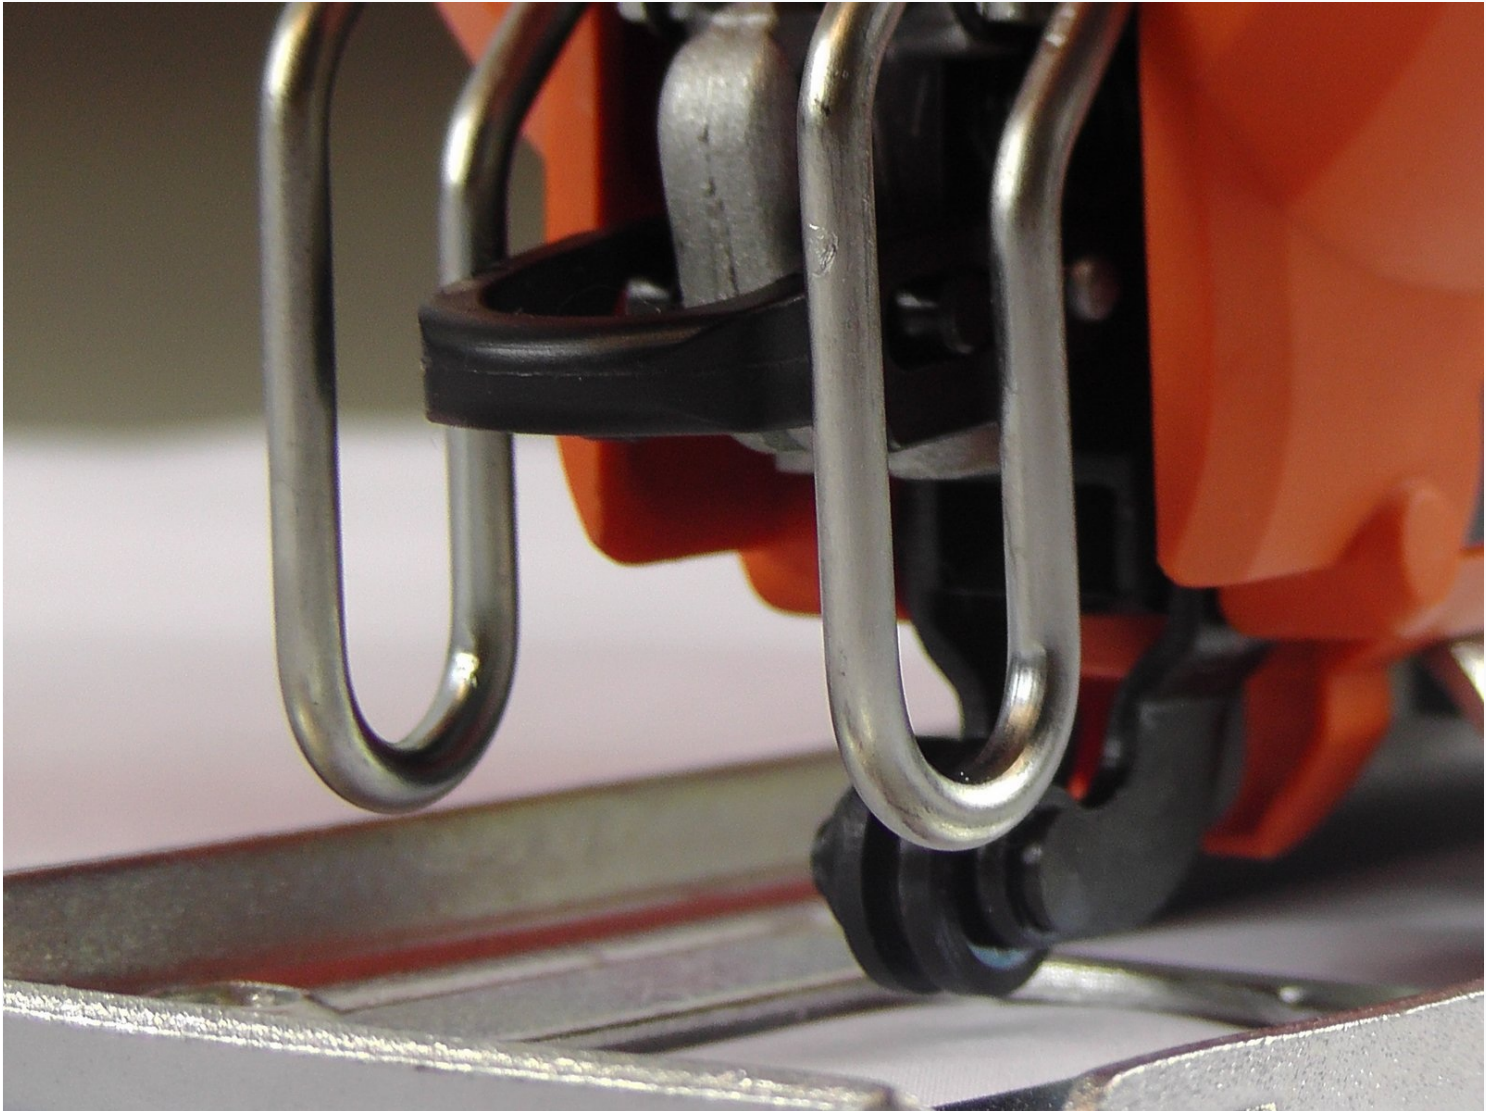

INTRODUCTION

The jigsaw blade may become loose or is not fastening correctly when using the blade. This guide will identify the problem and show the user how to fix and interchange the holder.

TOOLS:

Screwdriver (1)

PARTS:


JS660 Blade Holder (1)

Step 1 — Base





- Unscrew the eight screws to open up the jigsaw.

Step 2

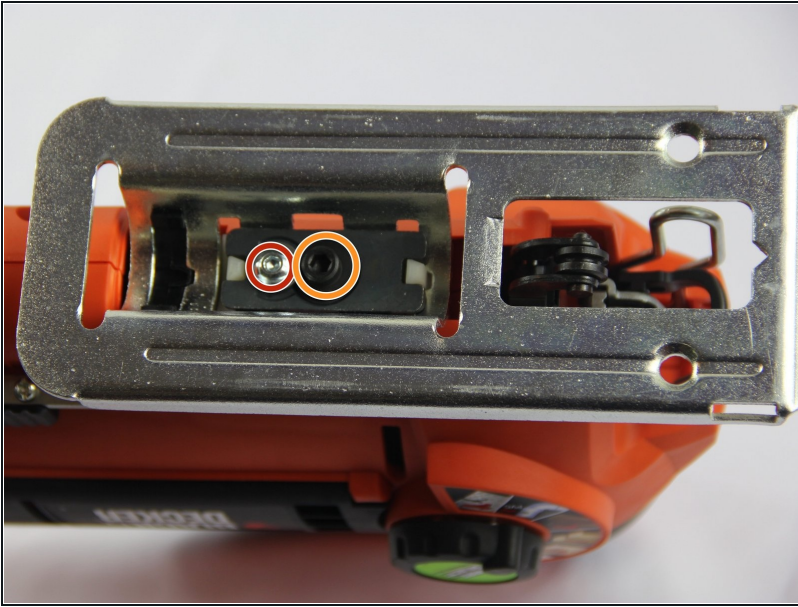


- Use a screwdriver to remove the first screws securing the base to the jigsaw.
- Remove the second screw.
- Remove the base of the jigsaw.

Step 3

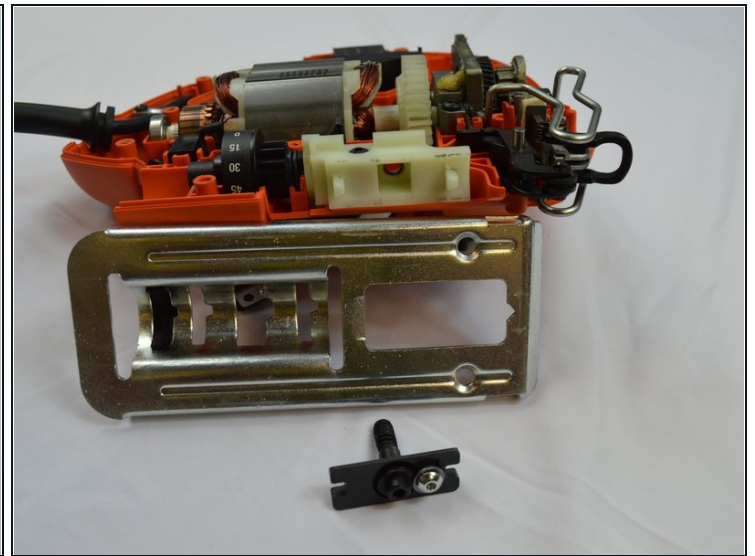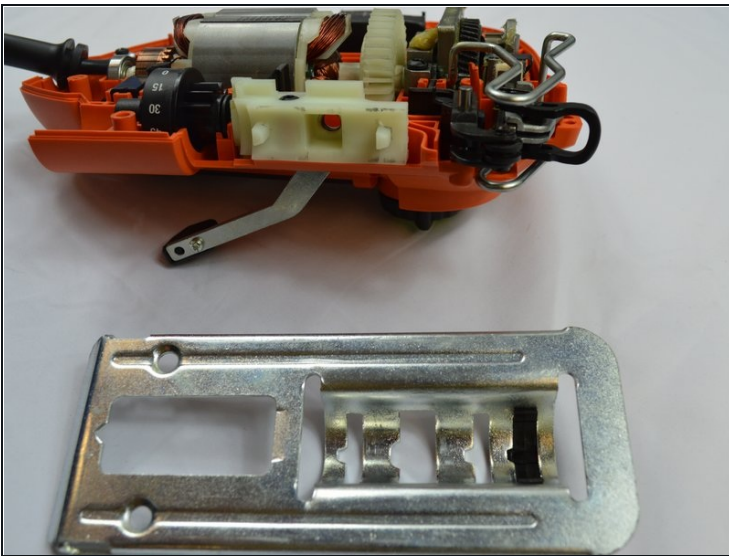

- With the old jigsaw base off, replace it with the new base by following the steps in the reverse order.
- ① Assemble the base on a steady surface.

Step 4 — Blade Holder

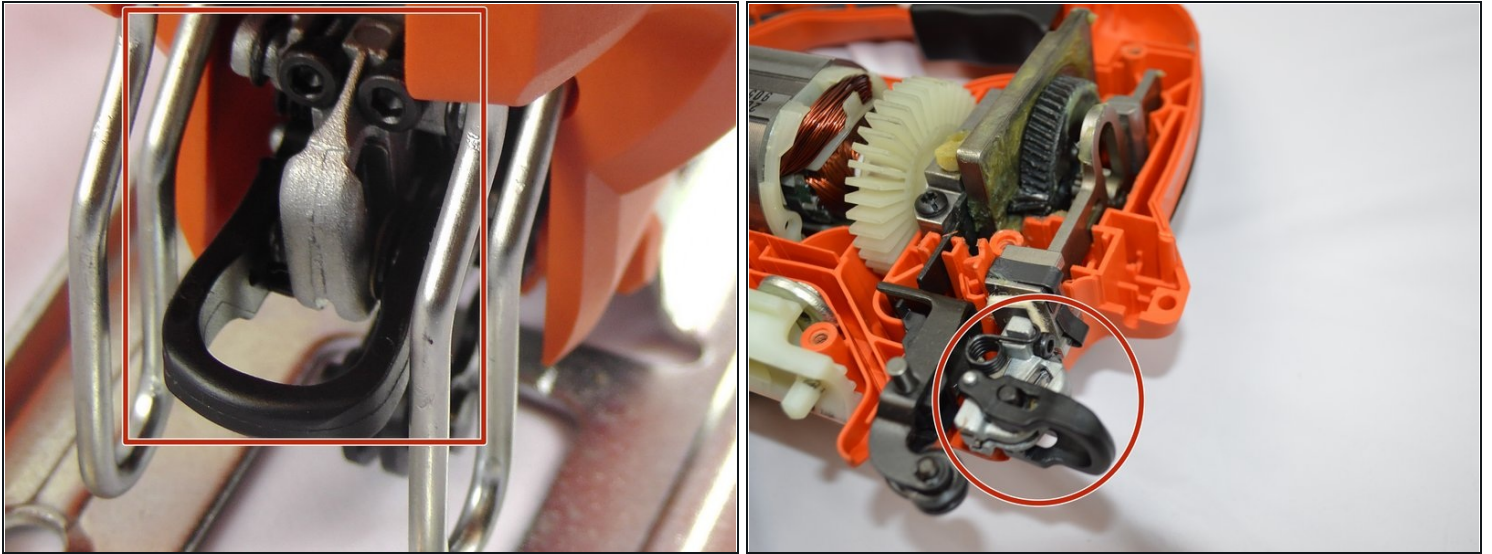

- You will need to take out the entire blade clamp shown.

⚠ The plastic part is fragile, easy to break

Step 5



- Showing the entire blade clamp removed from the device.

ⓘ Apply some oil grease if dry/needed

To reassemble your device, follow these instructions in reverse order.