



Nikon D610 Battery Replacement

Removal of the battery from your Nikon D610.

Written By: Daniel Eagan



INTRODUCTION

This guide will show you how to properly remove your camera's battery.

-
-  **PARTS:**
- [Nikon Lithium Ion Battery Pack -- 7.0V 1900mAh 14Wh](#) (1)
-

Step 1 — Battery



- First, power off the device.

Step 2



- Set the camera so that it is sitting on its side.
- Open the battery compartment door by sliding the release button towards the lens.
- This will cause the door to "pop" open slightly

Step 3



- Now lift open the battery compartment door.
- Push the yellow tab lock towards the center to release the battery.
- i This will cause the battery to jump up as there is a spring at the bottom.
- Pull straight out, slowly on the battery.
- ✦ Make sure you pay attention to which way the battery goes .

To reassemble your device, follow these instructions in reverse order.