



Verizon Ellipsis Jetpack MHS800L Screen Replacement

What you can expect from this guide is a step...

Written By: Richard J Porras



INTRODUCTION


What you can expect from this guide is a step by step process on how to remove the LCD display screen on a Verizon Ellipsis Jetpack MHS800L.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Plastic Case

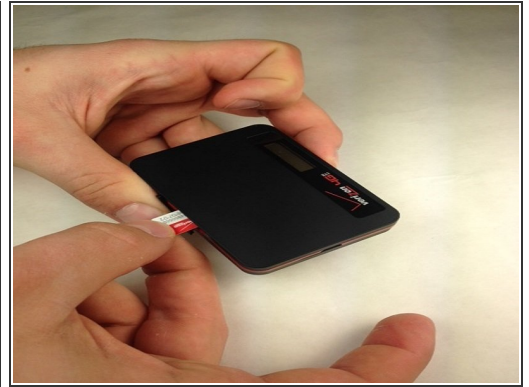

- Remove the SIM card, that is located on top of the Jetpack.

Step 2



- With the device on its back and the label facing you, remove the rubber screw cover on the top left corner of the device.
- Under the rubber circle, remove the 1.25 mm screw using a [Phillips #00 Screwdriver](#).
- ⓘ You may need to peel back a piece of double sided tape covering the screw hole.

Step 3




- Remove three 1.25 mm screws.

Step 4



- Use a [plastic pick](#) at the seams and pry open the case.

Step 5

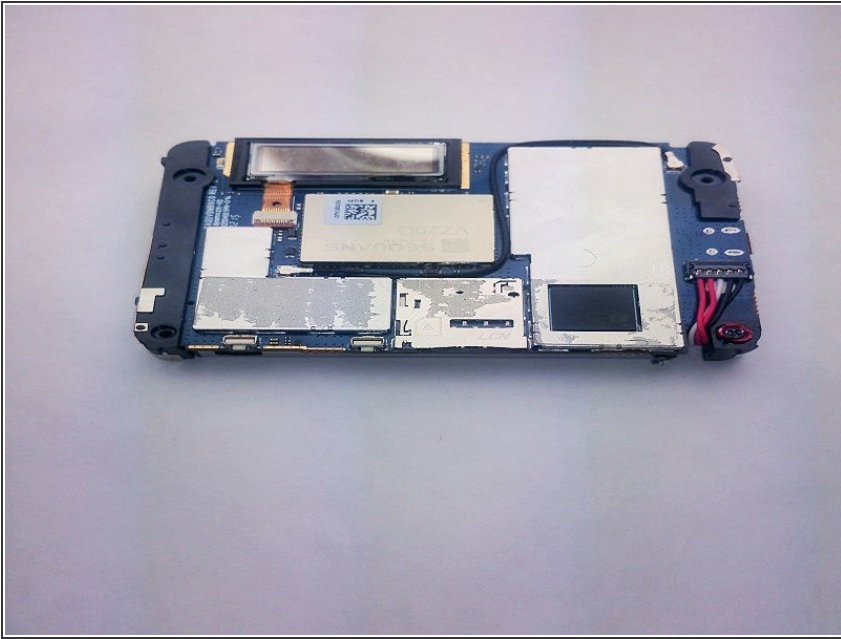

- Once the cover is off, this is what your device will look like.


Step 6 — Battery



- Once you have the case off of your device gently pull your battery away from the device.


⚠ Do not attempt to completely remove the battery, as it is still attached to the motherboard by wires.

Step 7

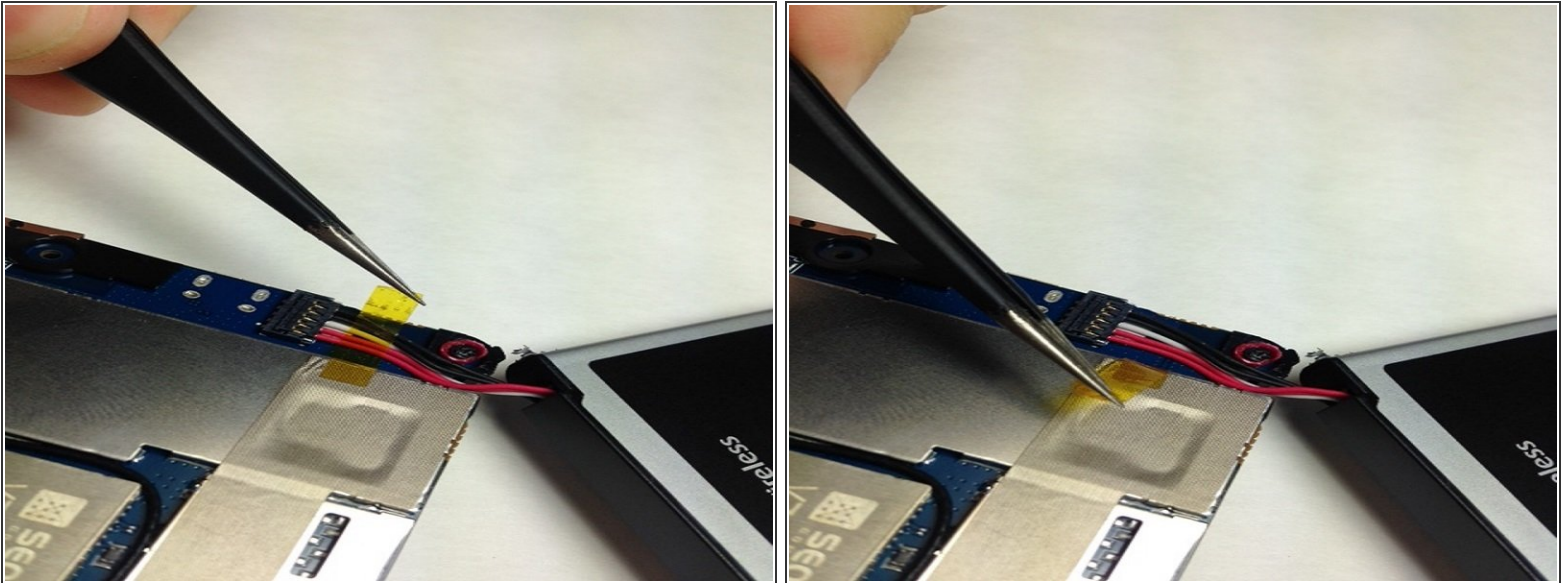

- With a pair of [Tweezers](#) remove the yellow tape covering the battery wires.


Step 8

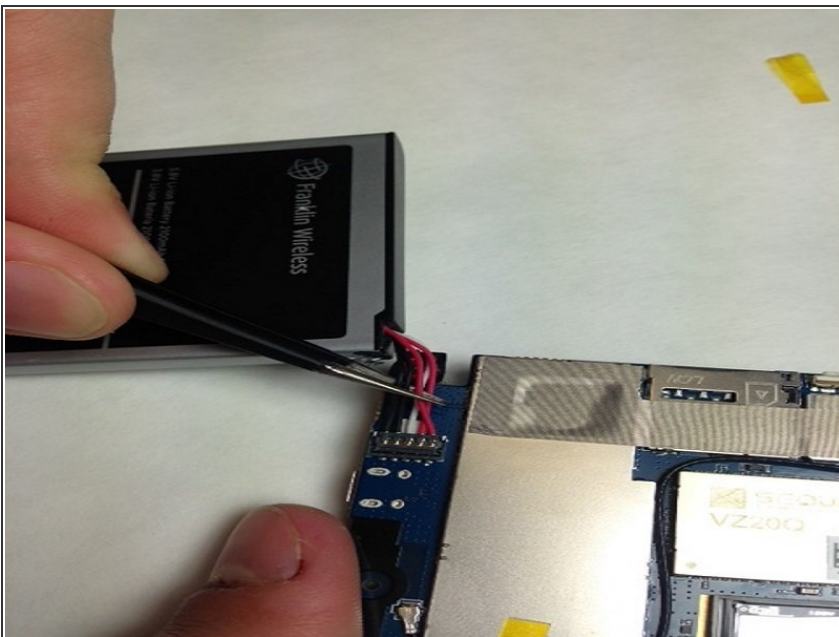

- After removing the tape you may use the [Tweezers](#) to remove the wiring harness from the circuit board.



⚠ Do not squeeze the wires too hard you may damage them and cause a short.

Step 9

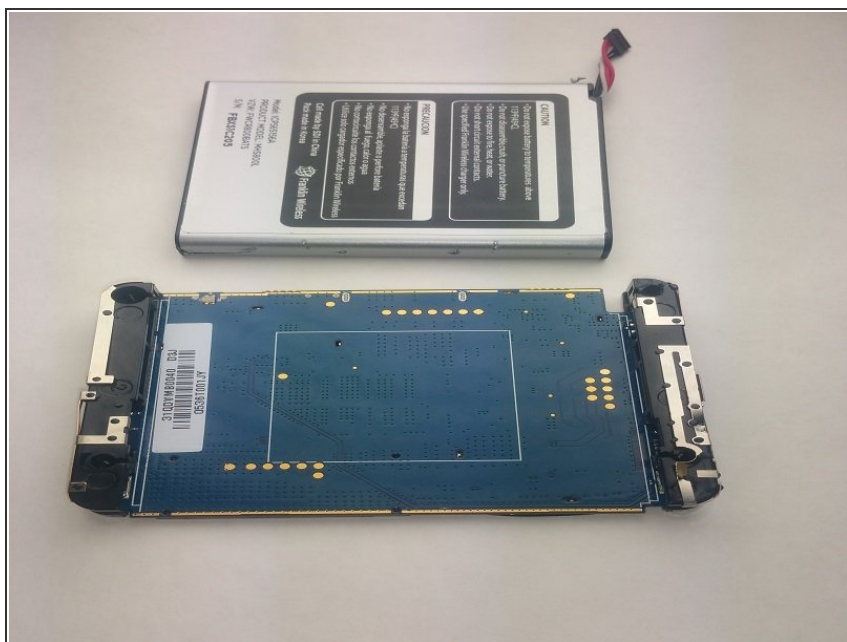



- You may now replace the battery in your Verizon Ellipsis Jetpack MHS800L.

Step 10 — Screen

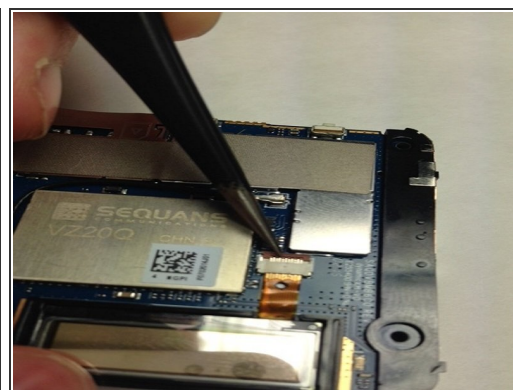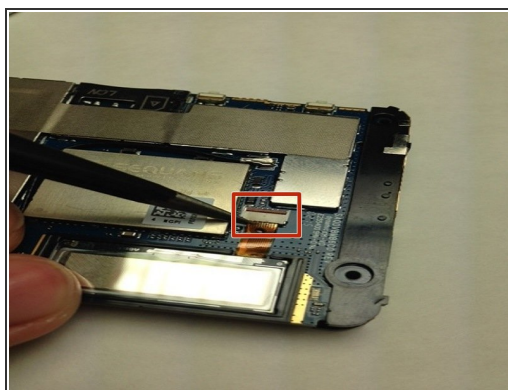

- Locate the LCD screen cable and unlatch the harness connection form the circuit board.


Step 11

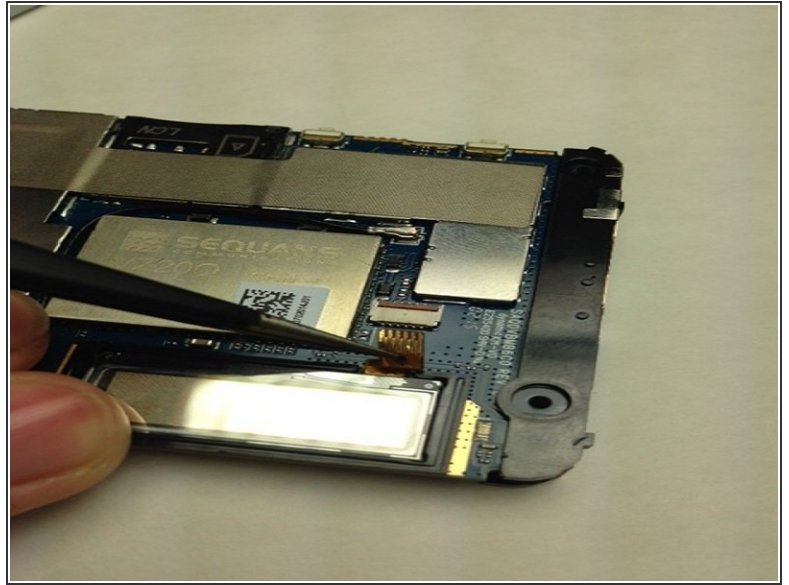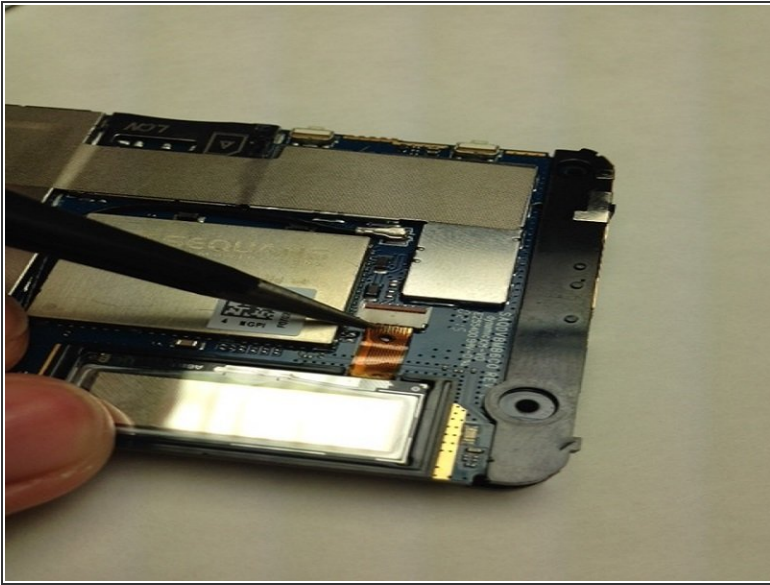

- Using the [Tweezers](#) gently coax the display data cable out of circuit board connector.

⚠ Do not squeeze the display data cable too hard you may damage it and cause a short.

Step 12

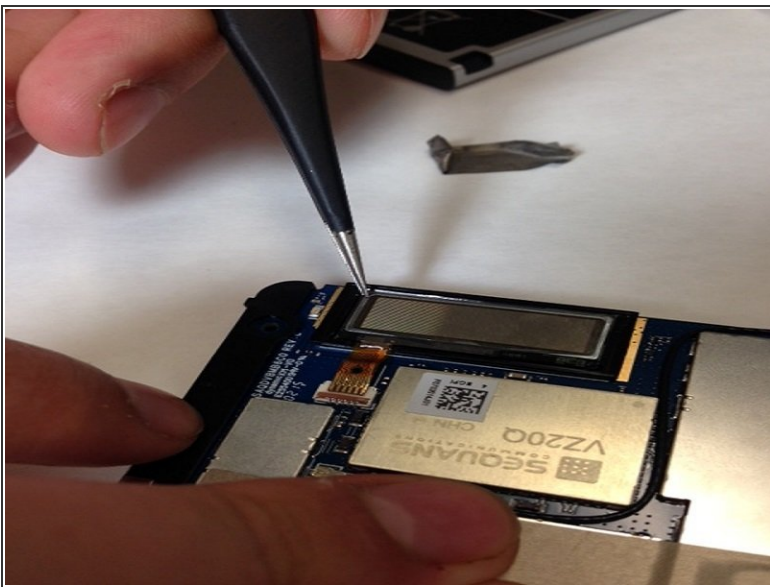

- Gently insert the [Tweezers](#) underneath the LCD screen and lift the LCD screen off of the circuit board.

To reassemble your device, follow these instructions in reverse order.