



Canon PowerShot N Teardown

Half Teardown of a cannon powershot N

Written By: Jack Graver



INTRODUCTION

We are going to teach you how to take apart and put back together a Cannon Powershot N.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Canon PowerShot N Teardown



- Locate battery housing cover.

Step 2



- Place finger on the textured portion of battery housing cover and slide cover in the direction indicated.

Step 3




- Find beige tab and push it away from the battery.

Step 4



- Remove battery from battery slot with fingers.

Step 5

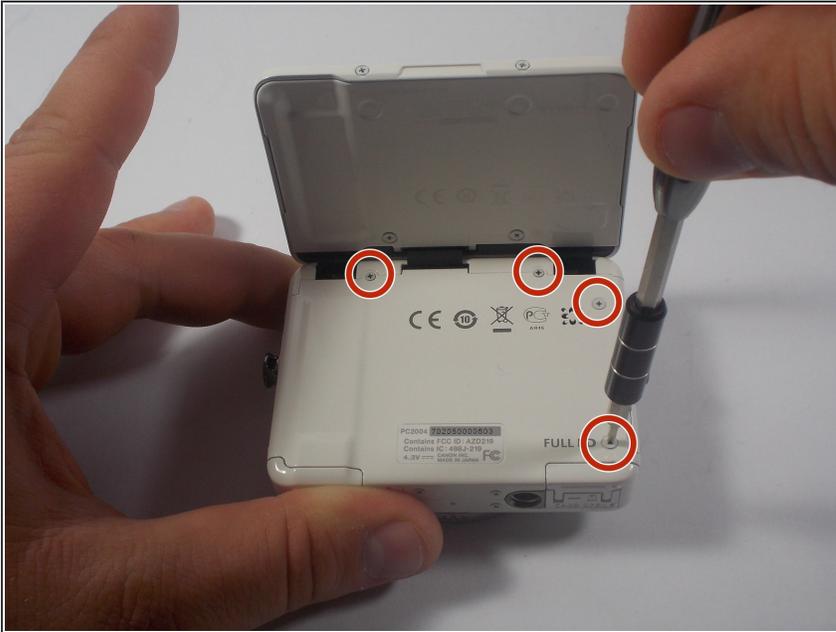

- Using a PH000 size screwdriver, unscrew four screws beneath screen.

Step 6




- Remove 2 screws on the bottom of the camera.

Step 7



- Remove 2 screws from the side of the camera with the on and off buttons.

Step 8

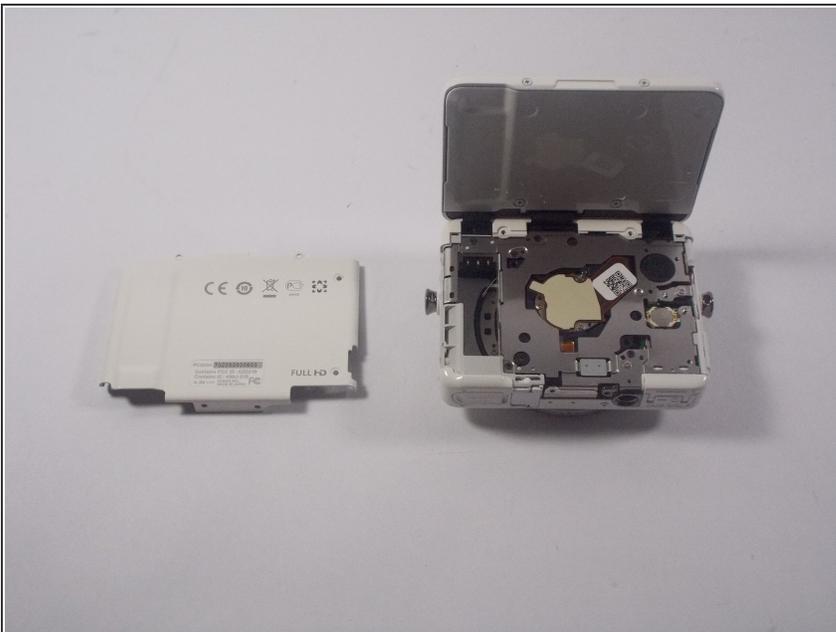

- Remove the back plate.

Step 9



- Locate 2 screws on “on/off” side of the camera and unscrew them.

Step 10




- Locate 2 screws on the other side of the camera and remove them.

Step 11




- Remove one screw from the bottom of the camera.

Step 12

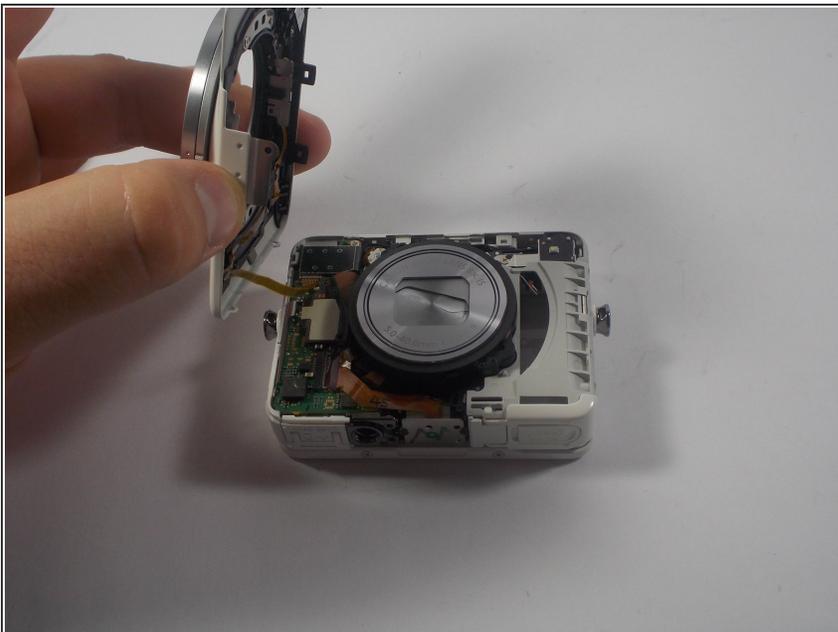



- Remove front plate from motherboard so that one ribbon cable is exposed.

Step 13

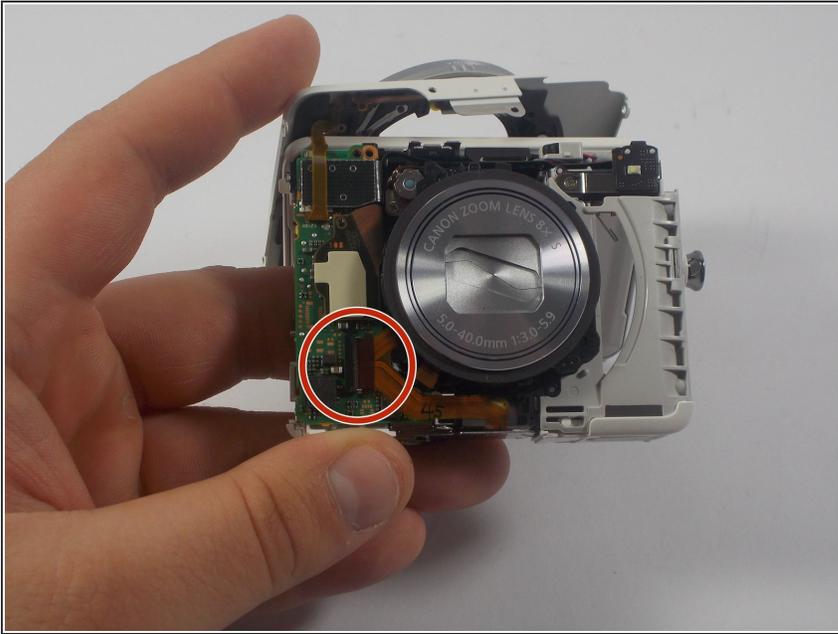

- Locate the second ribbon cable.

Step 14

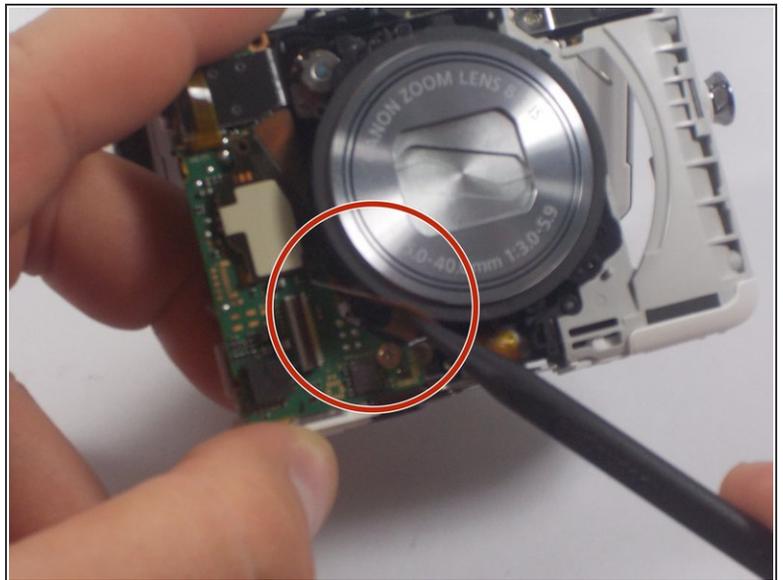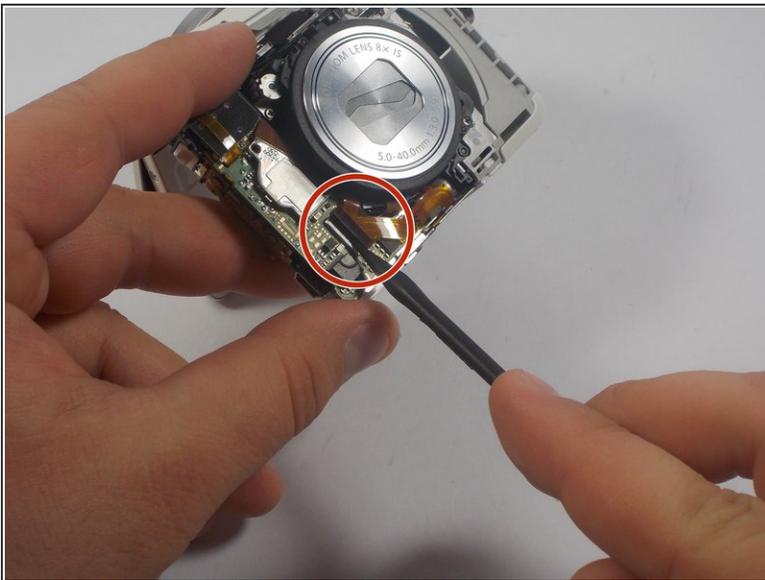



- Using plastic spudger, push tab to release the ribbon cable.

Step 15




- Locate screw under released ribbon cable and remove it.

Step 16

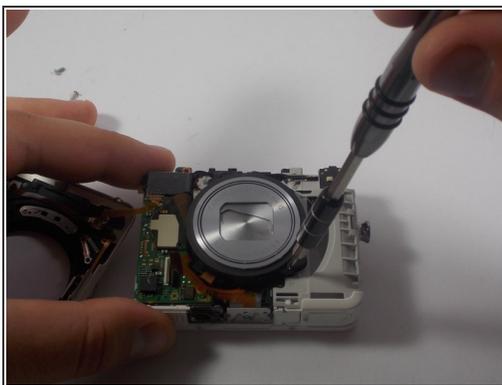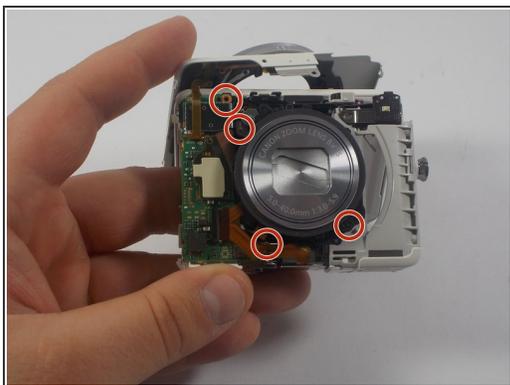




- With the camera lens facing you, remove 4 screws around the lens.

Step 17

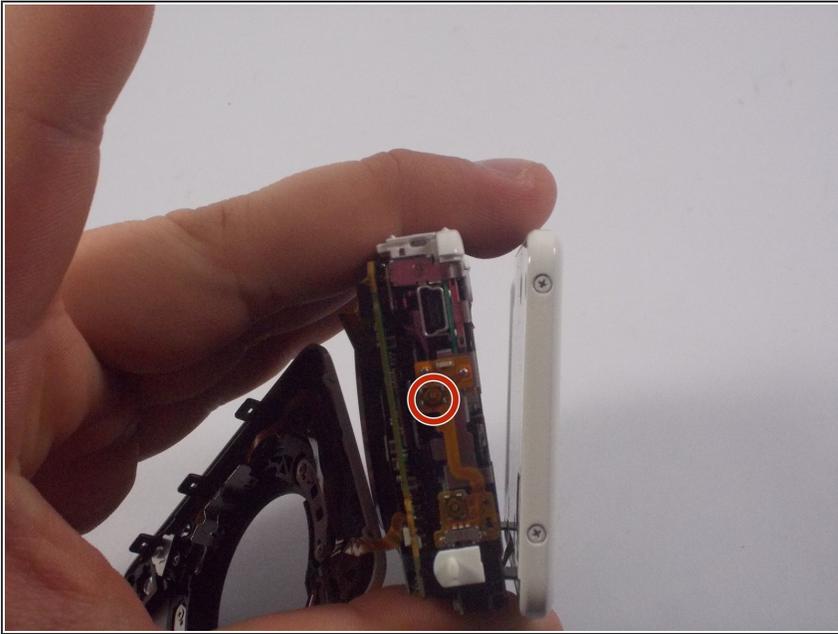

- Flip over and remove 1 screw from side with playback/phone options .

Step 18

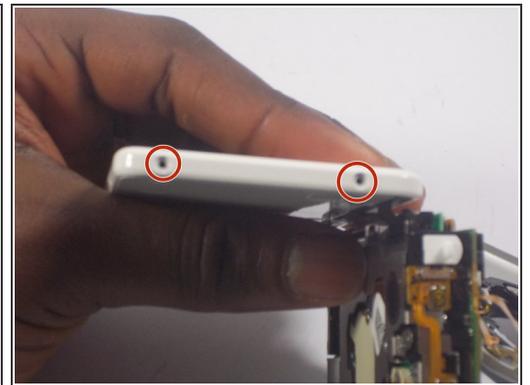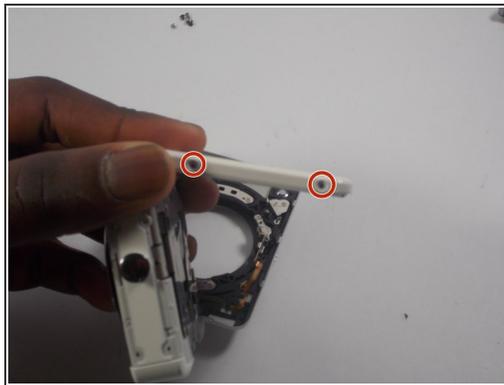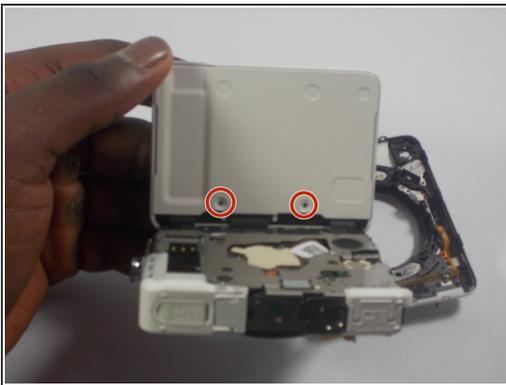


- Unscrew 2 screws from top, bottom, and both sides of screen.

Step 19





- Pull off white cap which edges the screen.

Step 20

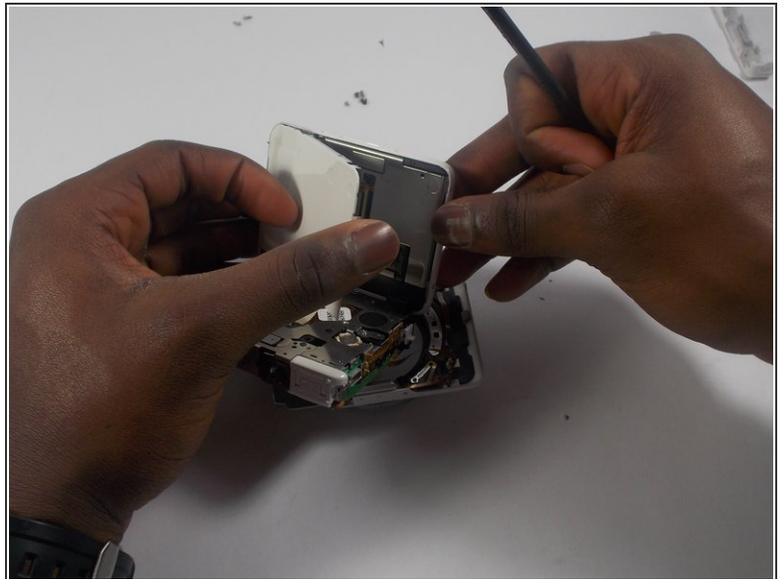

- Remove white metal plate behind screen (tip: try not to bend).

Step 21

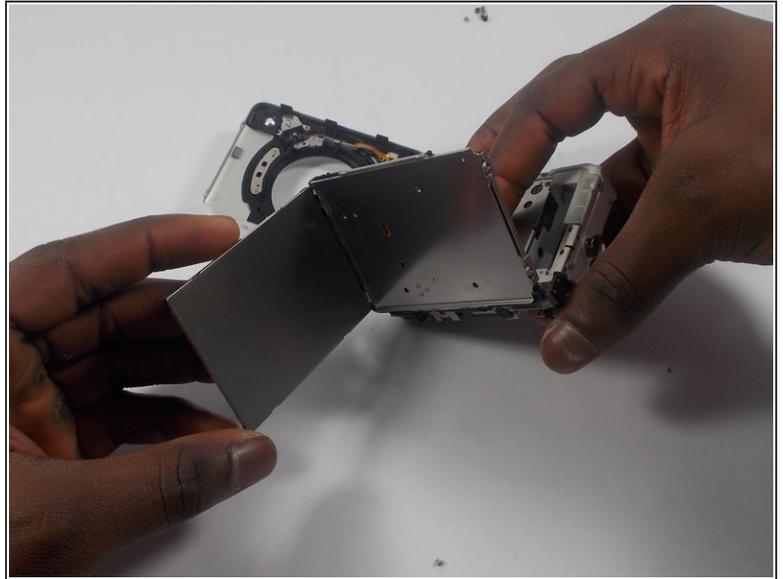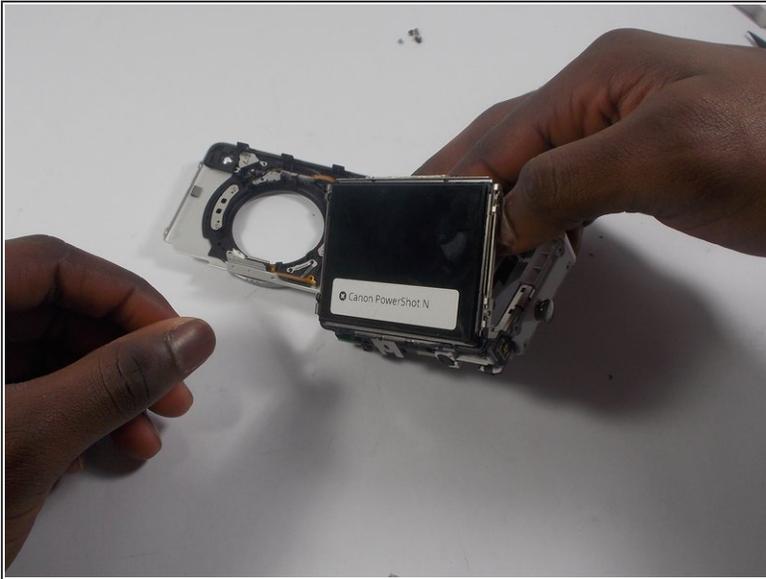

- Push out LCD screen.