



Samsung NX1 Back Cover Replacement

Replace the back cover of the Samsung NX1.

Written By: Hannah Patrick



INTRODUCTION

The back cover holds the screen in place and protects the internal components of the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Viewfinder Focus Dial



- Push the rubber viewfinder grip upward.

Step 2




- Use the Phillips #00 screwdriver to remove one 6.4 mm screw in the center of the dial.
- Remove the dial by lifting upward with your fingers.

Step 3 — Back Cover



- Use the Phillips #00 screwdriver to remove the four 5.5 mm screws surrounding the viewfinder.
- Use your fingers to lift the plastic viewfinder cover upward.

Step 4

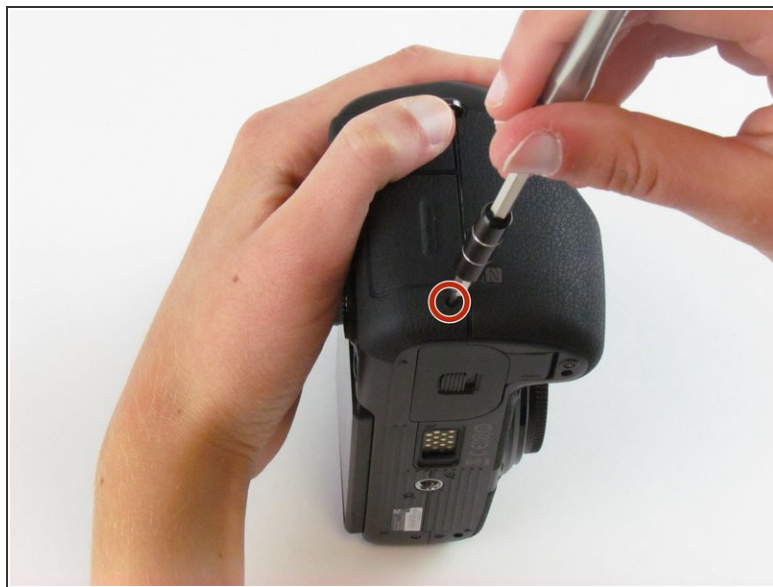

- Use the Phillips #00 screwdriver to remove the two 5.5 mm screws from the right side of the camera above the SD card port.

Step 5



- Use the Phillips #00 screwdriver to remove one 5.5 mm screw on the left, above the HDMI port.

Step 6



- Use the Phillips #00 screwdriver to remove the five 5.5 mm screws from the bottom, near the battery compartment.
- Use the Phillips #00 screwdriver to remove one 3.8 mm screw from the bottom of the hand grip, below the battery compartment.


Step 7



- Use a plastic opening tool to separate the back cover from the front cover.

i Pry the back cover in this order: bottom, right side, left side.


Step 8

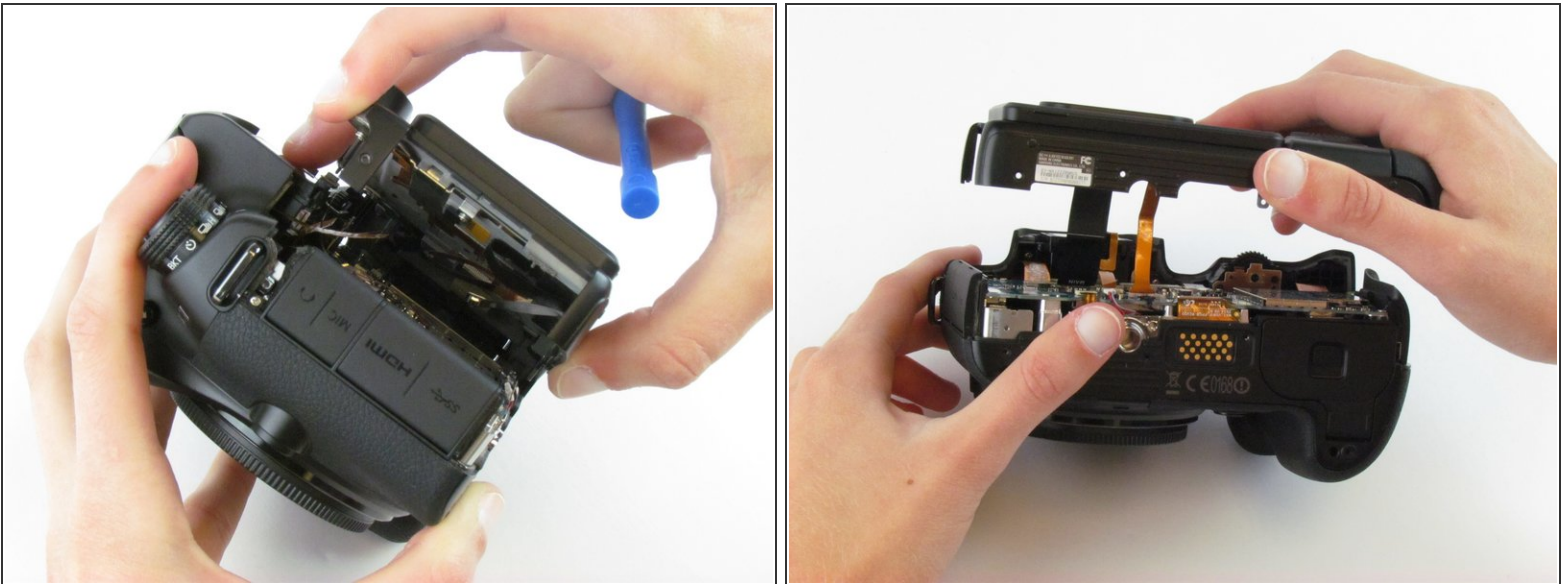

- Use your fingers to pull the back cover away from the front cover.

i Do not completely separate the back cover from the front cover as two cables hold these components together.

Step 9

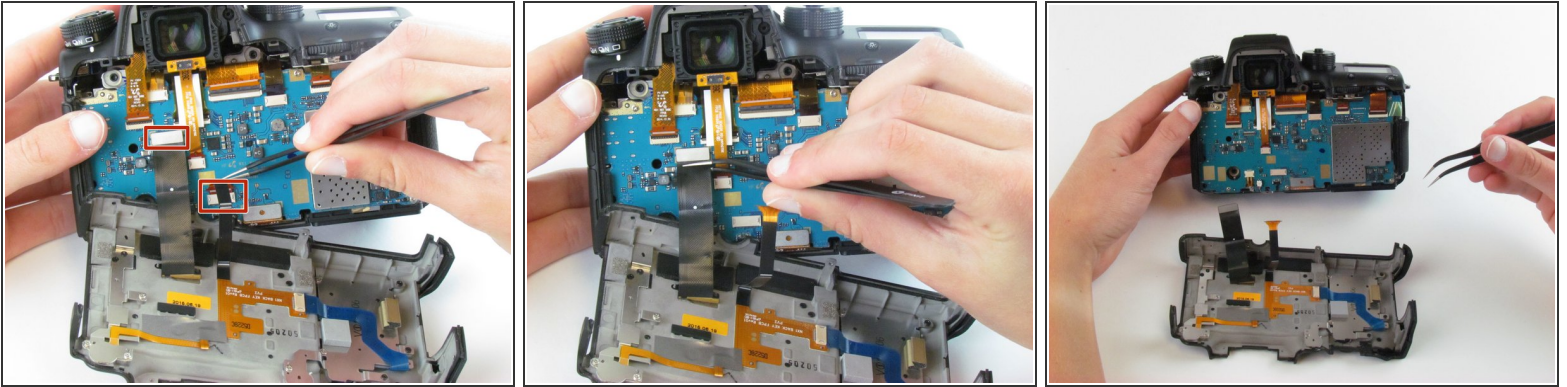

- Use tweezers to pull the two ribbon cables horizontally out of their clips.

To reassemble your device, follow these instructions in reverse order.