




# Bell and Howell DNV16HDZ Internal Screen Replacement

Replacing the internal screen from the camcorder.

Written By: Jerry Hadjah

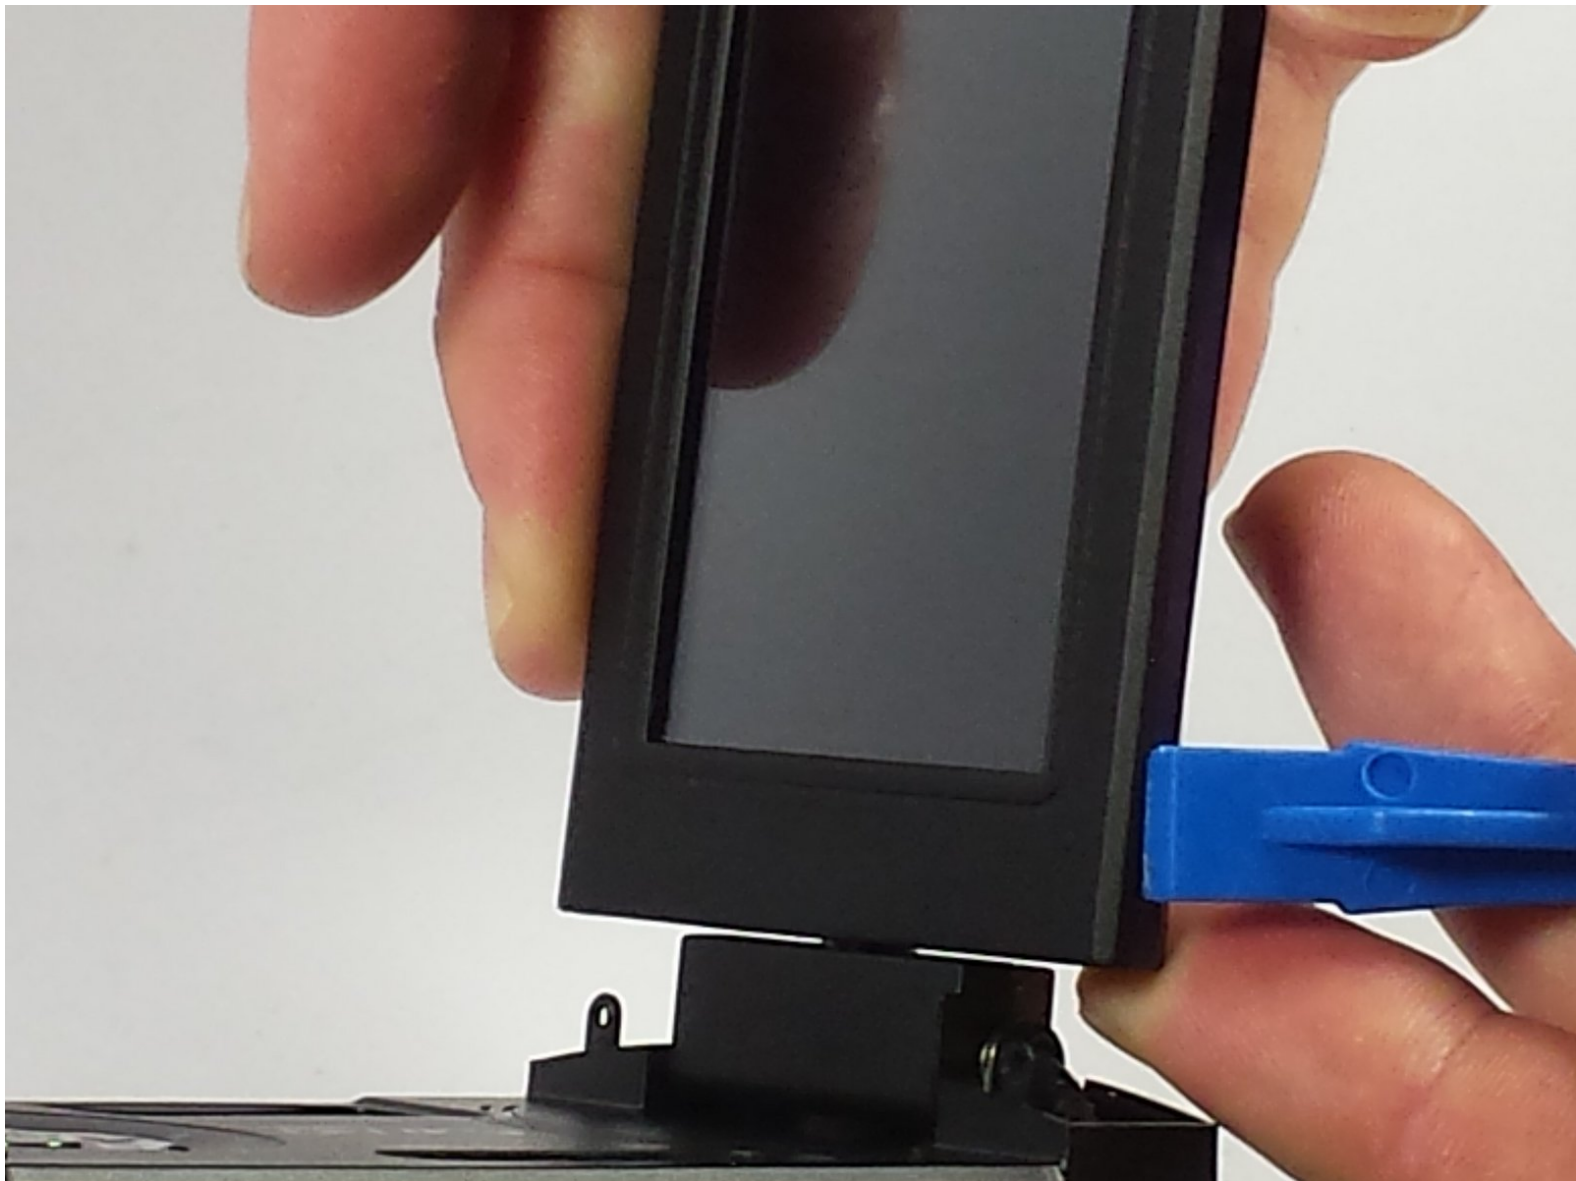



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Lens Assembly




- Remove the five 30mm Phillips #0 screws on the bottom of the camera.

## Step 2




- Use a plastic opening tool to disconnect the internal hinges that snaps the camera into place.
- ⚠ Using a plastic opening tool is important since a metal one will scratch or damage the thin plastic hinges that hold the camera together.

### Step 3

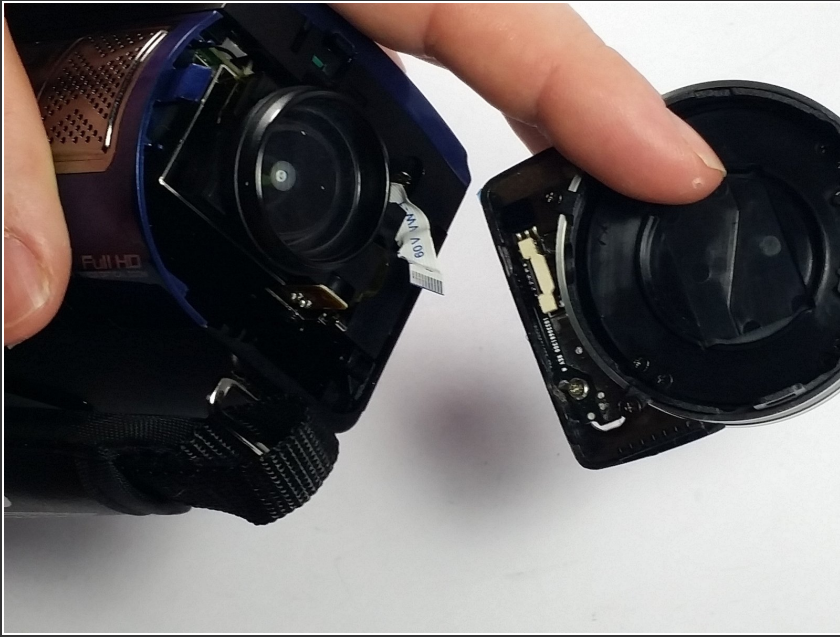

- It will still be connected by a plastic film. This can also be disconnected by pulling up the white part where it connects to the light circuit board.


### Step 4 — Internal Screen

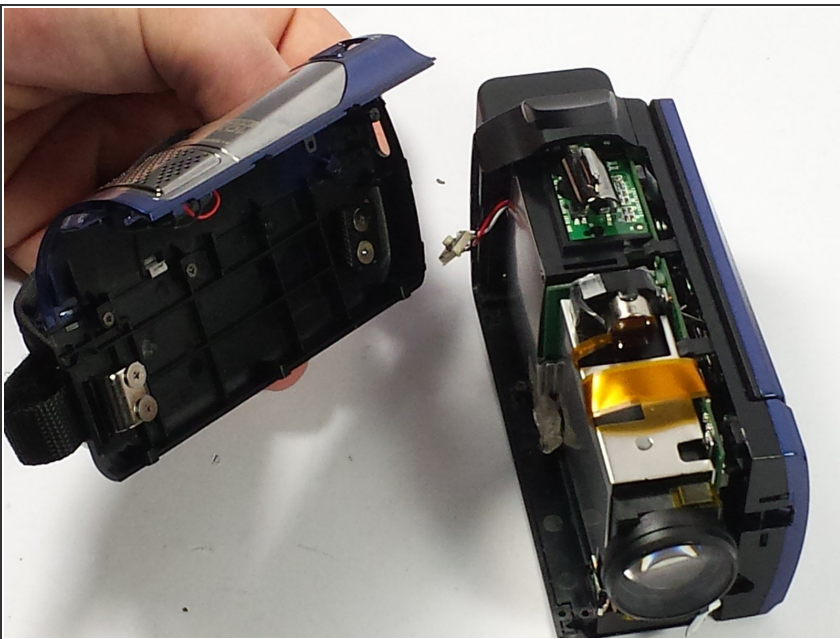

- Pull the side with the hand strap upwards to disconnect it from the camcorder.





## Step 5

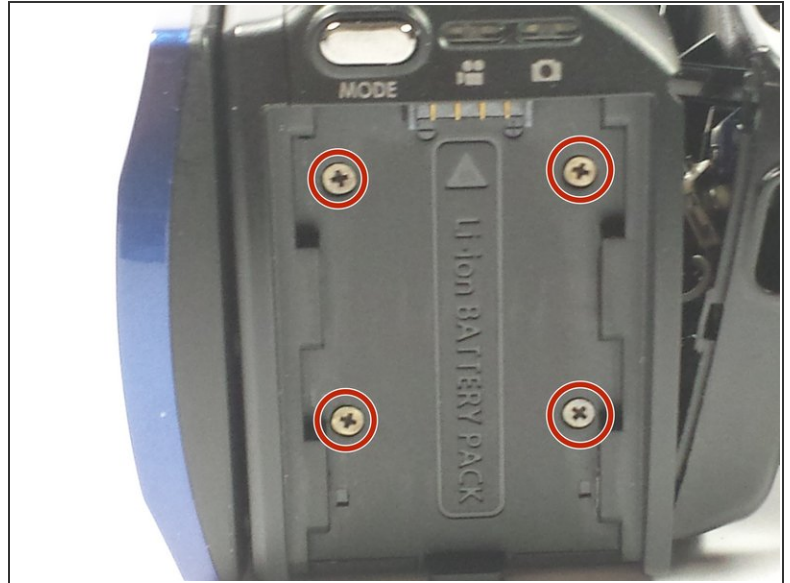


- Remove the battery.
- Remove the four 30 mm Phillips #0 screws on the back.

## Step 6

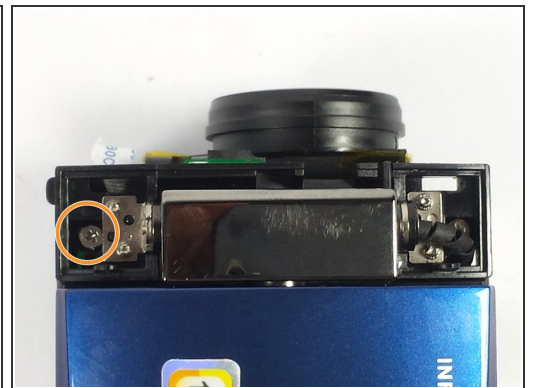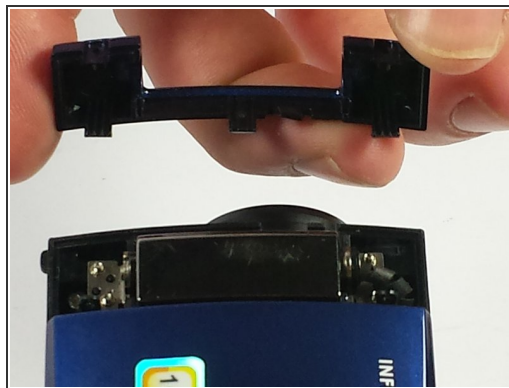


- On the hinge of the camcorder remove the two 30 mm Phillips #0 screws.
- Remove blue piece holding it together.
- Remove the 50 mm Phillips #0 screw.

## Step 7

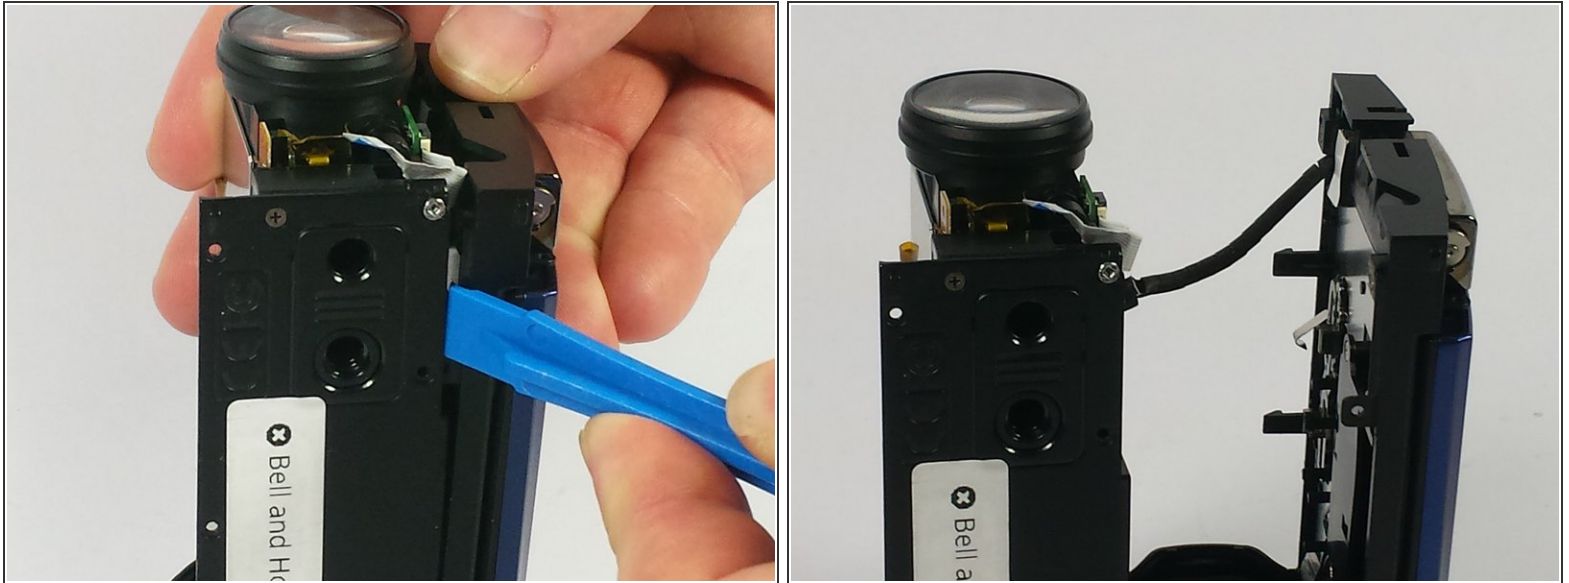

- Use the plastic opening tool and slowly pry open the side.
  - Now pull the part with camcorder out.
- ⚠ There is a wire connecting these two pieces using too much force will damage the camcorder.

## Step 8

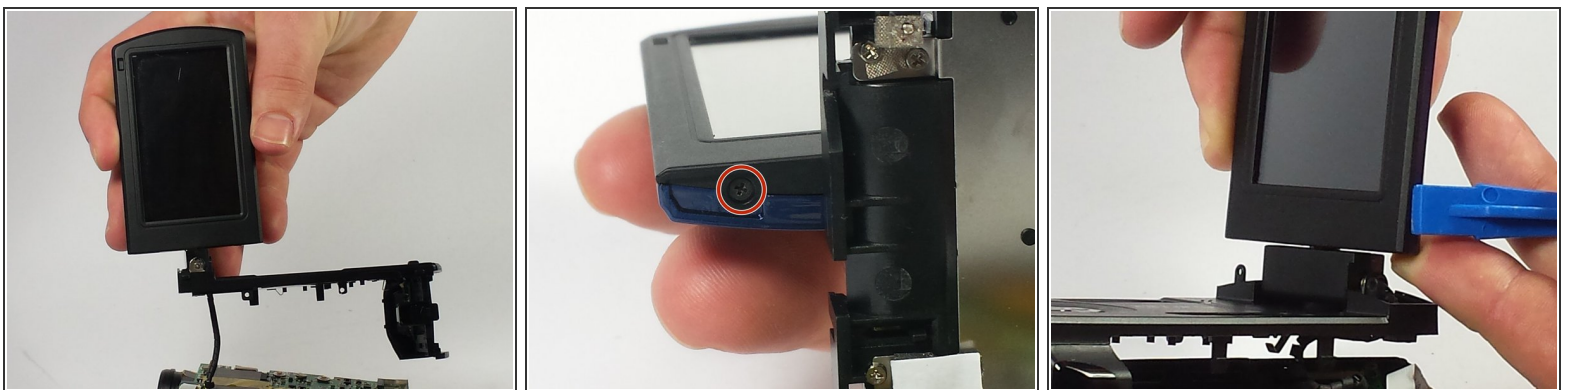

- Have the screen open and twist it 90 degrees unscrew the 40 mm screw.
- Repeat for the other side.
- Use the plastic opening tool to pry the outer part of the screen, now attach the new one.

To reassemble your device, follow these instructions in reverse order.