




# Bell and Howell DNV16HDZ Hand Strap Replacement

Written By: Jerry Hadjah

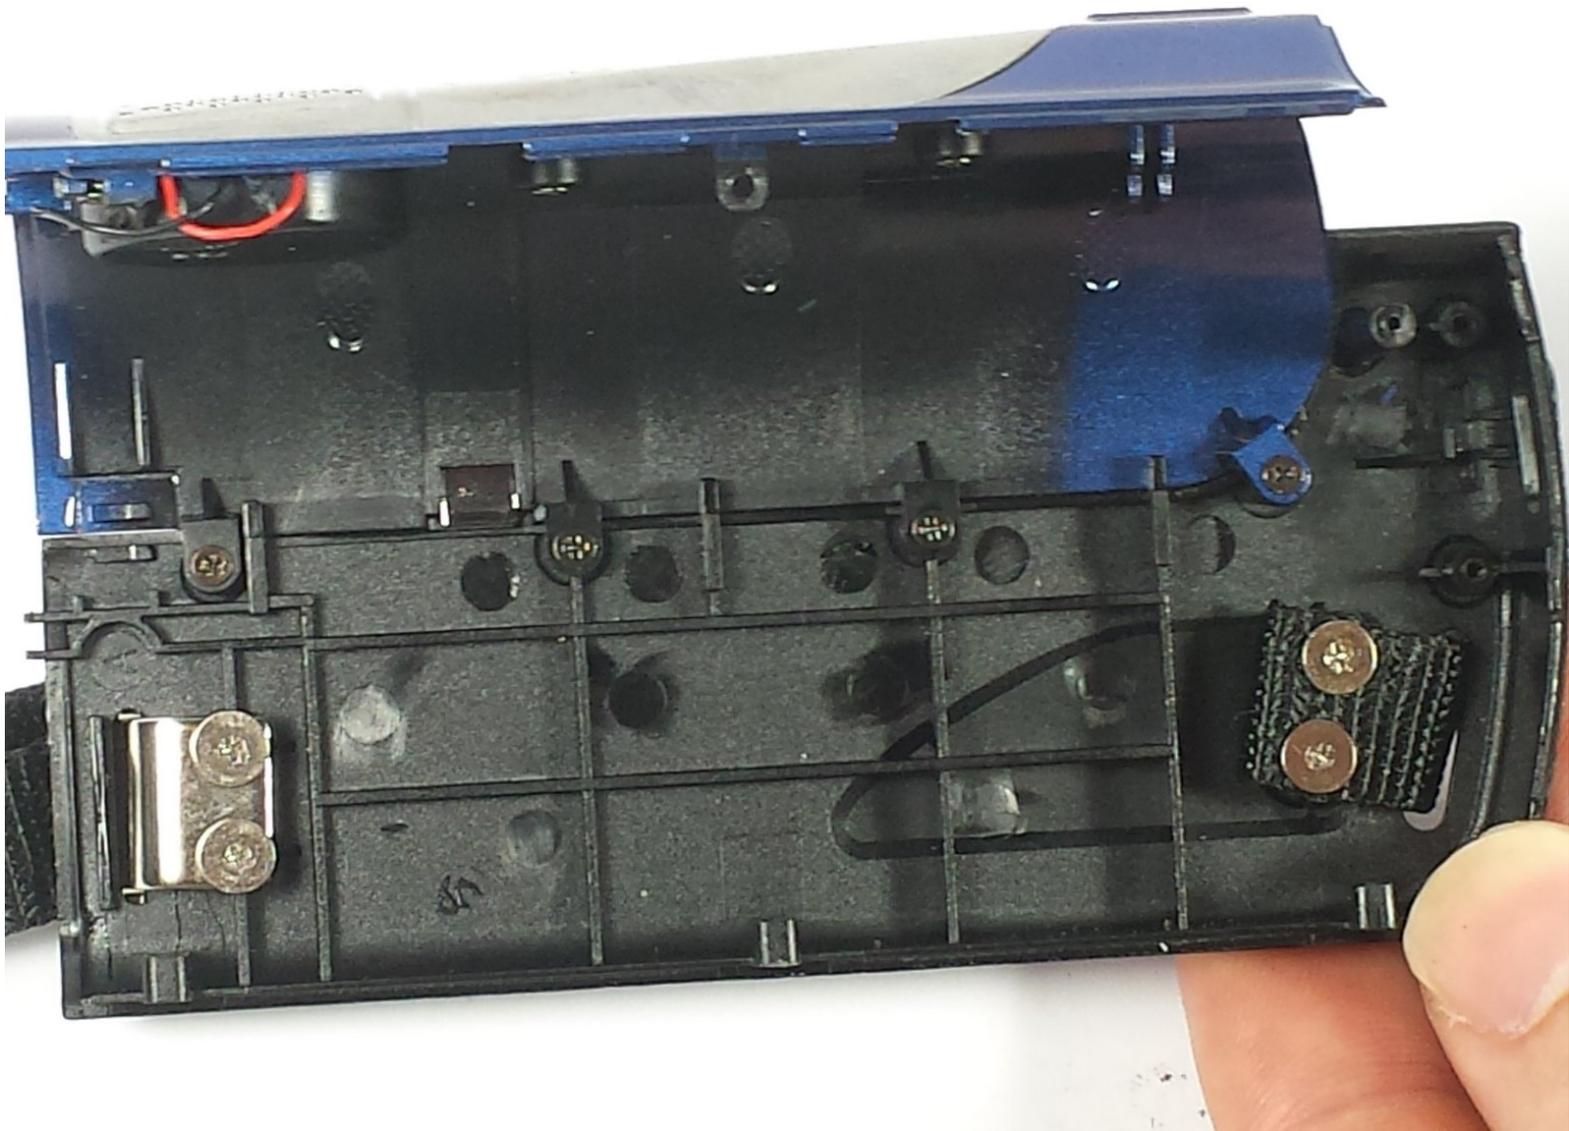

---

 **TOOLS:**

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Lens Assembly




- Remove the five 30mm Phillips #0 screws on the bottom of the camera.

## Step 2





- Use a plastic opening tool to disconnect the internal hinges that snaps the camera into place.
- ⚠ Using a plastic opening tool is important since a metal one will scratch or damage the thin plastic hinges that hold the camera together.

### Step 3

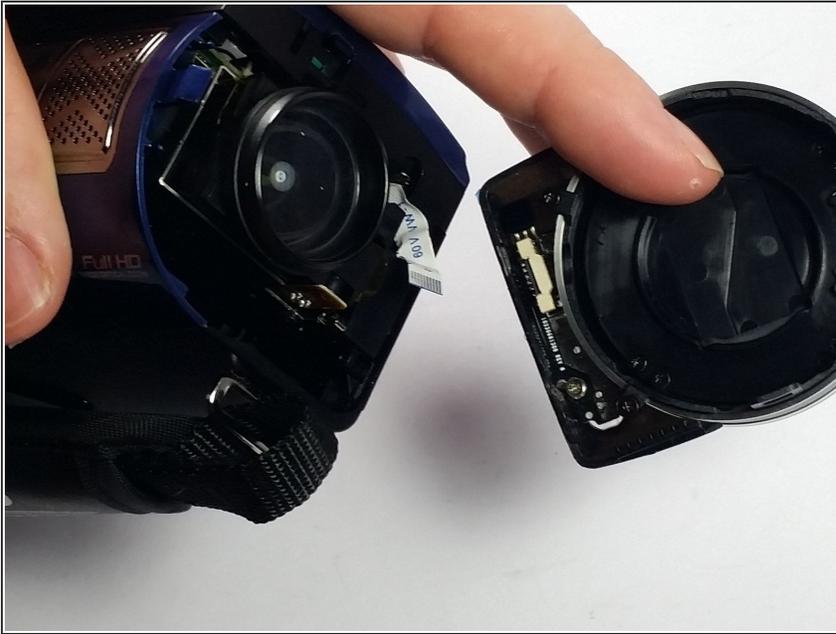

- It will still be connected by a plastic film. This can also be disconnected by pulling up the white part where it connects to the light circuit board.

### Step 4 — Hand Strap

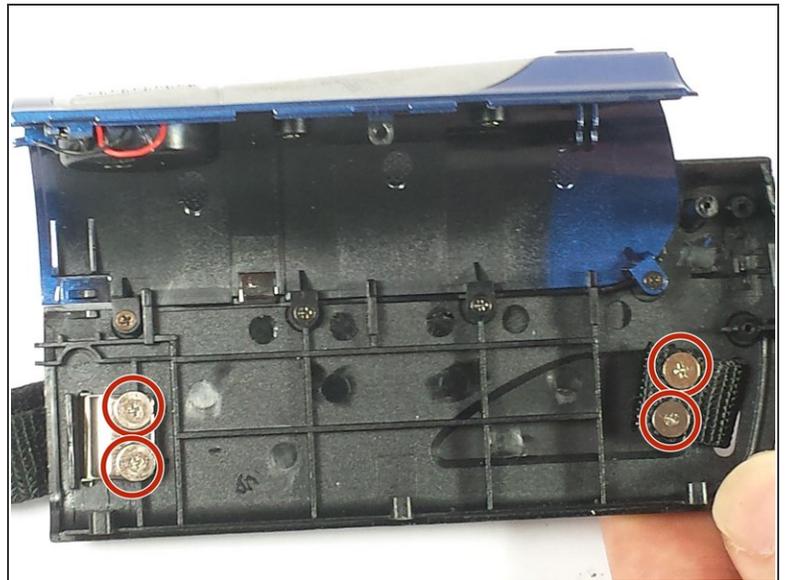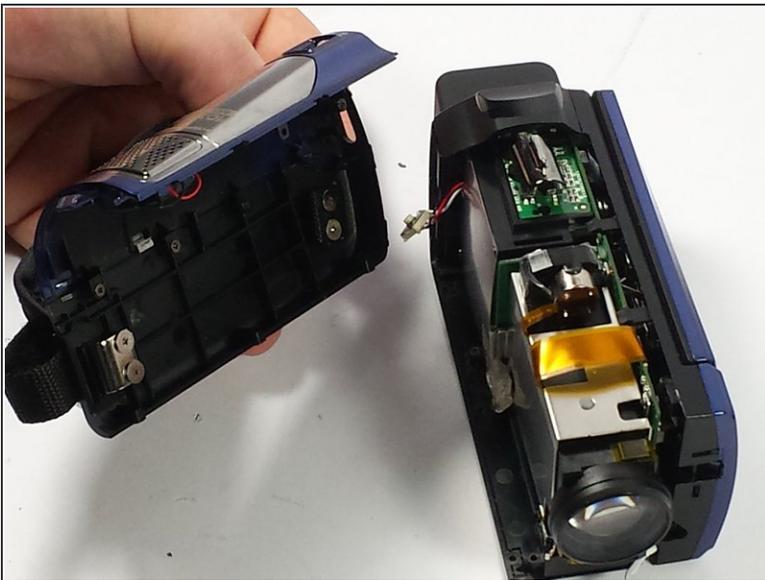

- Pull the side with the hand strap upwards to disconnect it from the camcorder.
- Unscrew the four 40 mm Phillips #0 screws.
- Add the new hand strap now.

To reassemble your device, follow these instructions in reverse order.