 




DeWalt DC970 Battery Fuse Replacement

If your battery charger is not charging the battery of the drill there may be a blown fuse in the charger. I recommend following this guide to replace the fuse.

Written By: Antonia Thomas

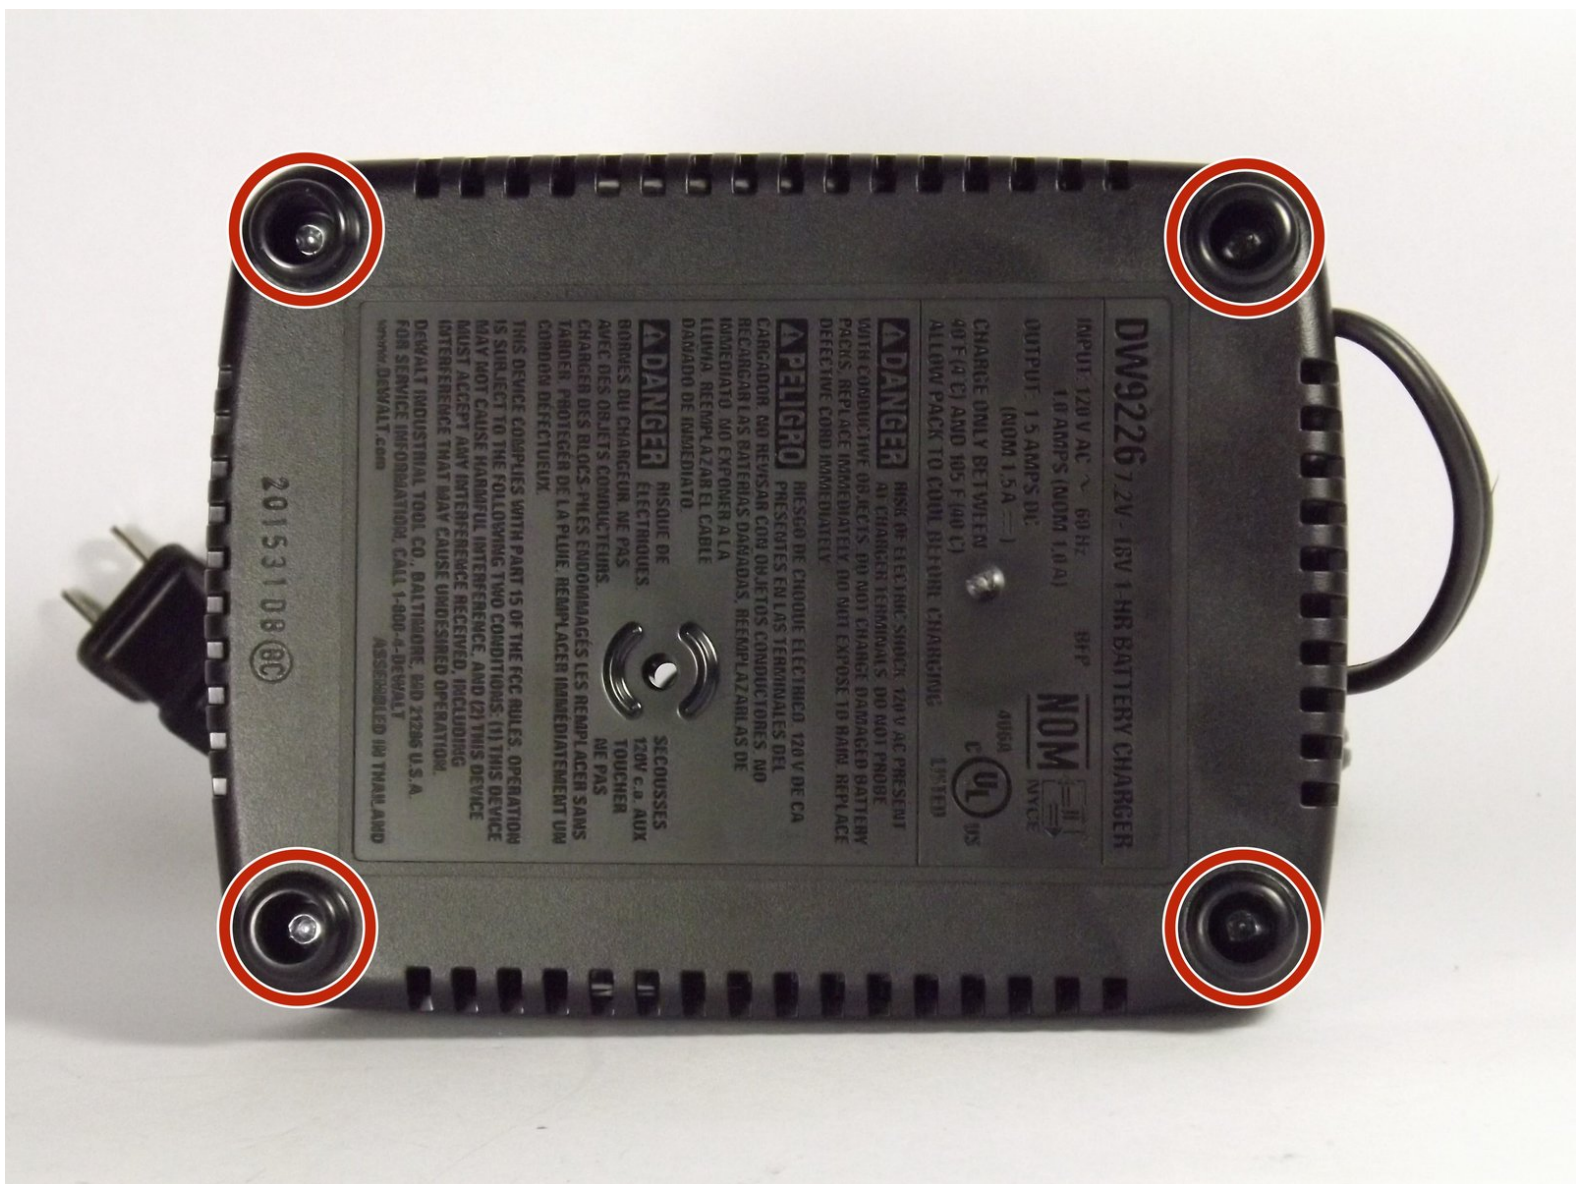

INTRODUCTION

 
If you realize your battery charger for your drill is not charging, there may be a blown fuse which can be replaced by following this guide.



TOOLS:

- [T15 Security Torx Screwdriver](#) (1)
 - [Torque Wrench](#) (1)
 - [T10 Torx Security Bit Screwdriver](#) (1)
-

Step 1 — Battery Fuse

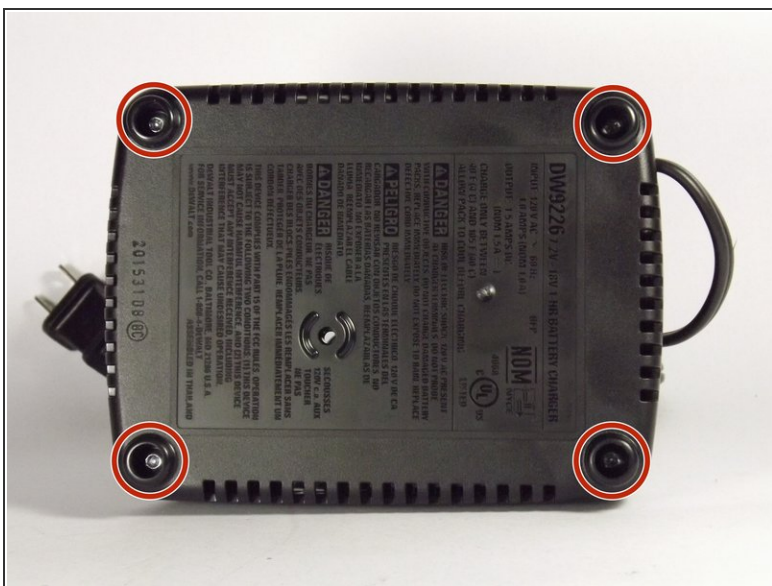

- Remove the four 13 mm, Torx Security #15 screws found on the bottom of the charger.

Step 2



- Remove the 19 mm, Torx Security #10 screw found in the charger port.
- Then pull the top of the charger off separating it from the bottom.

Step 3



- ⚠️ Locate the fuse and pull it out with two fingers.
- Once you have located the fuse, if you have the replacement fuse just pull the old one out and put the new one in.
- ℹ️ Replacement fuses can be found in hardware stores.

To reassemble your device, follow these instructions in reverse order.