



Axess SPBT1031 Black Faceplate Replacement

Prerequisite Only This guide is to remove the interface-side black face-plate.

Written By: Michael Bradley





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Black Faceplate



- Look at the side of the speaker that has the red interface plate. Using a Phillips head PH1 screwdriver head, remove screws on the top and bottom of the black face plate. There will be one screw on top and one on the bottom.
- Both screws are 0.55 cm in depth

Step 2



- Separate the black face plate from the tube by pulling them apart.
- ⚠ Be careful when pulling the wires apart or it will potentially damage the wires due to over stretching.

To reassemble your device, follow these instructions in reverse order.