




# Dell Inspiron 530 RAM Replacement

Removing RAM

Written By: faisal

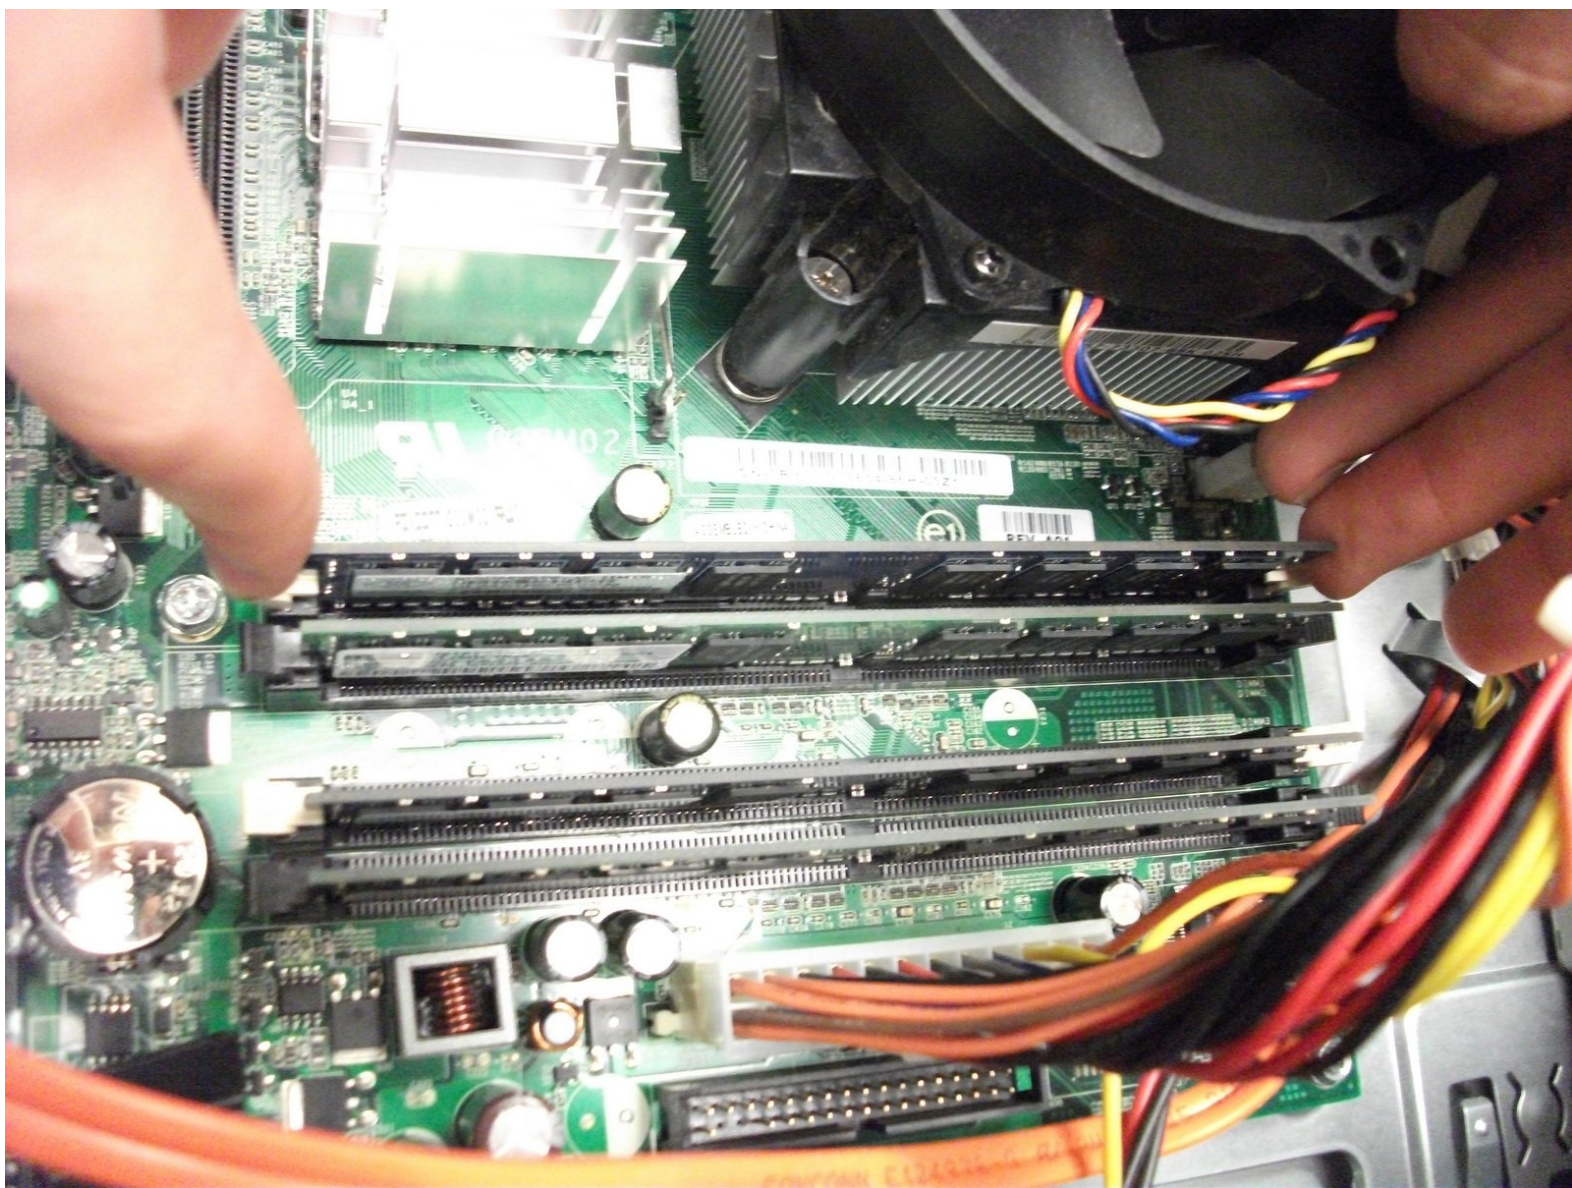

---

## INTRODUCTION

This guide will demonstrate removing the computer's RAM.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Side Panel



- Place the case on its side.
- Locate and remove the two 13.1 mm thumbscrews.

## Step 2



- Slide the side panel towards the back and remove.




## Step 3 — RAM



- Locate the four sticks of RAM.

## Step 4

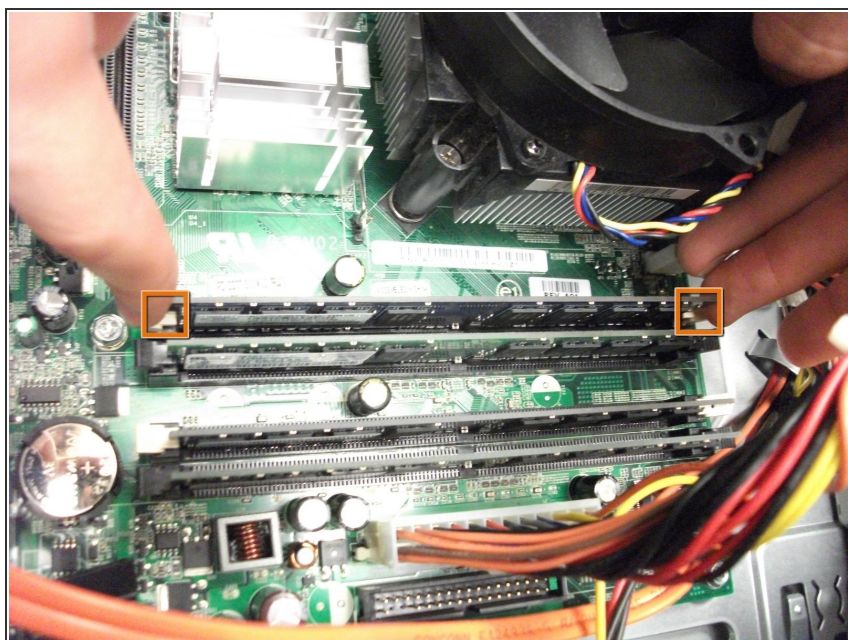

- Locate the two plastic tabs on the ends of a RAM stick.
- Press down on the two tabs together until RAM stick is ejected.

To reassemble your device, follow these instructions in reverse order.