


# Disassembling Apple IIc Cover

If your Apple IIc is having hardware problems,...

Written By: Alexandria Weinberg

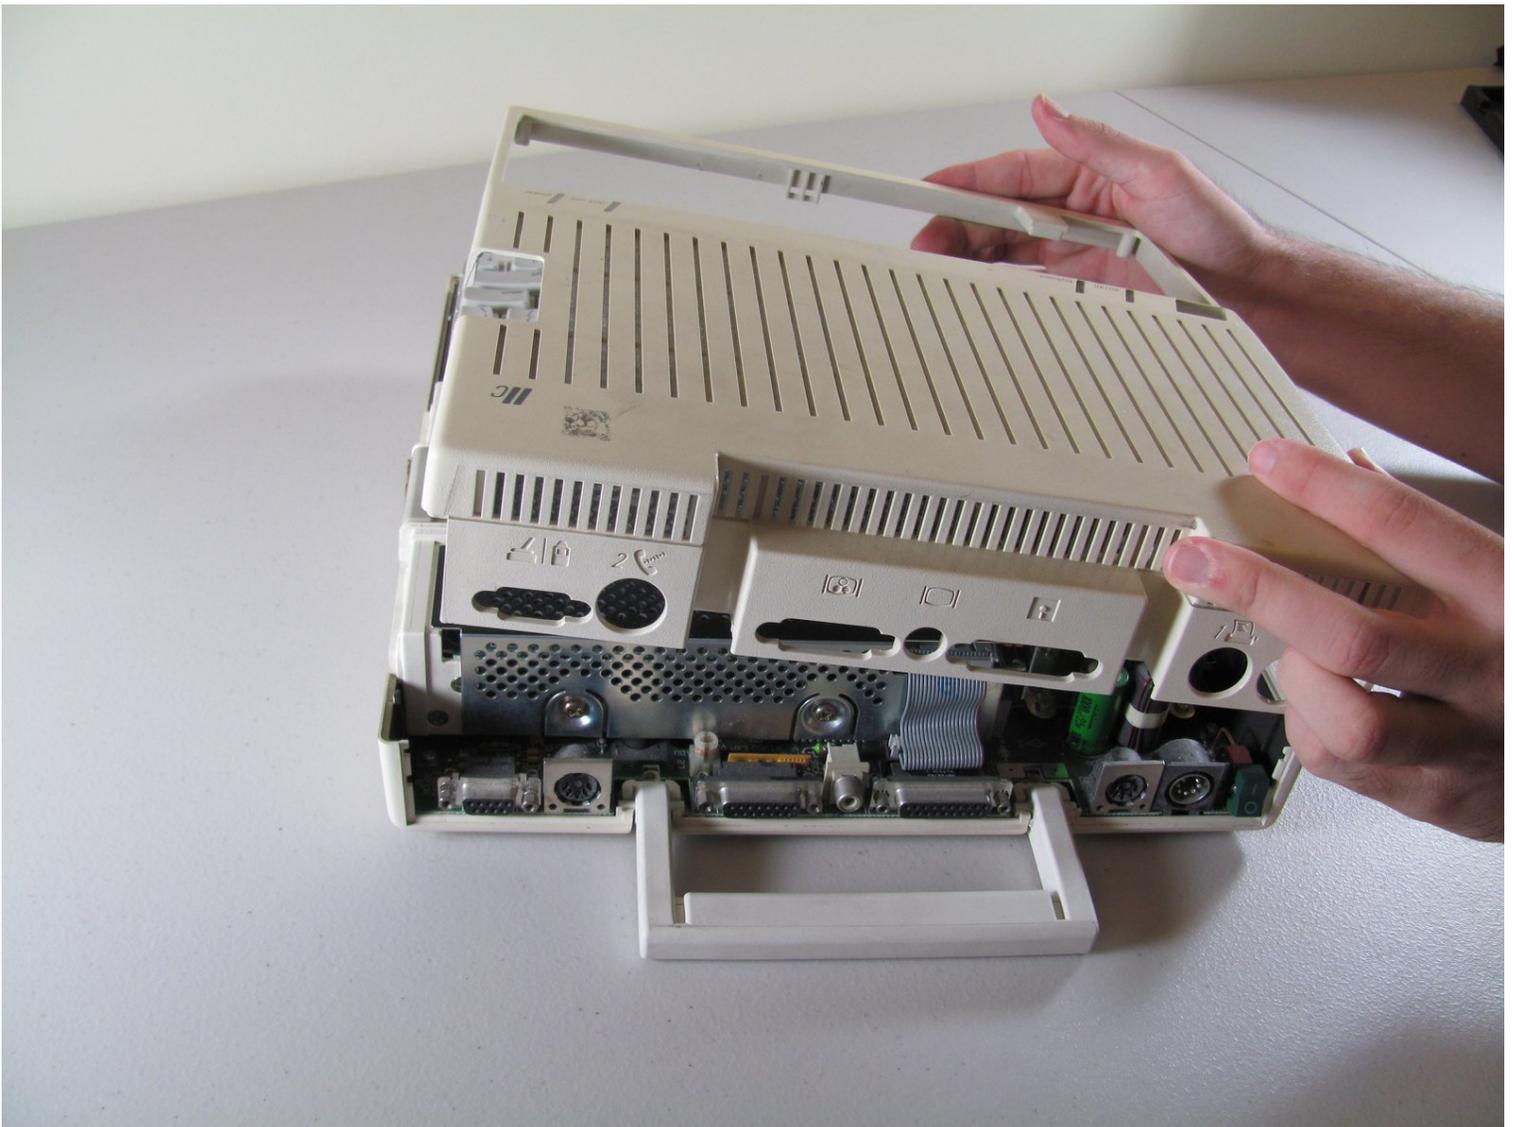

# INTRODUCTION

If your Apple IIc is having hardware problems, you will need to remove the cover to access most of the components. Use this guide for step-by-step instructions on how to safely do that.

Before work is done on any electronics, be sure to disconnect them from power.


Begin by having a large workspace so that parts can be kept neat and organized. Take care when prying in step 2 since the plastic may be brittle and susceptible to damage.

## TOOLS:

[Phillips #2 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

## Step 1 — Disassembling Apple IIc Cover

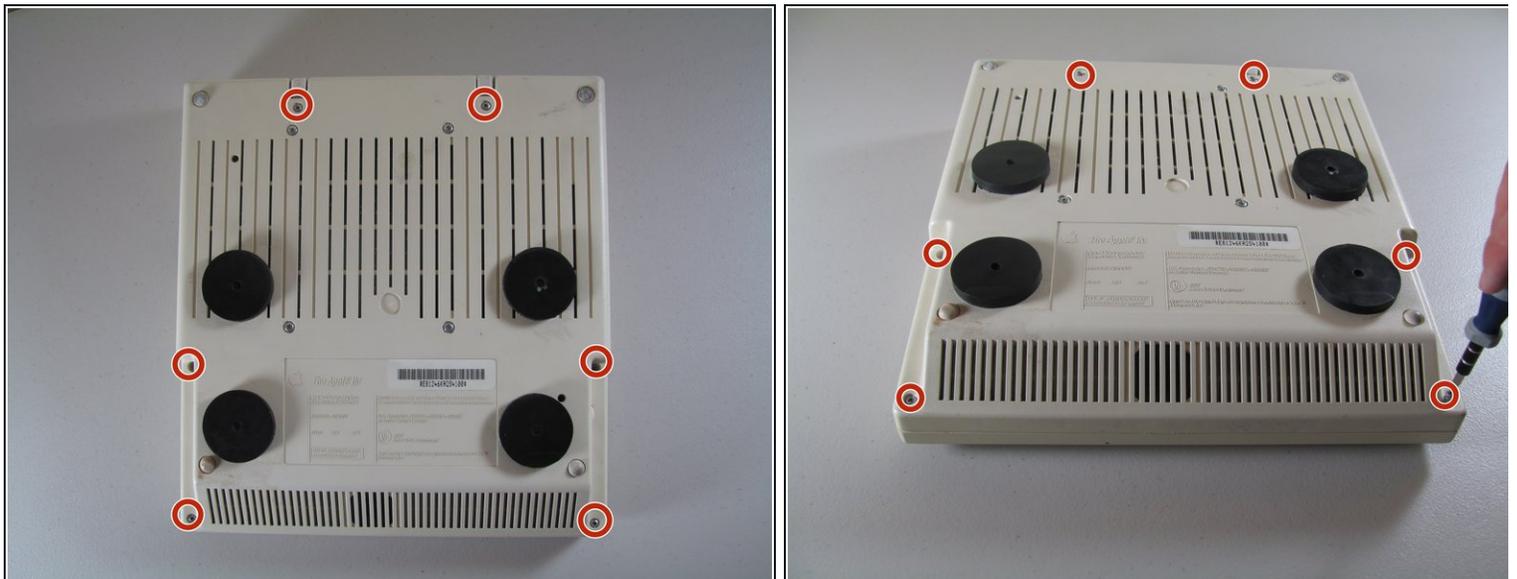


- Remove the six 19 mm long screws with a #2 Phillips head screwdriver.

## Step 2




- Release the catch by pushing it in using a plastic opening tool.
- ⓘ The catch is off-center, but in line with the middle of the speaker underneath.

## Step 3

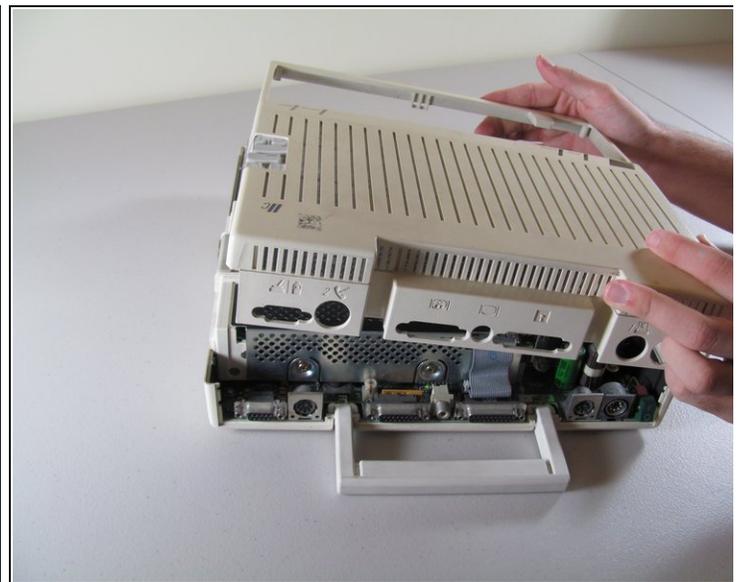

- Slide the case toward the ports on the back, then grip under the catch and pull up while moving toward the ports to remove.

## Step 4

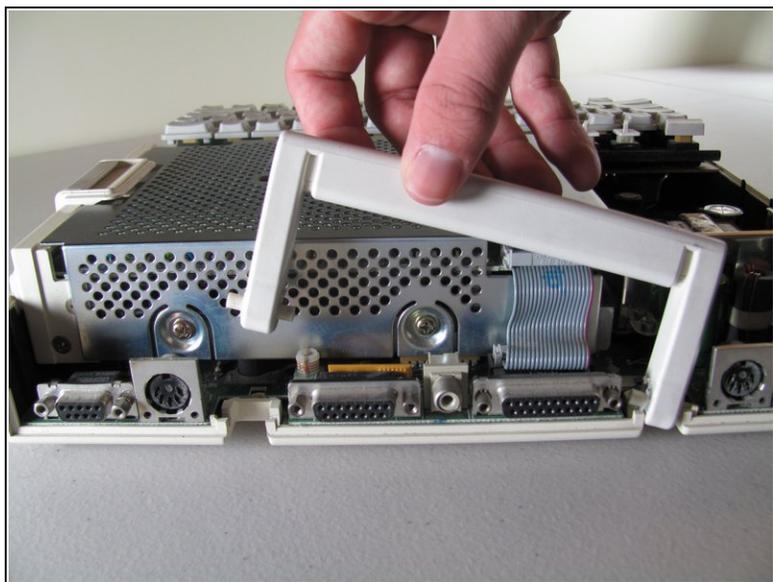

- Lift the handle straight up to remove.

To reassemble your device, follow these instructions in reverse order.