



Sony Handycam CCD-TR5 Microphone Replacement

This guide will take you through the process of...

Written By: Emma



INTRODUCTION

This guide will take you through the process of replacing a faulty or non-functioning microphone in your Sony Handycam CCD-TR5.



TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Microphone




- Use a Phillips #00 screwdriver to remove three screws: one from the bottom, one from the side, and one from the top of the camera.

Step 2



- Remove the two top screws from the microphone.


Step 3

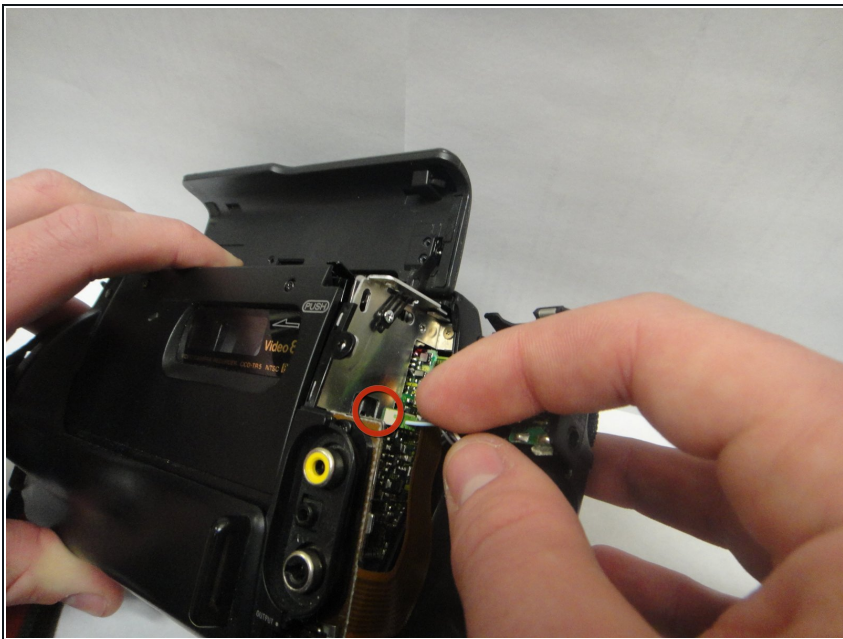

- ⚠ Carefully remove the electrical connector from the circuit board.

Step 4



-  After removing the screws, the microphone will detach from the camera.
- Insert the replacement microphone into the camera.

To reassemble your device, follow these instructions in reverse order.