

# **Acer AL1916 Stand Replacement**

This guide will show the user how to remove the stand.

Written By: Keith



#### **INTRODUCTION**

The stand supports the monitor from falling over.



## **TOOLS:**

Phillips #2 Screwdriver (1)



• Stand (1)

#### Step 1 — Stand



(i) Lay the monitor on a flat surface so that the back is facing up.

## Step 2





- Grab the hinge cover with both hands on either side of the stand.
- Squeeze inwards with your thumbs and fingers and lift up to remove the hinge cover.

## Step 3





- Remove the four 12.1 mm Phillips #2 screws that hold the stand to the monitor.
- ↑ Support the monitor while removing the screws to prevent the monitor from falling.
- Lift up to detach the stand.

To reassemble your device, follow these instructions in reverse order.