


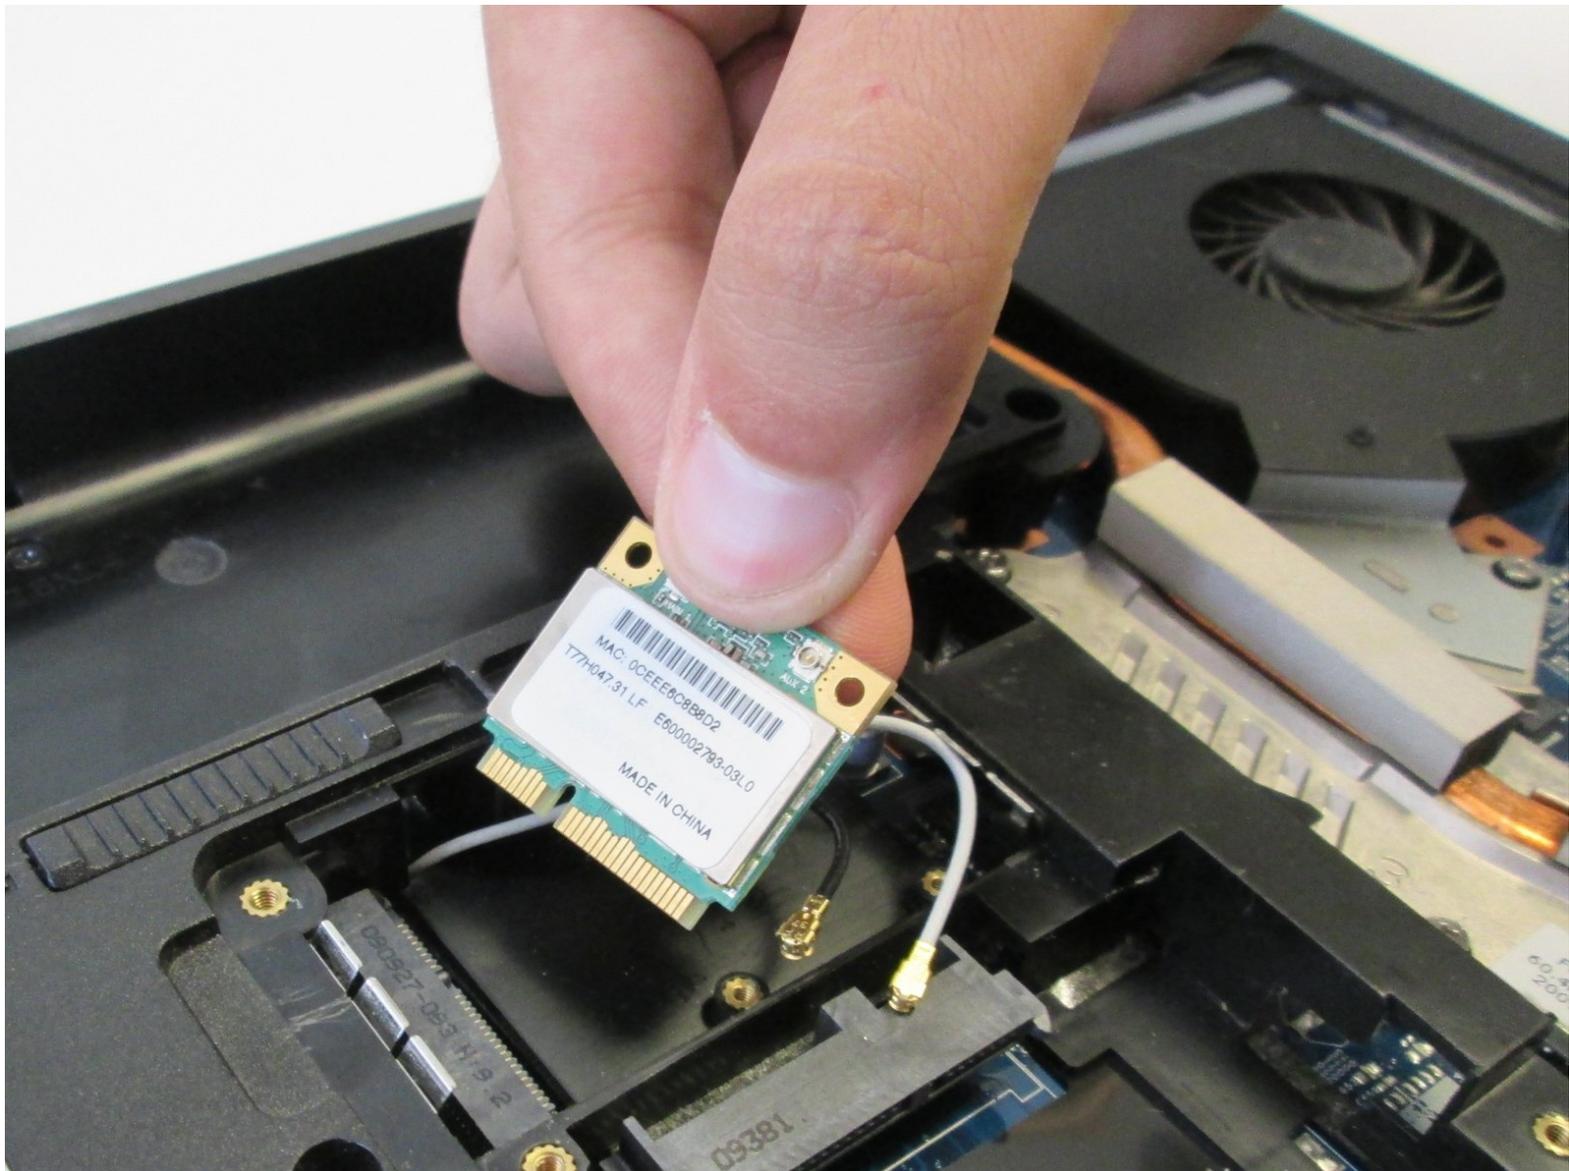

# Acer Aspire 7736Z-4809 Wireless Module Replacement

If your Wi-Fi connections are not working, replacing the wireless module may solve this problem.

Written By: Pnithan Jantarakolica



## INTRODUCTION

Before replacing the wireless module, make sure the replacement module is compatible with the laptop.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [PCIe wireless LAN module](#) (1)

## Step 1 — Acer Aspire 7736Z-4809 Repair Preparation



- Unplug and power off the laptop.
- ⓘ If the battery is still connected to the laptop, remove the battery.

## Step 2




- Flip over the laptop so that the back panel of the laptop is facing up.

### Step 3 — Back Panel



- Use the Phillips #1 screwdriver to remove the eight 6.5 mm Phillips #1 screws.
- ⓘ Only the four screws in the center are removable, the four along the edges are held in by rivets but can be loosened.

### Step 4

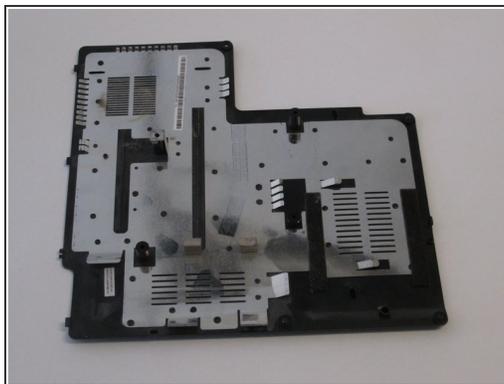

- Remove the back panel of the laptop.

## Step 5




- Connect a grounding cord to a metal interface on the laptop.
- ⚠ Ground the laptop to prevent static electricity from damaging the electrical components inside the laptop.

## Step 6 — Wireless Module



- Remove the white antenna of the wireless module.
- ⓘ Use tweezers if you do not prefer using hands.

## Step 7

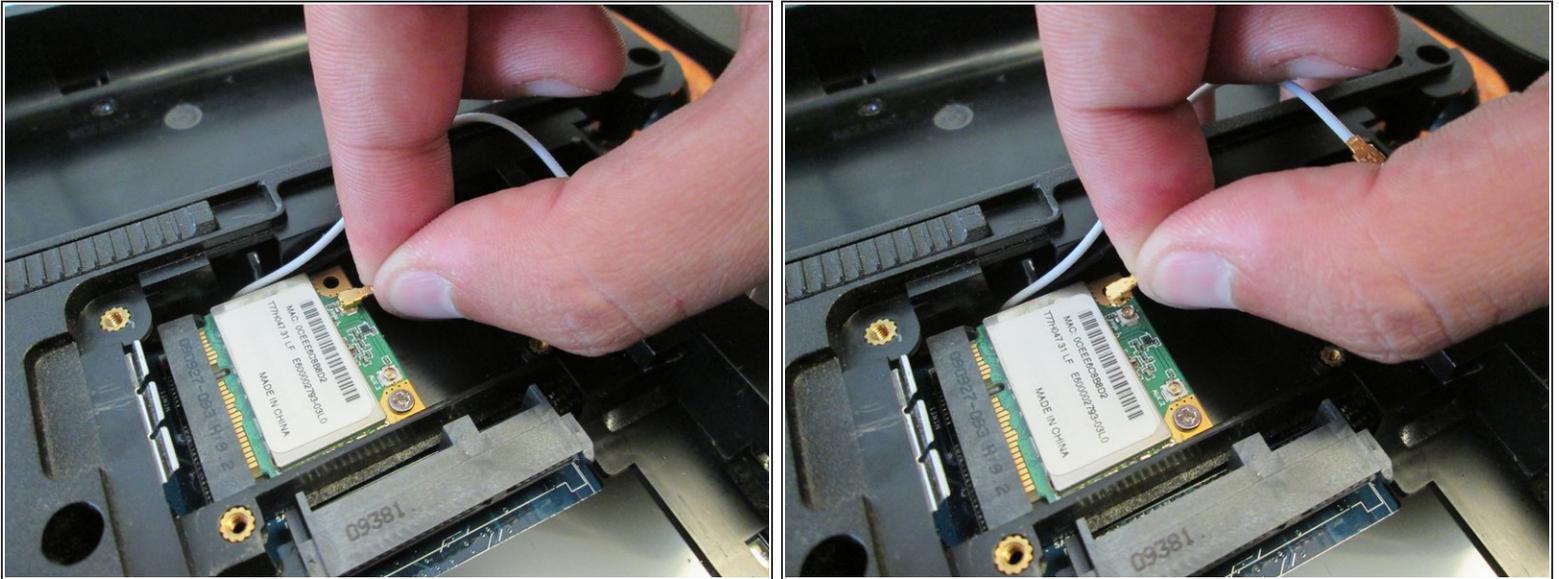


- Remove the black antenna of the wireless module.
- ⓘ Use tweezers if you do not prefer using hands.

## Step 8



- Use the Phillips #1 screwdriver to remove the two 4.8mm Phillips #1 screws.

## Step 9

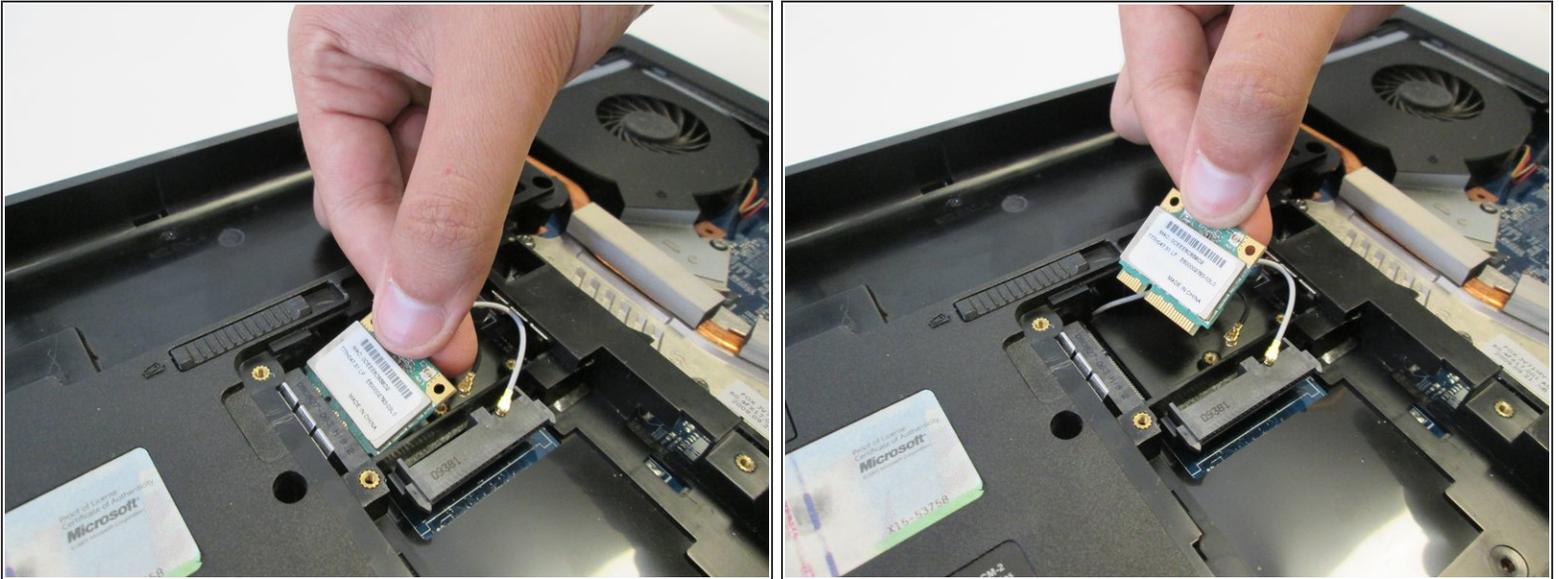

- Remove the wireless module from the laptop.

To reassemble your device, follow these instructions in reverse order.