



# Lenovo ThinkPad X140e Battery Replacement

This guide will teach you how to remove and replace the battery.

Written By: Dylan Halland



## INTRODUCTION

Removing the battery is a relatively simple task but is very important to remove power from the laptop in case power shorts any vital components. The x140e battery is a lithium-ion battery, so caution is advised when removing the battery.



### PARTS:

- [Lenovo 42T4950 Battery](#) (1)
-

## Step 1 — Battery



- Turn off your laptop and unplug the charging cable.

**⚠ Failure to remove the charging cable may cause electric shock.**

- Flip the laptop upside down.
- Rotate the laptop so that the battery is facing away from you.

## Step 2



- Push the first switch on the left to the right until you hear a click. This means the battery is unlocked and can be removed.

## Step 3



- Push the second switch on the right to the right, hold it there with your right hand and continue to the next step.
- While holding the right switch open, take your free hand and pull the battery out.

To reassemble your device, follow these instructions in reverse order.