



# Acer Iconia W3-810 Speaker Replacement

Shows how to replace speakers on the device.

Written By: Griffin Hocker



## INTRODUCTION

This guide will show you how to remove and replace the speakers due to various problems. They may need to be repaired due to water intrusion or excessive use.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Back Panel



- Place the tablet face down on a flat surface with the charger facing toward you.

## Step 2



- Use a plastic opening tool to pry the back panel off of the device.
- ⚠ Be careful to not use the plastic opening tool near the charging dock or any media ports.




## Step 3 — Speaker




- Lift the retaining flaps fastening the screen ribbon cord to the screen circuit board using a plastic opening tool.

## Step 4

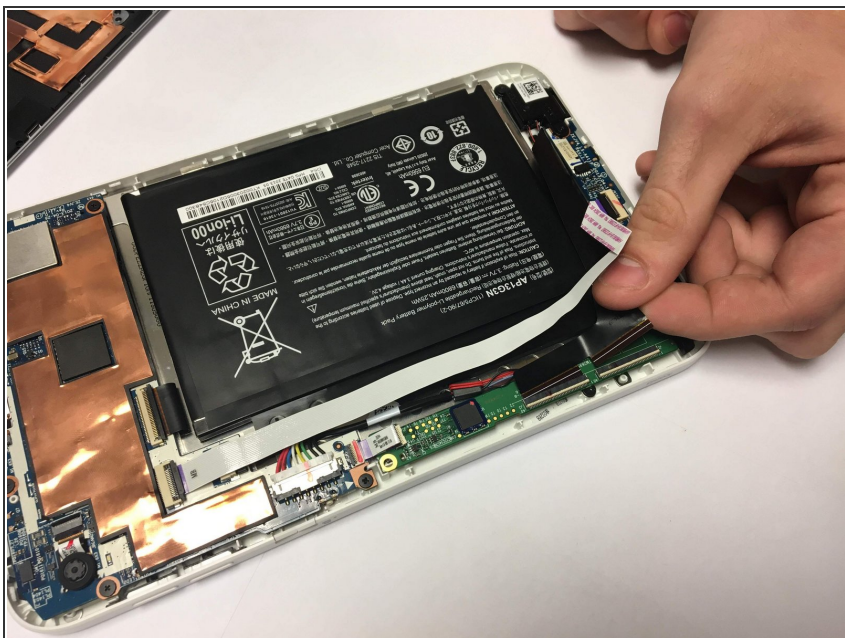

- Pull the ribbon cord out of its slot.

## Step 5

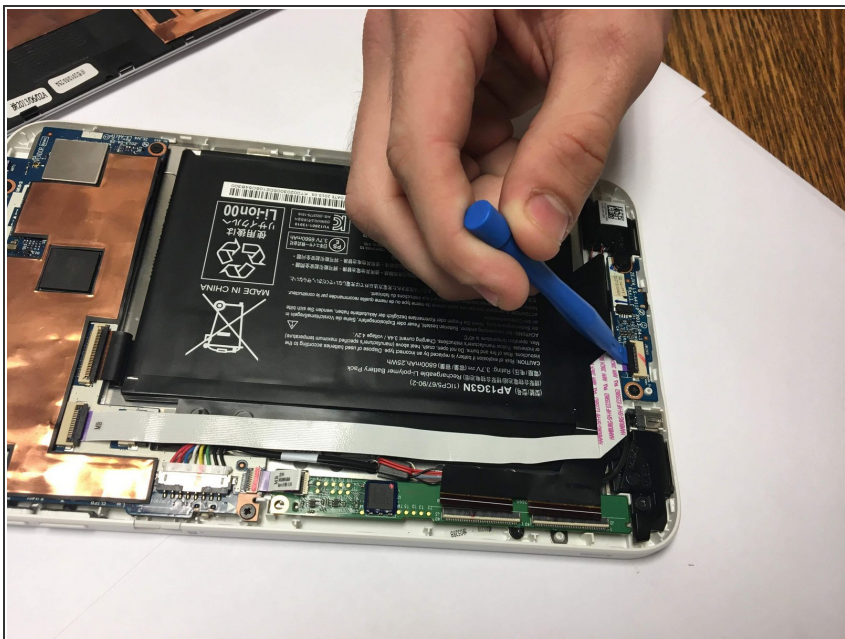

- Lift the retaining flap fastening the ribbon cord.


## Step 6



- Remove the ribbon cord from its slot.



## Step 7

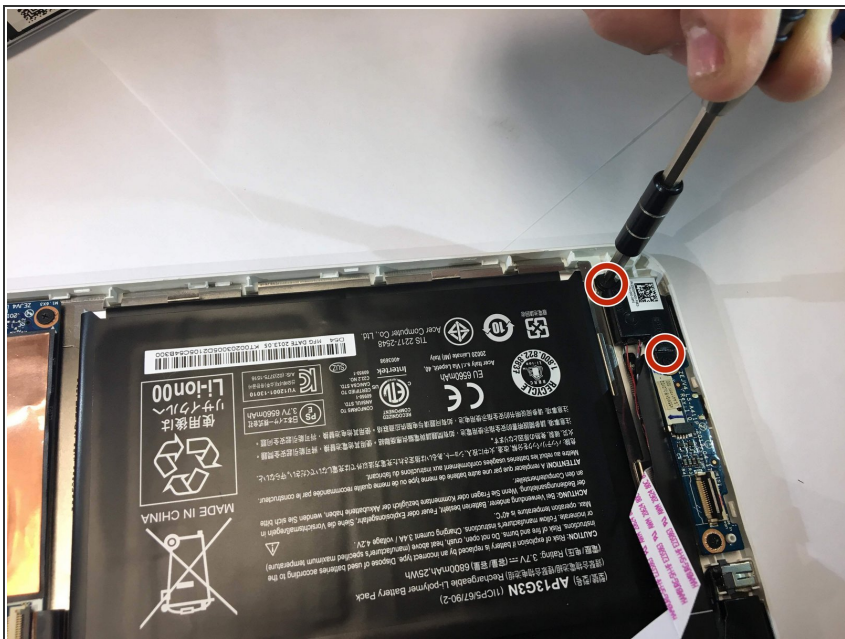

- Unscrew the Phillips head HH0 3mm screws holding down the right speaker.

## Step 8




- Unscrew the HHO 3mm screws holding the left speaker.

## Step 9



- Lift the speakers from the front panel.


## Step 10

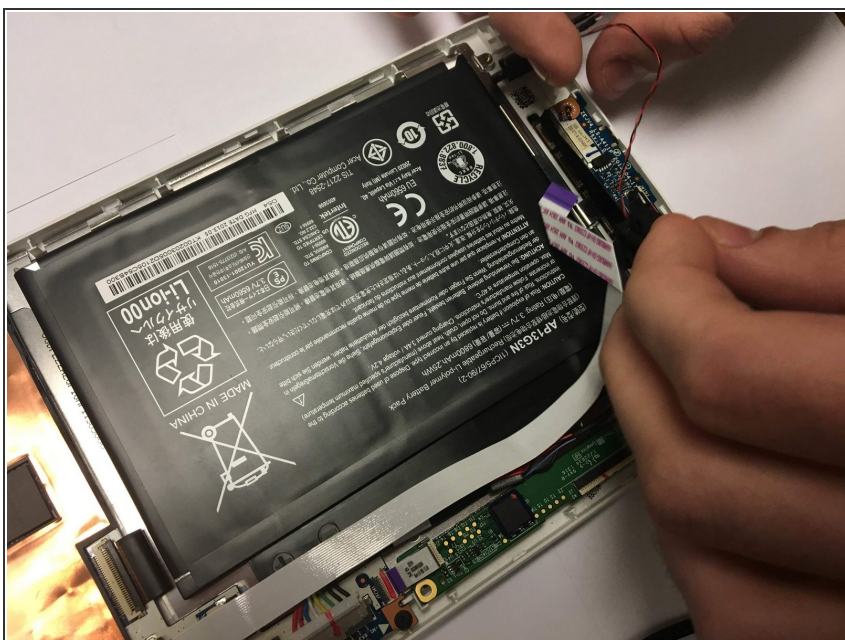

- Pull the speakers underneath the headphone cord.



## Step 11

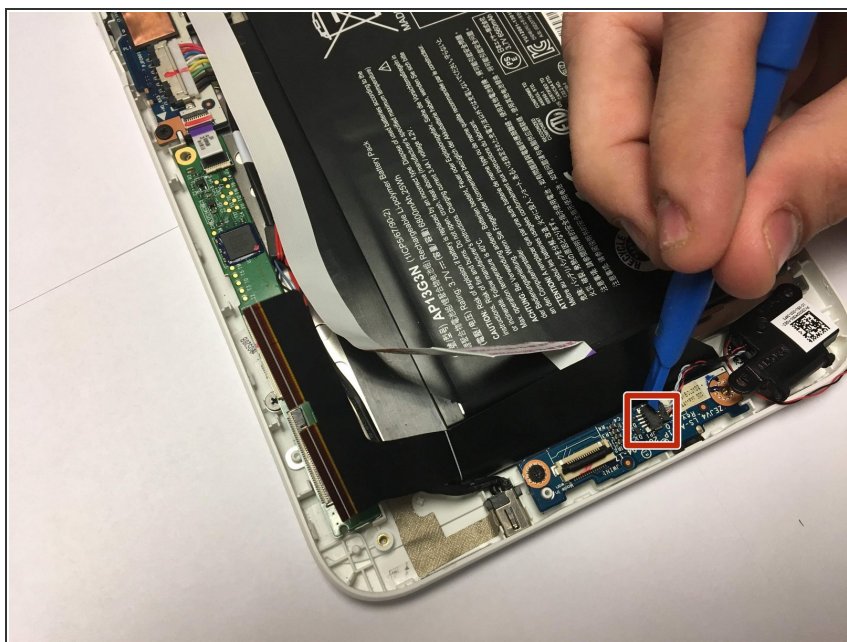

- Use a plastic opening tool to remove the speaker cord from its slot.

## Step 12



- Remove the speakers from the device.

To reassemble your device, follow these instructions in reverse order.