



Numark TT1600 Audio Jacks Replacement

Written By: Nikolai





TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Audio Jacks



- Flip over the turntable and remove the nine screws on the outer edges.

Step 2



- Find the audio jacks located on the back side of the turntable.
- Remove the screw located in between the right and left audio jacks.

Step 3





- Remove the back cover by pulling it apart.

Step 4




- Remove the grounding hardware located next to the audio jacks.

Step 5

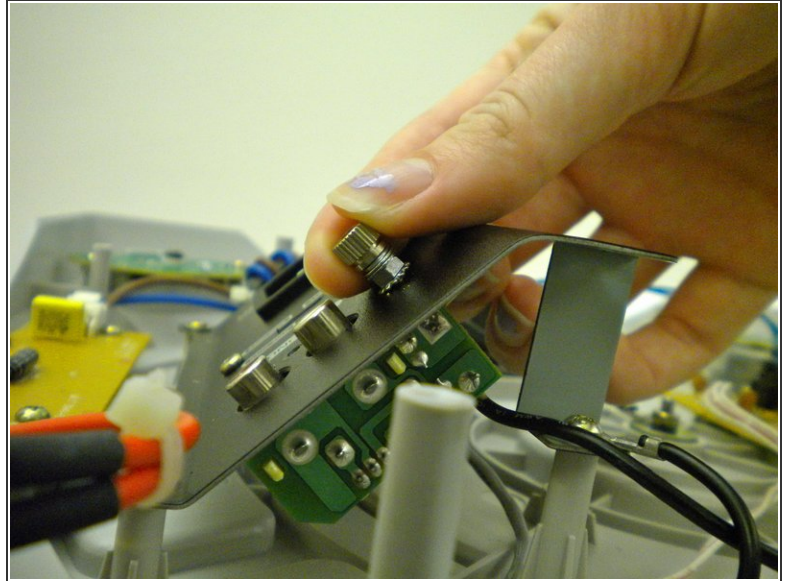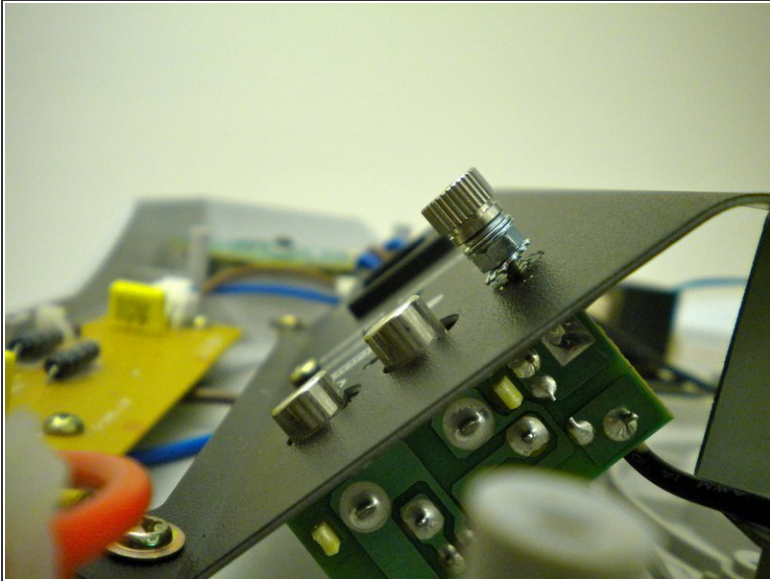


- Remove the ground screw and washers.

Step 6

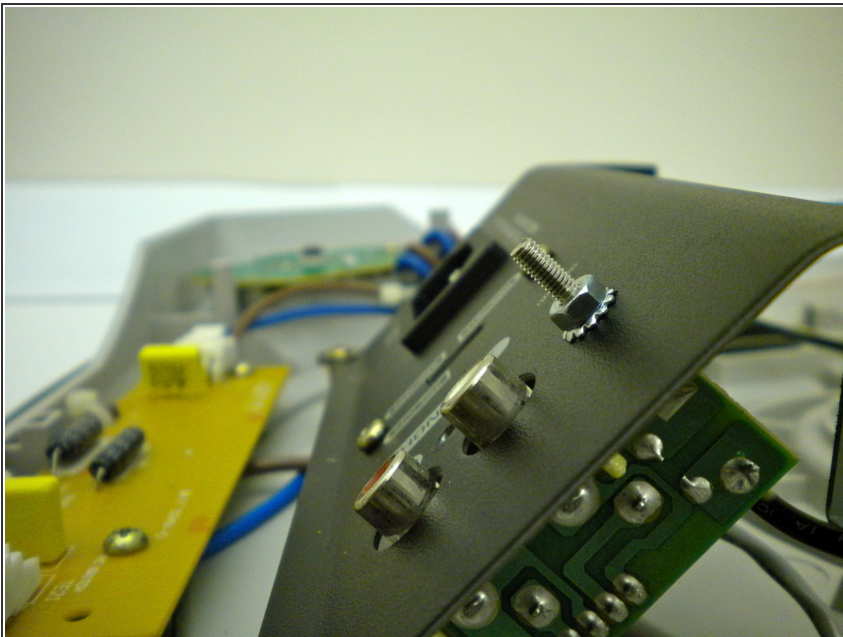




- Remove the remaining nut and washer.

Step 7

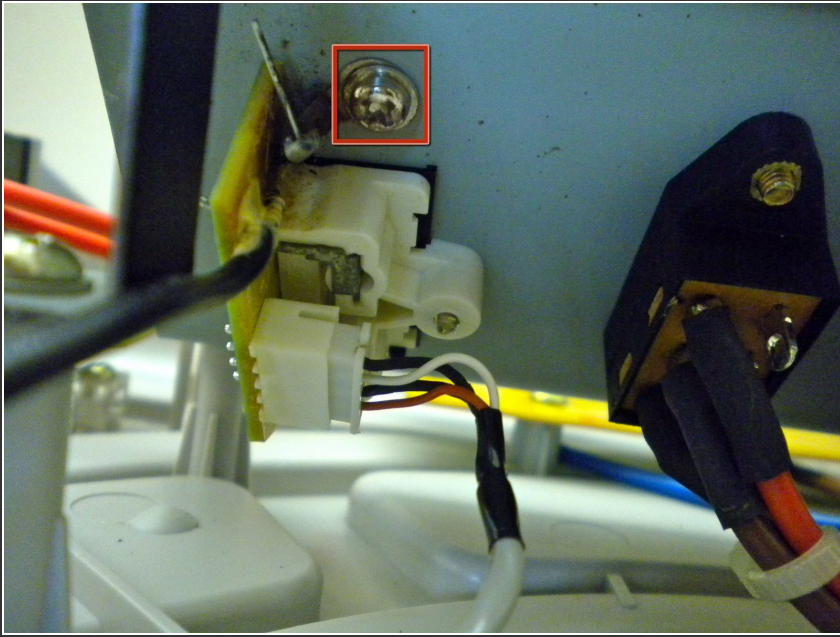


- Remove the screw located on the back panel of the audio jack housing.

Step 8

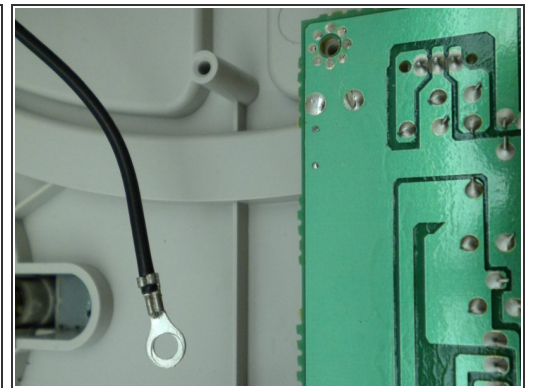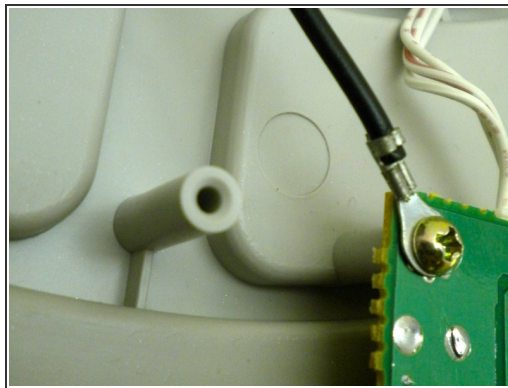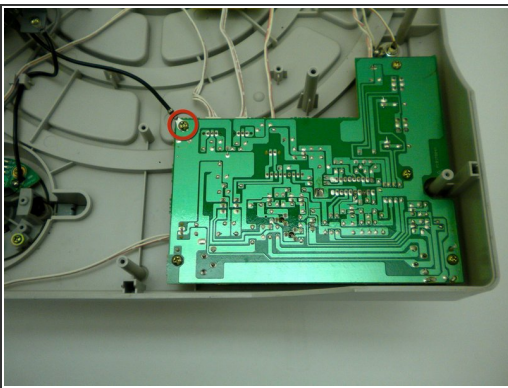

- Remove the screw that connects the audio jacks to the biggest circuit board via wire.

Step 9

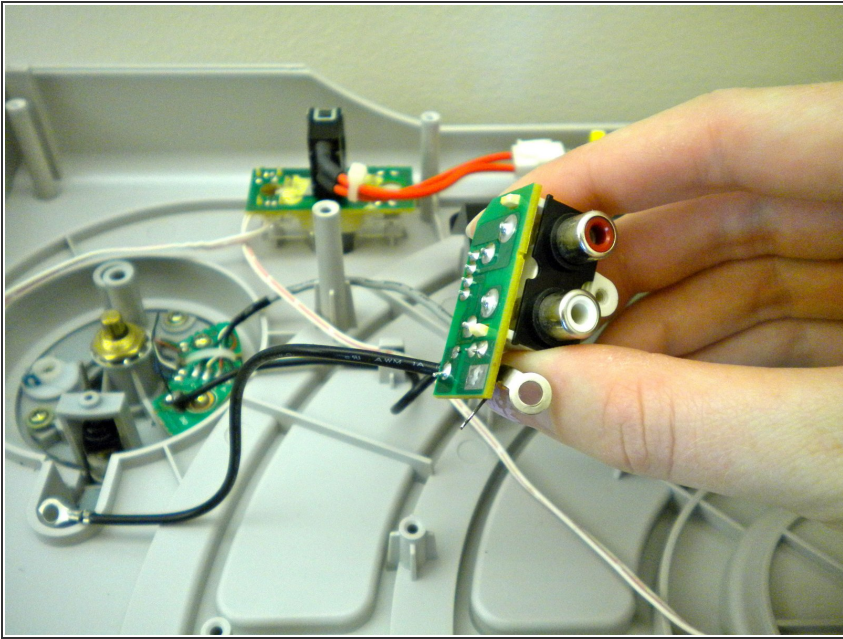

- Gently pull out the audio input jacks from the audio input housing.

To reassemble your device, follow these instructions in reverse order.