



Dell Inspiron 14z-5423 Speaker Replacement

This guide will teach users to remove the speakers from the Dell Inspiron 14z-5423 laptop.

Written By: Diana Shirley




INTRODUCTION

This computer utilizes Skullcandy speakers that are located along the front of the laptop.

TOOLS:

- [JIS Driver Set](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — RAM

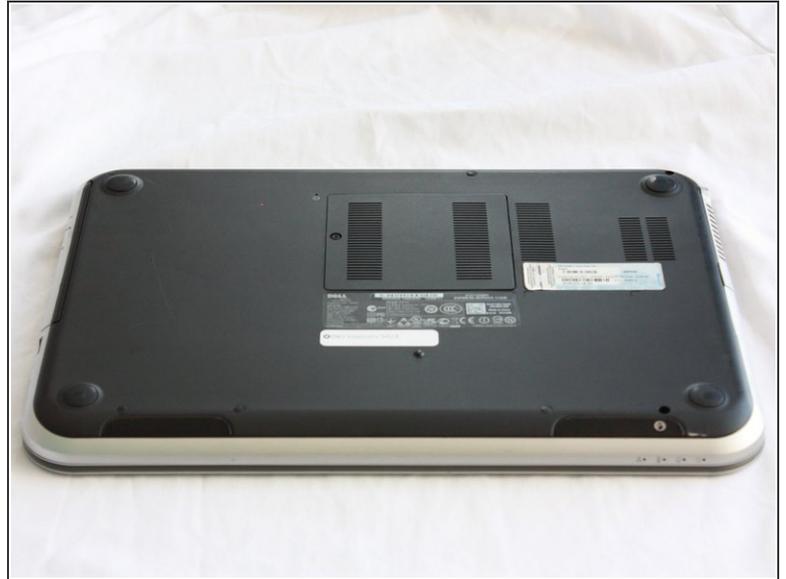

- Close the display and turn over the computer.

⚠ Make sure your device is powered down and unplugged before beginning the replacement.

Step 2




- Use a J0 bit tipped screwdriver to unscrew the one 6 mm Phillips screw on the RAM cover.

Step 3



- Lightly lift the RAM cover up and at an angle, away from the computer.

Step 4

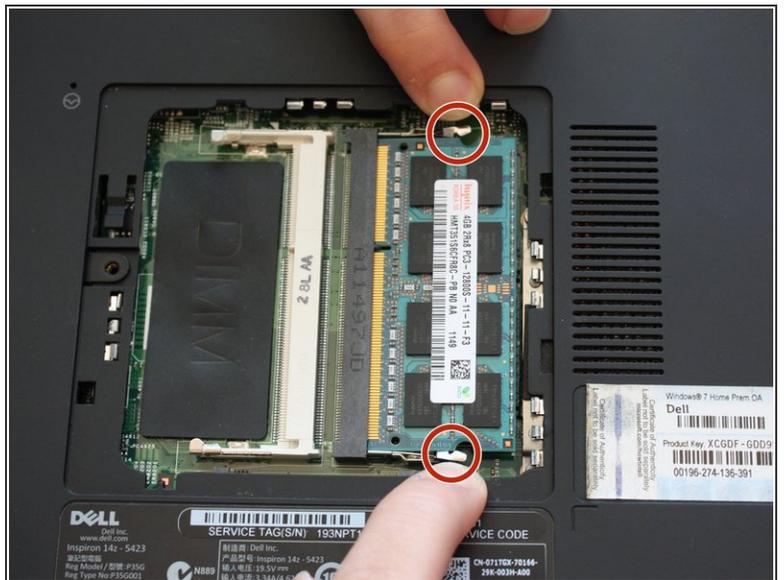


- Use your fingers to carefully pull the securing clips on the RAM away from each other.
- ⓘ The RAM should pop up when the clips are released.

Step 5



- Remove the popped up RAM by pulling it away from the connection.
- ⓘ If it does not pop up pry it out in a steady and straight direction.

Step 6 — Optical Drive

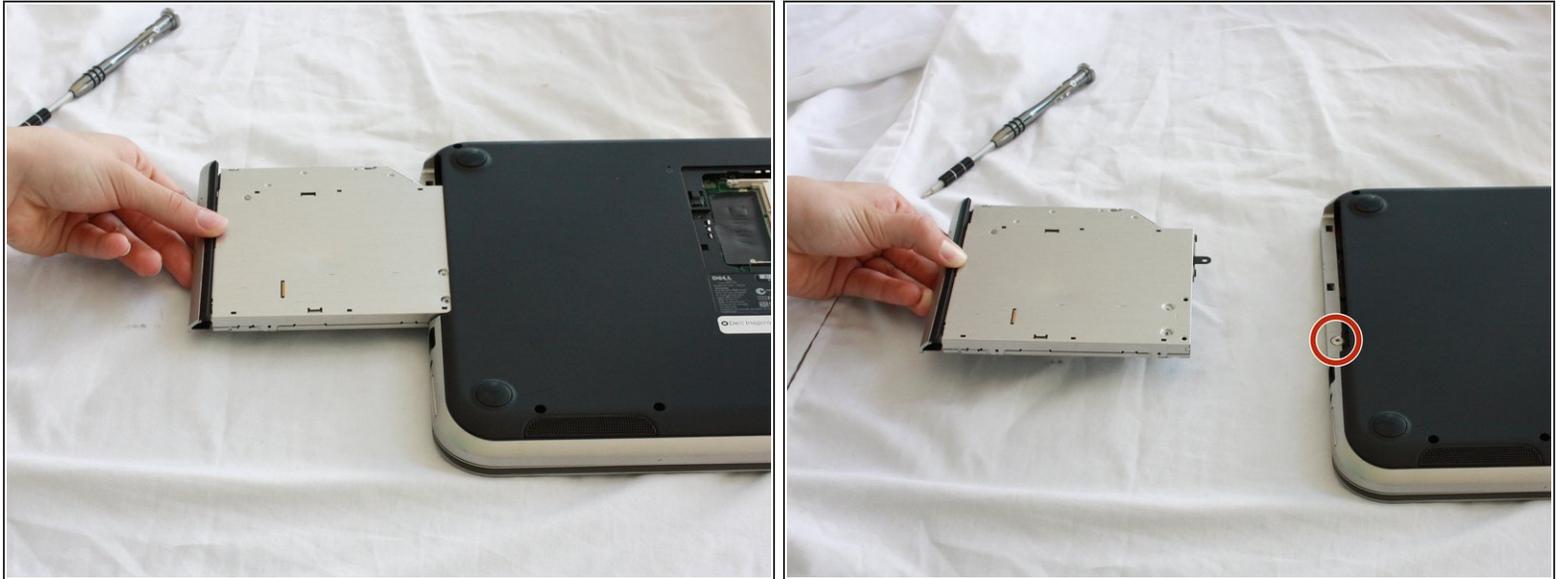

- Slide the CD/DVD drive on the side of the laptop out using your fingers.
- Using a J0 bit screwdriver, unscrew the one 2 mm Phillips screw.
- ⓘ You only need to unscrew this screw if you are using this as a prerequisite guide.

Step 7 — Keyboard



- Lift the plastic yellow flap on the system board.
- Use the J0 Bit screwdriver to remove the one 6 mm Phillips screw in center of the system board that is connected to the keyboard.

Step 8



- Flip over the computer and open the display.

Step 9





- Insert a spudger next to the plastic indents located at the top of the keyboard and gently pry to release the securing clips.
 - Lift the keyboard off of the computer.
- ⚠ Be careful not to tear the ribbon that attaches the back of the keyboard to the computer when lifting it.

Step 10



- Flip the keyboard over onto the palm-rest assembly.

Step 11

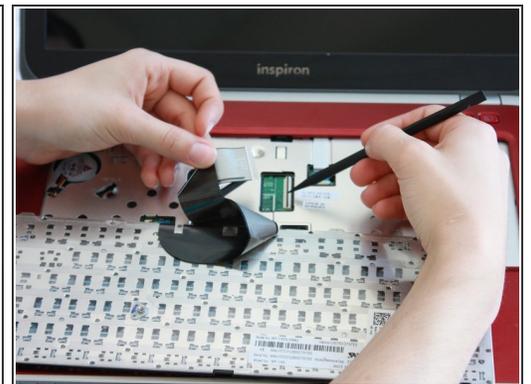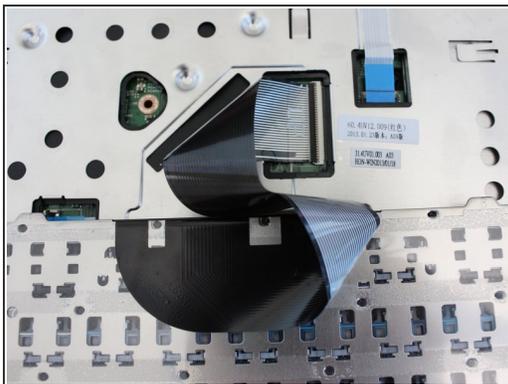



- Flip the little black securing bar near the base of the ribbon with a spudger to release the ribbon from the computer.

Step 12 — Palm Rest Assembly





- Close the display and turn over the computer.

Step 13

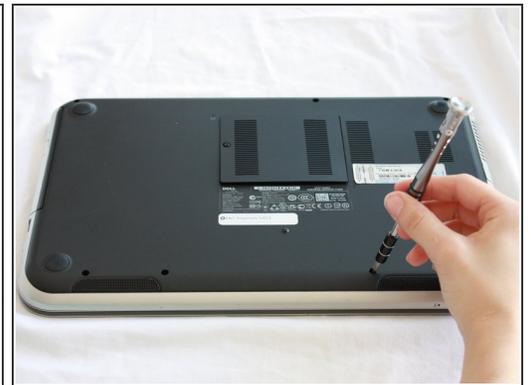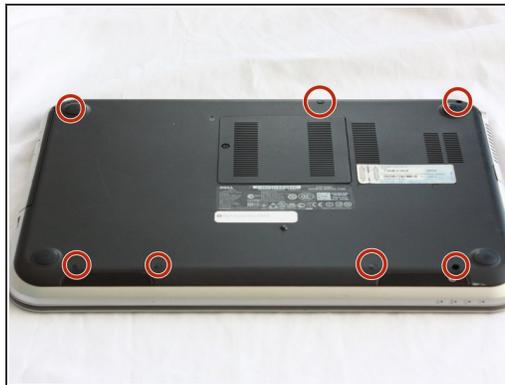


- Remove all 7 rubber screw caps with tweezers.
- Use a J0 Bit tipped screwdriver unscrew the seven 6 mm Phillips screws on the back casing of the laptop.

Step 14

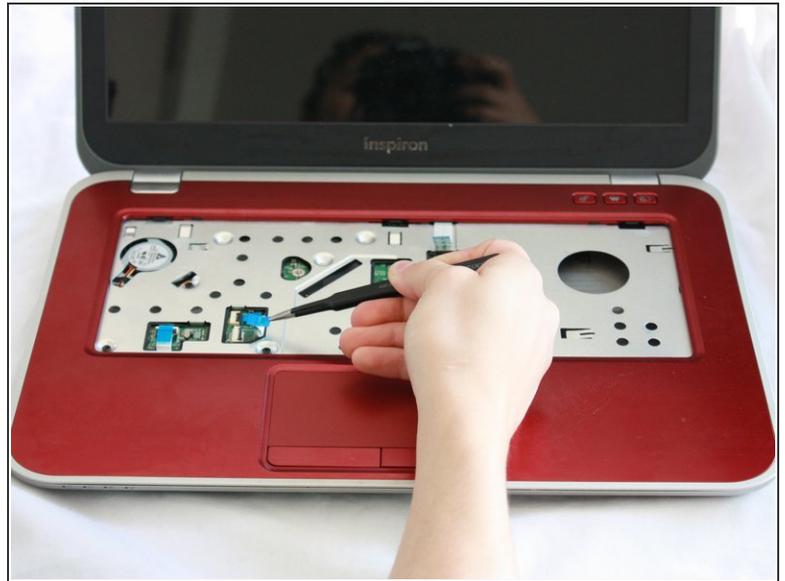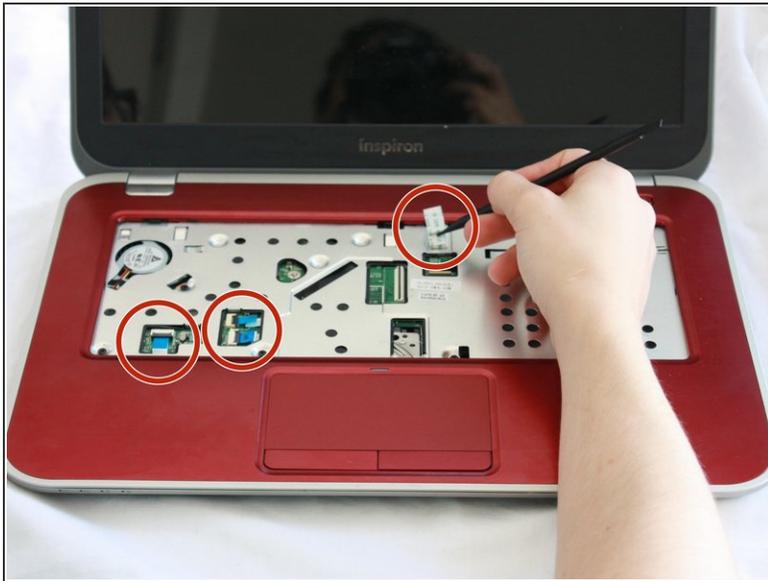


- Flip the computer over and open the display.
- Pull on the blue tabs to disconnect the palm rest assembly from the computer.

Step 15

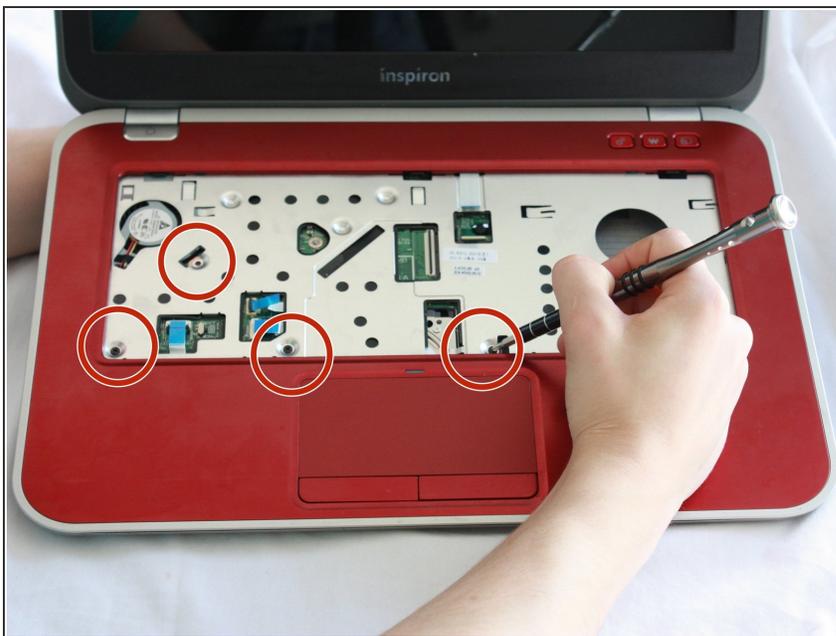


- Use J0 Bit screwdriver to remove all four 6 mm Phillips screws.

Step 16

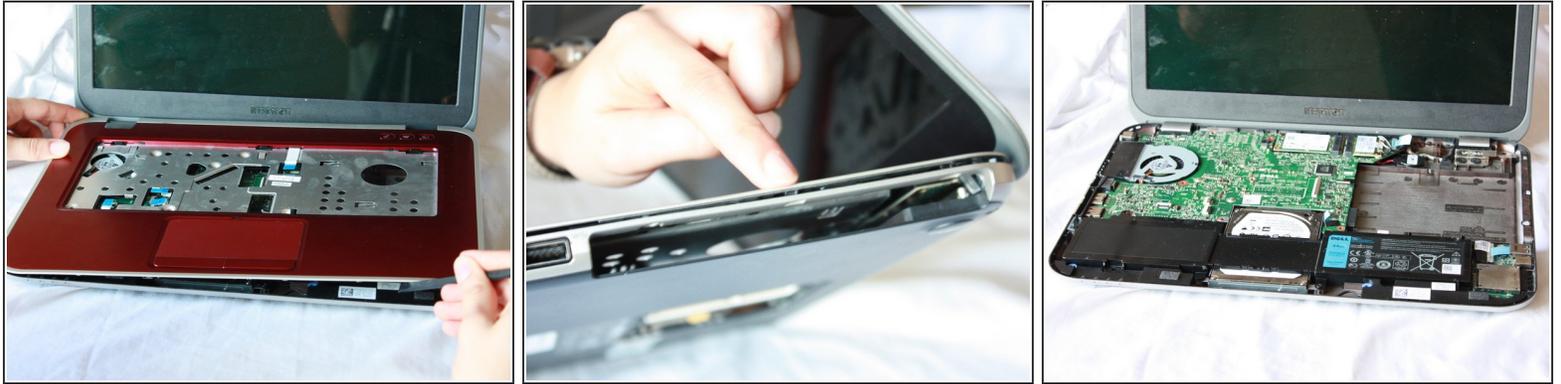

- Gently wedge the nylon spudger underneath the palm-rest assembly to release the latches.
 - Continue this process on all sides of the computer edges until the assembly pulls off.
 - Remove the palm rest assembly.
- i** If you have difficulty lifting up the assembly, you might not have taken out all 7 screws on the bottom of the computer.

Step 17 — Battery

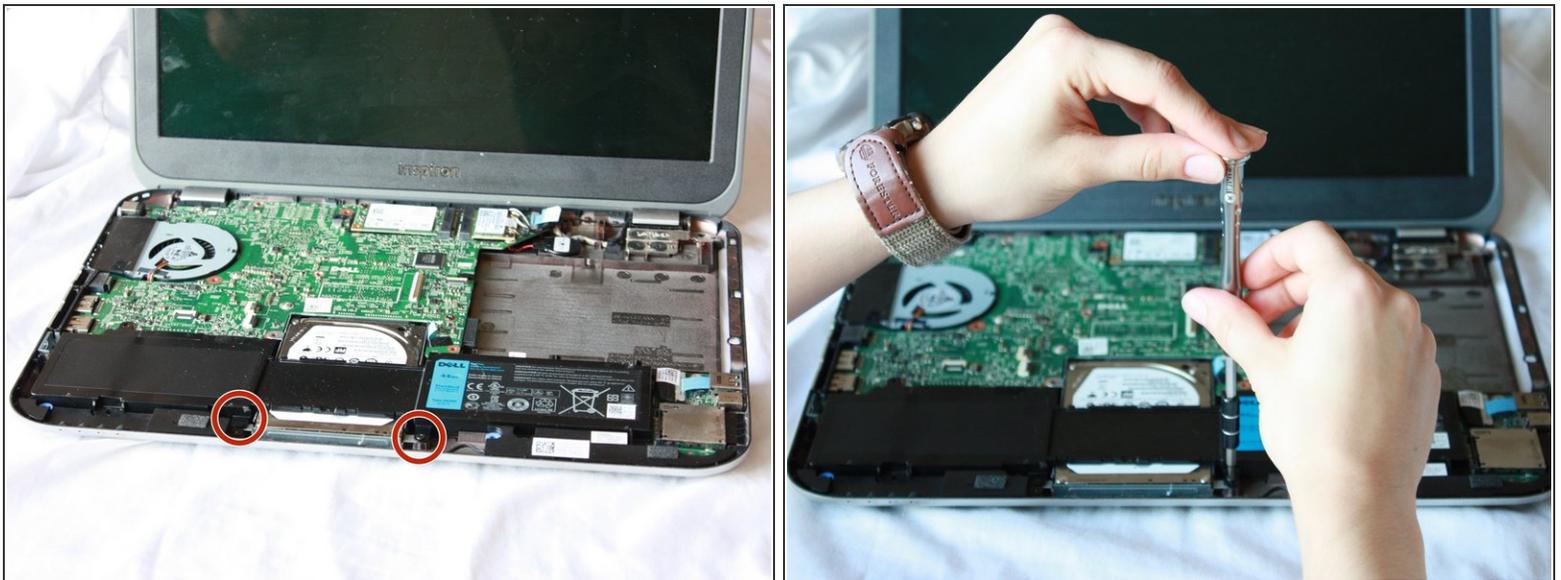


- Use a J0 Bit screwdriver to remove the two 6 mm Phillips screws securing the battery located near the bottom of the laptop.

Step 18




- Lift the tiny black tab and pull the battery out at a slight angle.

Step 19 — Daughter Board

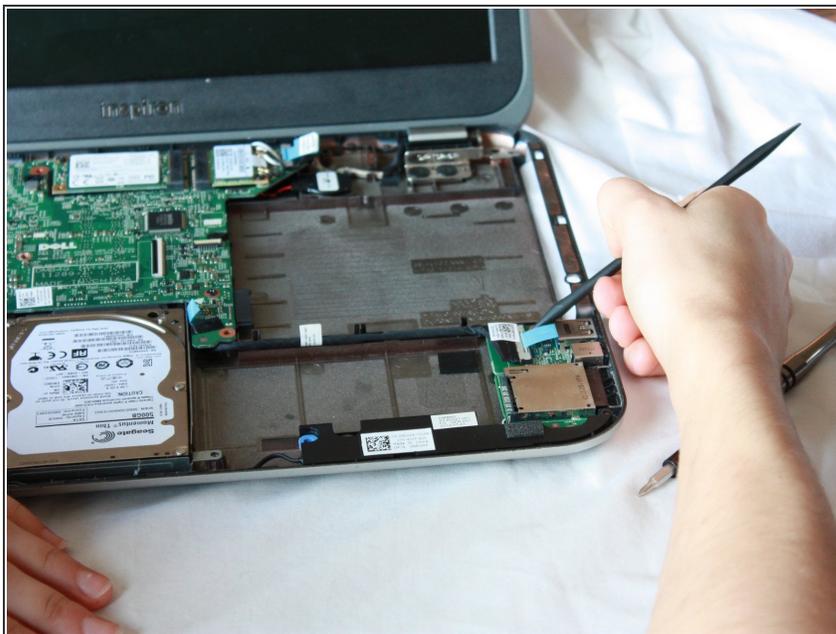


- Locate the black cord that was underneath the battery.
- Carefully lift up the chip connected to the end of the cord on the daughter board.
- ⓘ Use a nylon spudger as leverage if you are having trouble.

Step 20

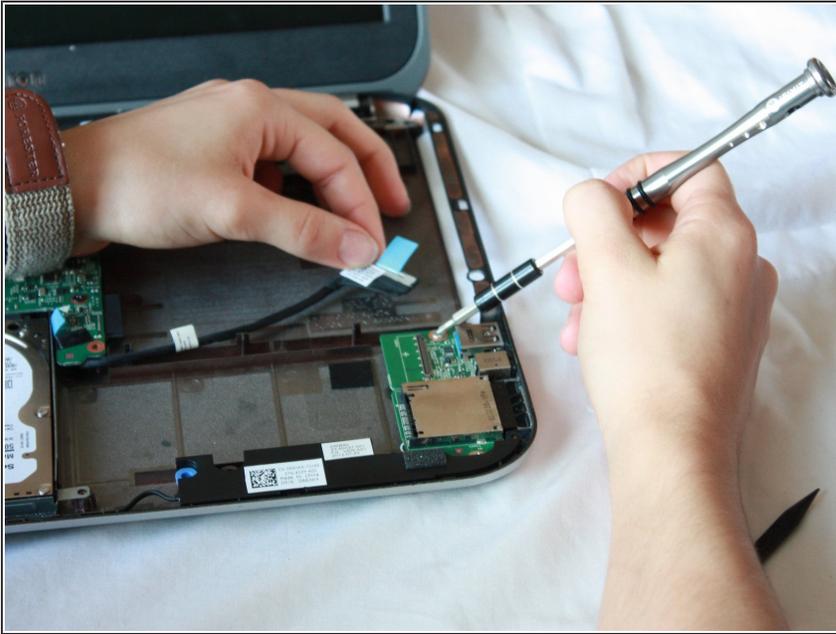


- Use a J0 Bit screwdriver to remove the two 6 mm Phillips head screw located on the daughter board.

Step 21

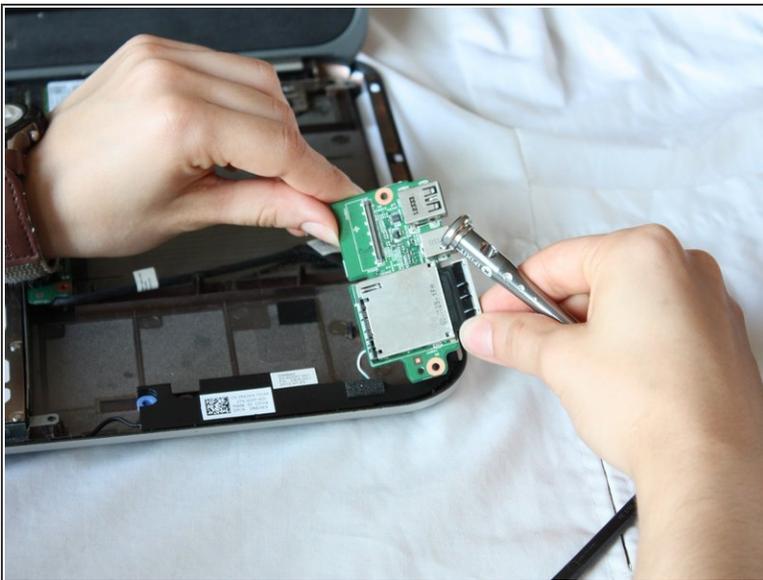

- Pick the daughter board up and flip it over.

Step 22

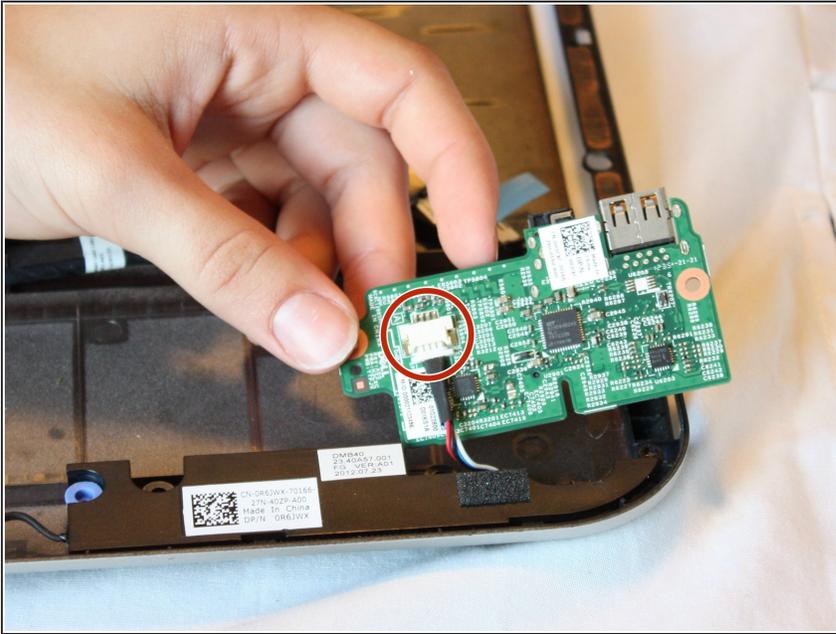


- Disconnect the black cable from the white connector by pulling the speaker cord from the daughter board.

Step 23 — Speaker



- Release the wire connecting the speakers from the securing clips by pulling them upward.

Step 24

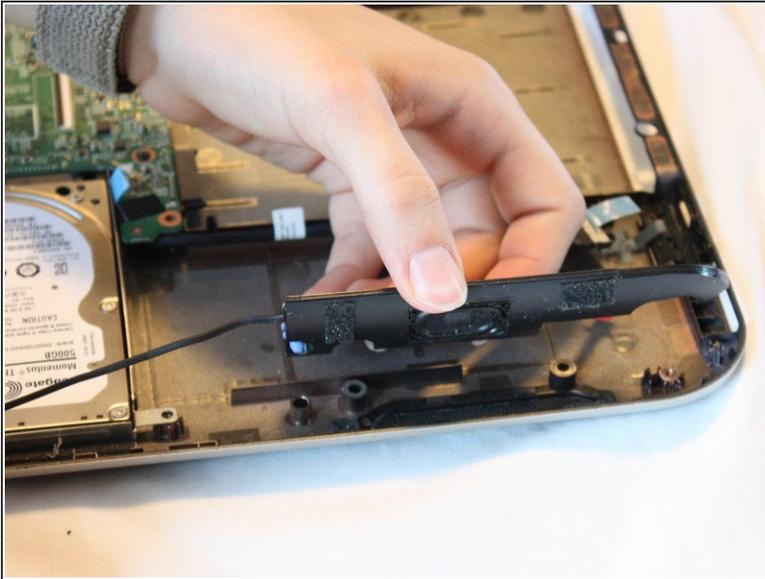

- Using a rolling motion, remove the speakers from the base of the computer
- ⓘ Adhesive foam secures the speakers to the base so you may encounter some resistance.

To reassemble your device, follow these instructions in reverse order.