




# Dell Inspiron 14z-5423 RAM Replacement

This step-by-step guide will teach users how to remove and replace the RAM memory for the Dell Inspiron 14z-5423.

Written By: Brittany

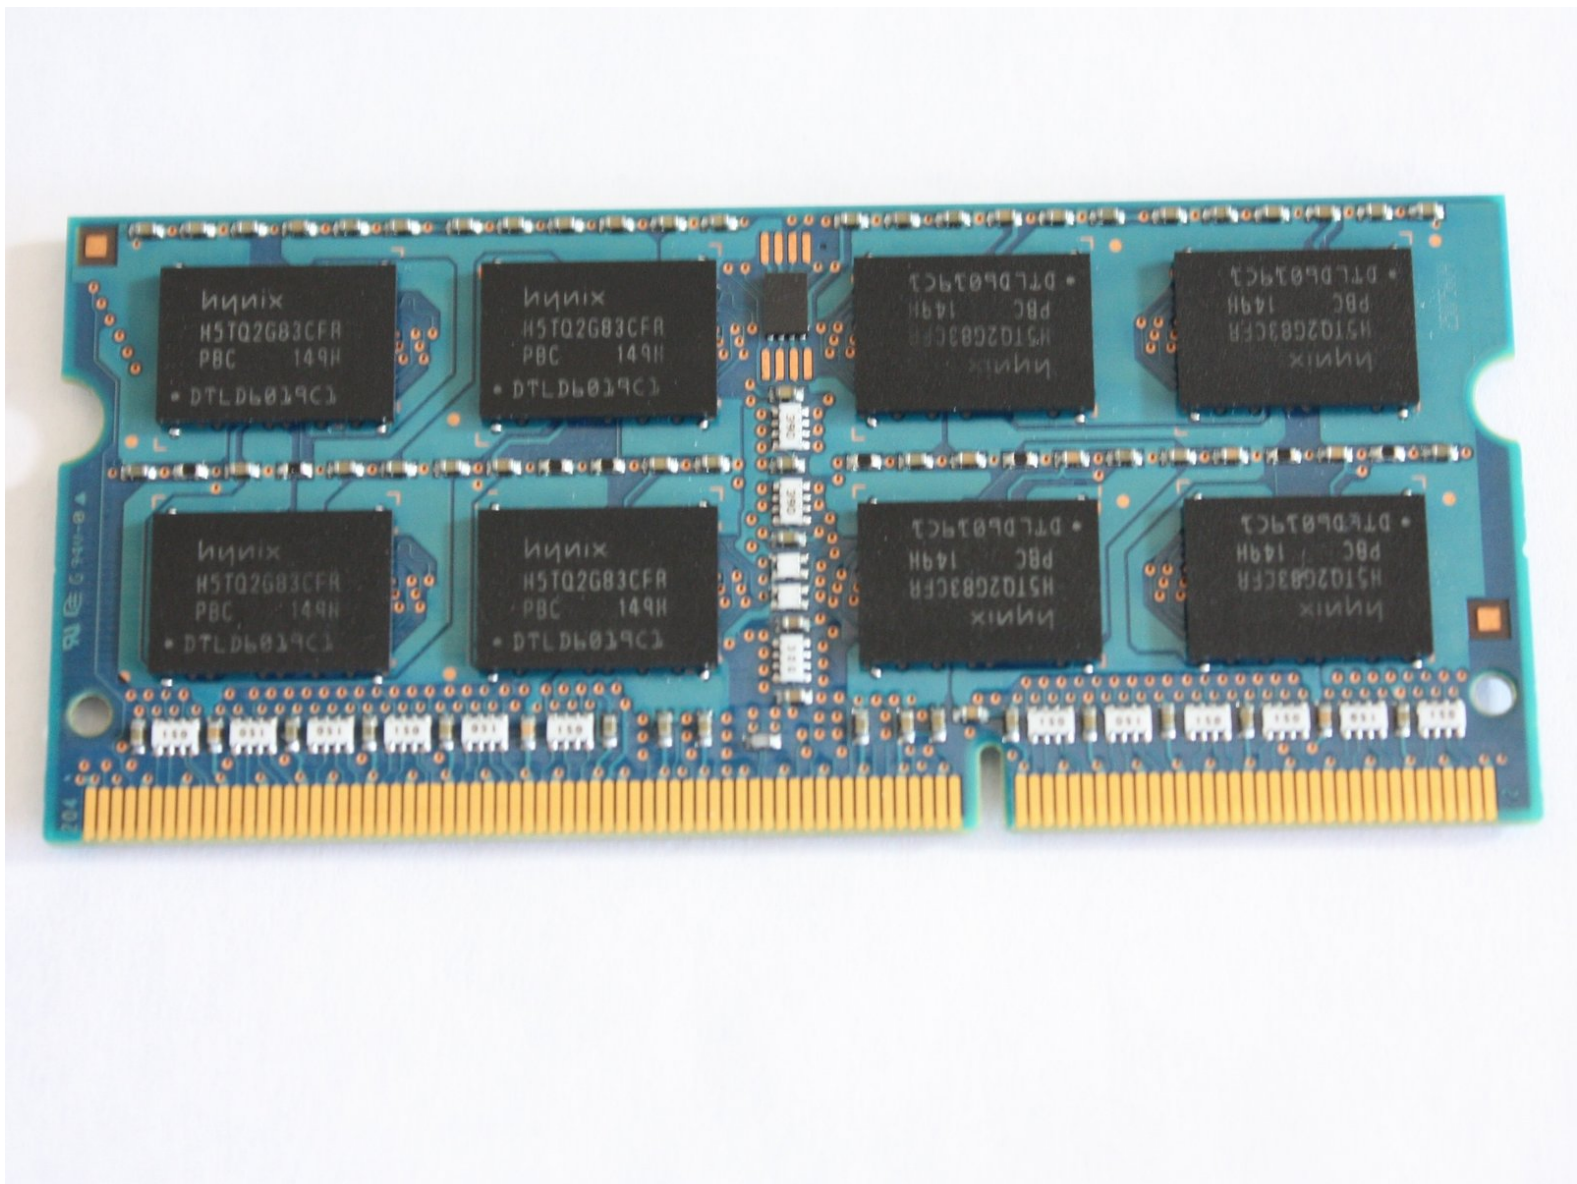

---

## INTRODUCTION

The RAM is a memory card that holds the operating system and applications in order for the computer to access data.


---



### TOOLS:

- [JIS Driver Set](#) (1)
-

## Step 1 — RAM

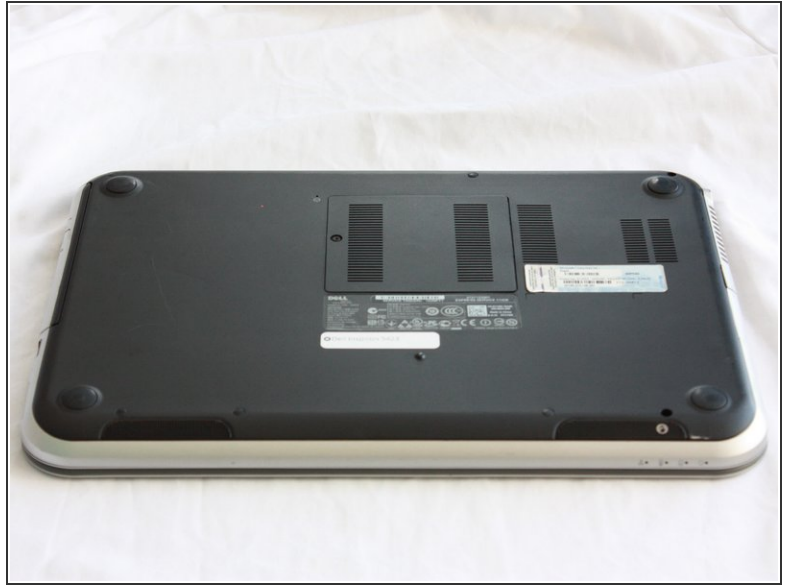

- Close the display and turn over the computer.

⚠ Make sure your device is powered down and unplugged before beginning the replacement.


## Step 2



- Use a J0 bit tipped screwdriver to unscrew the one 6 mm Phillips screw on the RAM cover.




## Step 3

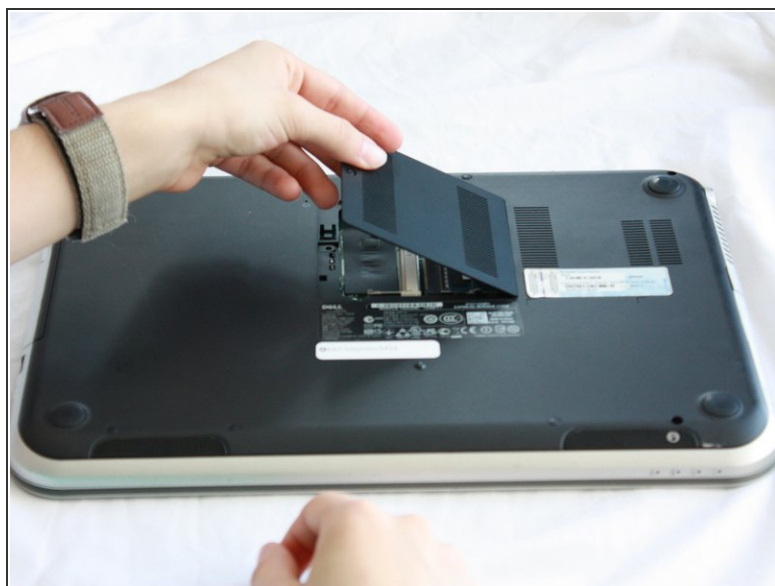

- Lightly lift the RAM cover up and at an angle, away from the computer.

## Step 4

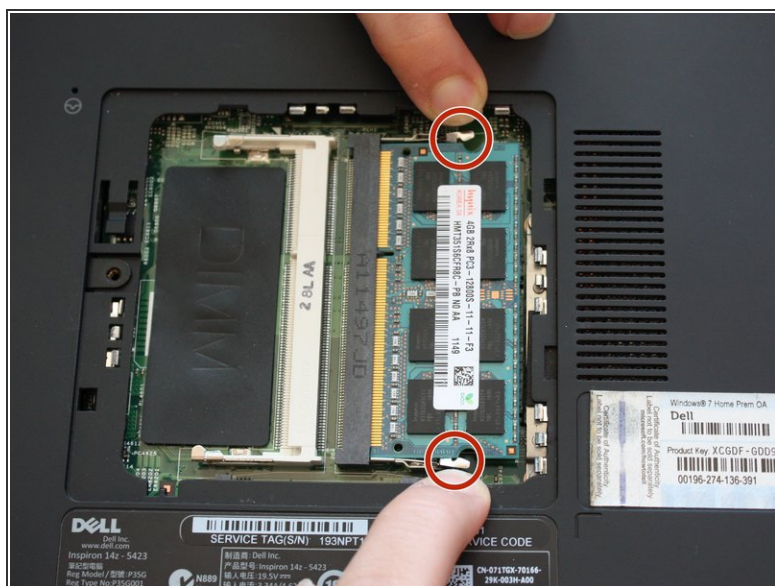

- Use your fingers to carefully pull the securing clips on the RAM away from each other.

**i** The RAM should pop up when the clips are released.

## Step 5



- Remove the popped up RAM by pulling it away from the connection.
- ⓘ If it does not pop up pry it out in a steady and straight direction.

To reassemble your device, follow these instructions in reverse order.