



Garmin Nuvi 265WT Audio Replacement

Replace a dead or distorted speaker

Written By: Patricia Gonzalez



 **TOOLS:**

- Spudger (1)
-

Step 1 — Speaker



- Lift up the Mother Board

Step 2



- Slowly remove the Blue/Black wires to unclip the Mother Board.

Step 3



- Use the nylon spudger to remove the speaker.
- ⚠ The regular black nylon spudger should be used whenever possible, especially around batteries and other sensitive internal components.

To reassemble your device, follow these instructions in reverse order.