



# Dell Inspiron 1100 RAM Replacement

This guide will demonstrate how to replace each of the two RAM sticks, collectively referred to as RAM, in the Dell Inspiron 1100.

Written By: Alexander Pacheco



---

## INTRODUCTION

RAM may need to be replaced if it is faulty or if a larger capacity is desired.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM



- Remove the one Phillips #0 screw at the bottom-center of the panel covering the RAM and remove the panel.

 The screw does not separate from the cover. Be careful when using force to remove the cover as the screw may not be completely unscrewed.

## Step 2



- Use your hands to pull the two metal tabs away from the RAM.

 The RAM will rise out when clear of the metal tabs. Do not force it into the up position.

## Step 3



- Pull out the RAM.
- ⚠ Be careful not to touch the metal contacts on the bottom of the RAM as this may damage it.
- ⓘ Store the RAM in an anti-static bag or a non-conductive surface, such as a stone or wooden table.

To reassemble your device, follow these instructions in reverse order.