



PowerA ProEX Xbox 360 Wired Controller

Buttons Replacement

Repair or replace broken or faulty buttons on the PowerA ProEX Xbox 360 Wired Controller.

Written By: Rachel Ferreira



INTRODUCTION

This guide will show you how to take apart your controller to help you access the input buttons in order to replace them. Sometimes there may be something stuck under them and all you need to do is simply remove them and clean them out.

TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Buttons



- Disassemble the case by removing the 8 screws, indicated in red on the picture, that hold the back of the case to the front of the case using a J0 screwdriver.

Step 2



- The case should come apart easily. If not, use a spudger to pry the back from the front of the case.

Step 3



- Using a pair of tweezers, remove each button and replace it with a new one.
 - A Button
 - B Button
 - X Button
 - Y Button

To reassemble your device, follow these instructions in reverse order.