




Aluratek ADMPF310F Speakers Replacement

Sound in your Aluratek digital photo frame not working? This guide will walk you through how to replace the speakers.

Written By: Chris Belair

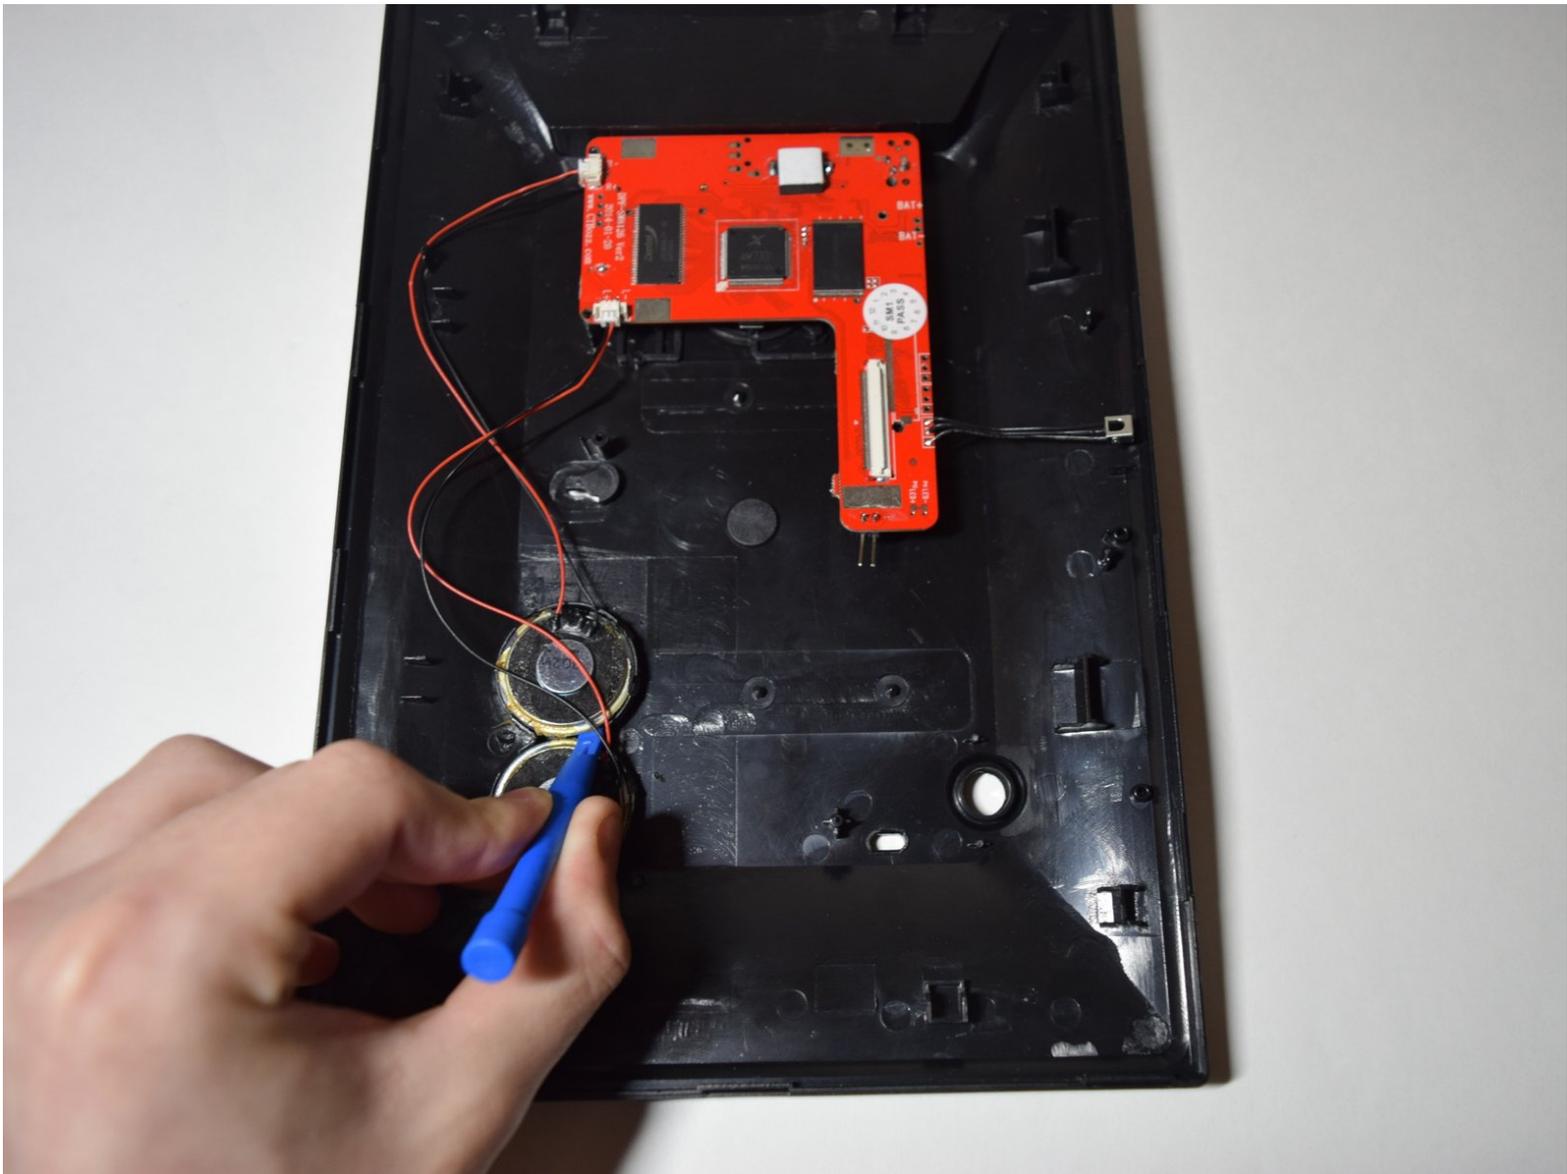

INTRODUCTION

This guide is for the fix it yourself type of guy who doesn't want to pay for new digital frame. This guide also requires soldering for more on how to solder check the link [here](#).

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speakers



- Using the plastic opening tool pry off the clips all around the frame. You will hear a popping sound for every clip

 Be sure not to pry too hard because you could crack or break the plastic facing of the device.



Step 2



- Lift screen out of place so you can access the plugs that connect it.



 Be careful not to pull the screen too far away when placing to the side, many fragile wires are connected.

Step 3

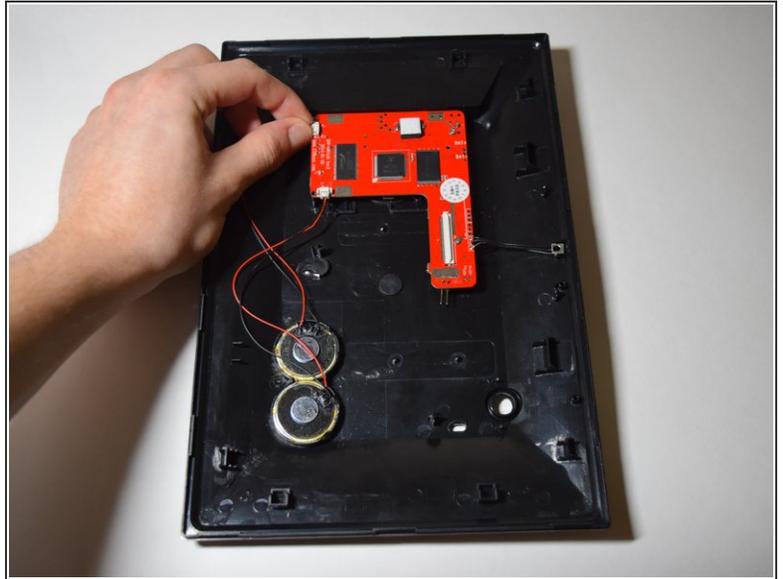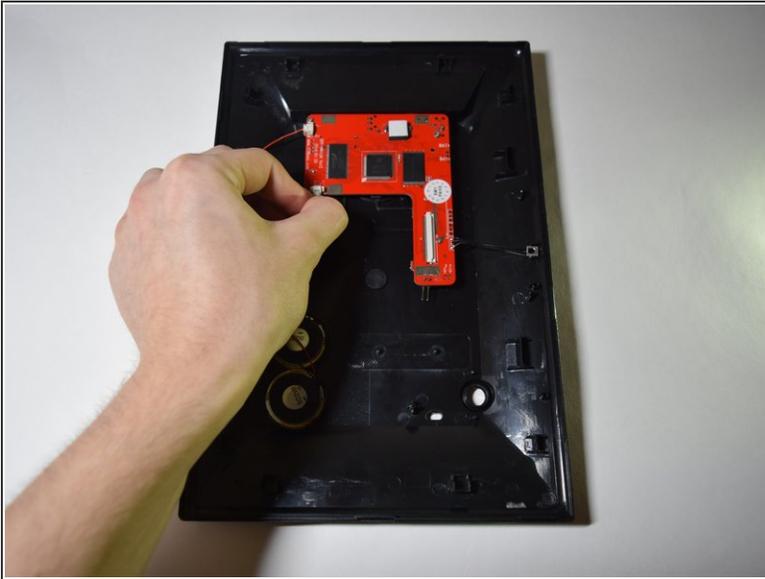


- Unplug both plugs for the speakers to the motherboard

Step 4

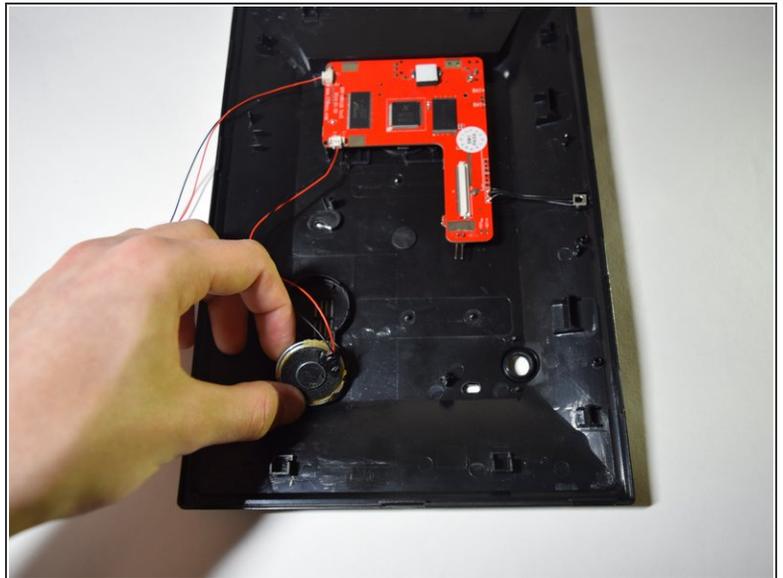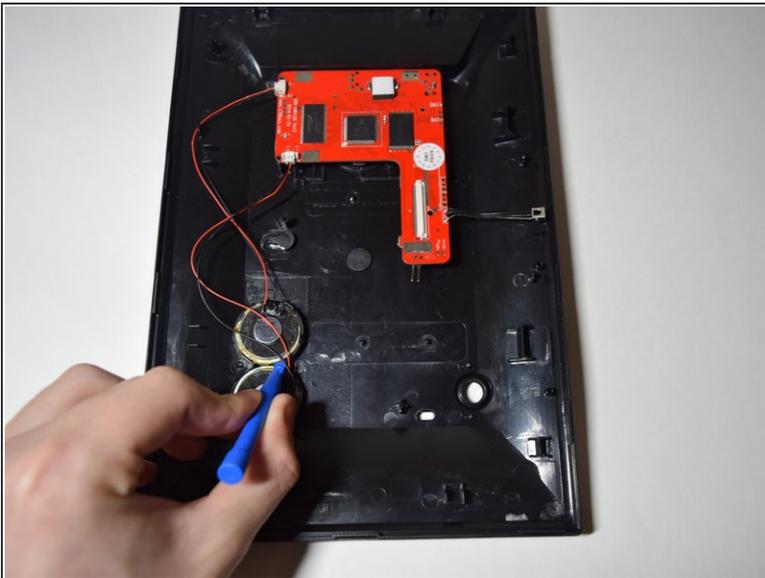

- Use plastic opening tool to pull out one of the speakers.
- Then use your hand to take out the other speaker

Step 5

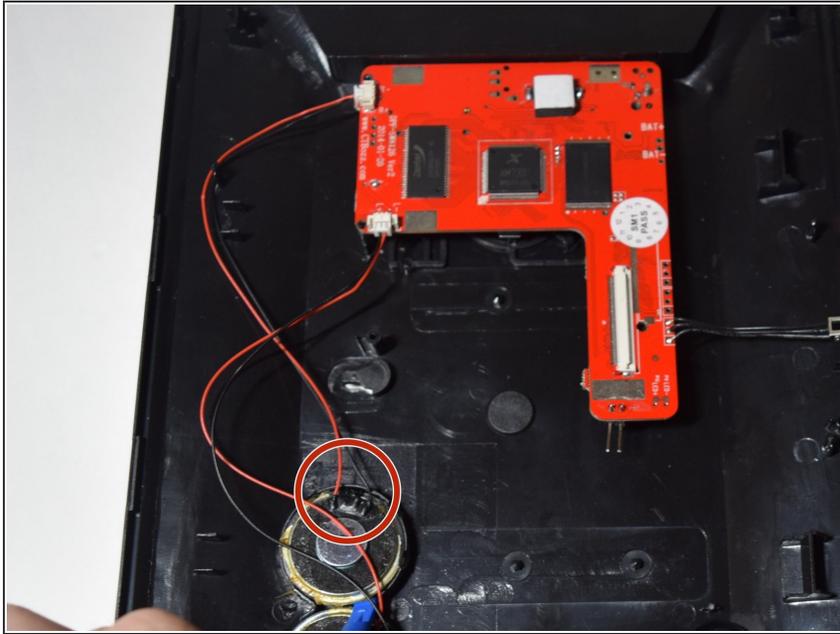

- Disconnect the wires off of the old speakers and solder the old wires onto the new speakers.

To reassemble your device, follow these instructions in reverse order.