



# Olympus Digital Camera TG-3 Lens Ring Replacement

This guide provides the steps for removing the metal ring around the lens of the camera.

Written By: Natalia Morales



---

## INTRODUCTION


This guide requires you to handle sharp metal objects. Proceed with caution. To avoid misplacing the screws hold them in place with masking tape. Make sure your hands are clean and dry before they come in contact with the internal parts of the camera.



### TOOLS:

- [Phillips #000 Screwdriver](#)—(if iPhone has external Phillips screws) (1)
  - [iFixit 6 Inch Metal Ruler](#) (1)
-

## Step 1 — Front Case

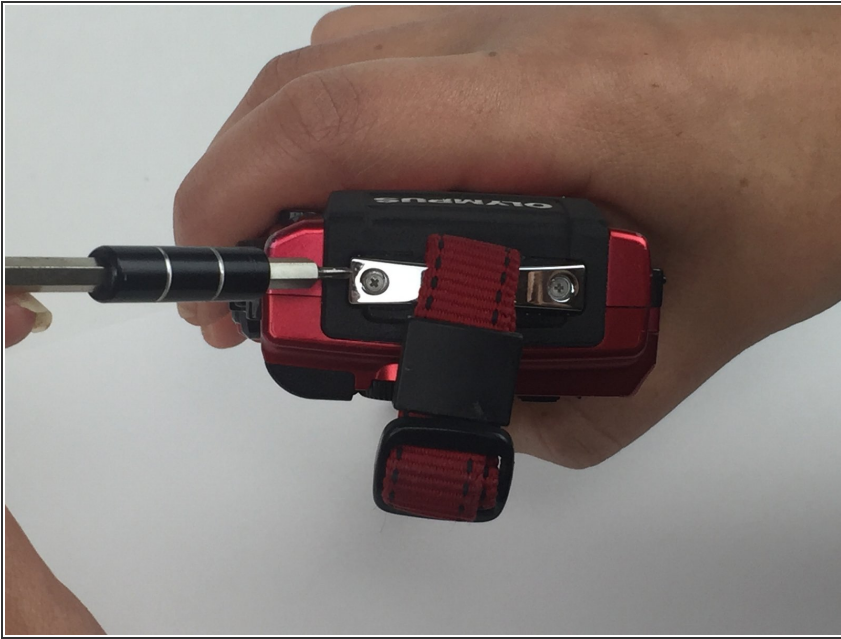

- Locate the strap eyelet side of the camera and use the PH000 screwdriver to remove the two 5.3mm screws that hold the strap.

## Step 2



- Locate the side of the camera containing the HDMI port. Use the PH000 screwdriver to remove the 5.4mm screw located on the lower left side below the port.

## Step 3



- Using the PH000 screwdriver, remove the 3.8mm screw located inside the HDMI port.



## Step 4



- Locate the bottom section of the camera. Using the PH000 screwdriver, remove the two 4mm screws located towards the middle (near the battery compartment).

## Step 5



- Now you should be able to remove the front case easily using your hand.

## Step 6 — Lens Ring



- Twist the ring around the camera lens and pull it out.

To reassemble your device, follow these instructions in reverse order.