



# HP G60T-600 CTO CD Player Replacement

This guide will show you how to remove and replace your CD player from your device.

Written By: Dominic DeSantis



---

## INTRODUCTION

You will be removing and replacing your CD player from the device.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



**!** Failure to remove the battery before performing any replacement guide may result in electric shock.

- Close your device, then turn it over.

## Step 2



- Place your index finger on the ridged tab.

### Step 3




- Apply moderate pressure to the tab and slide it to the right.
- While the tab is on the right, you should be able to gently slide your battery out of your device.

### Step 4 — Keyboard




- Unscrew the following 5mm screws with a #0 Phillips screwdriver.

## Step 5

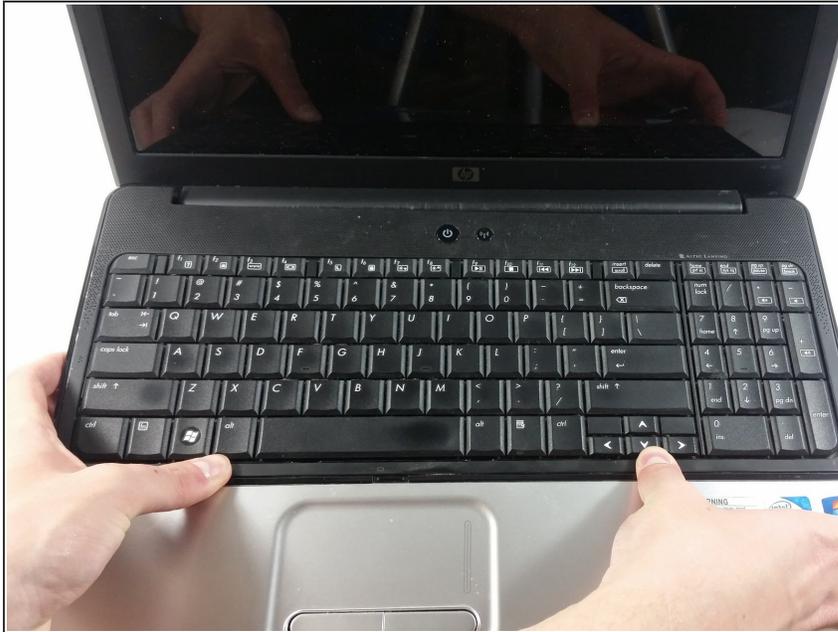



- Turn your laptop over and open it up.
- Grip your laptop firmly from both sides and use your thumbs to slide the keyboard towards the screen.

## Step 6

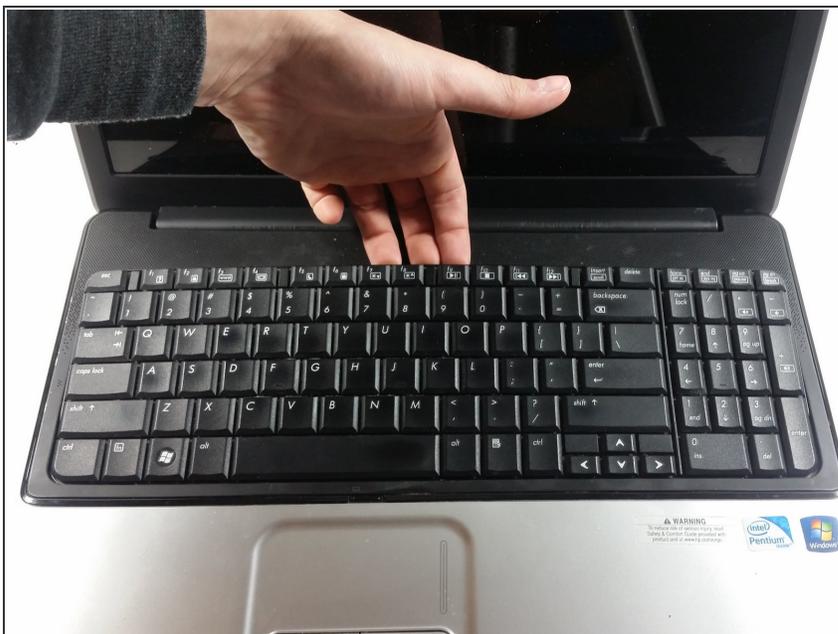


- Pull up on the top of your keyboard with medium force. It should start to pop out.
- ⓘ A plastic opening tool may facilitate this task.
- Run your hands underneath the edges of the keyboard until it is free from the device.
- ⚠ Do not pull hard to take the keyboard out. There is a small connection that needs to be undone.

## Step 7

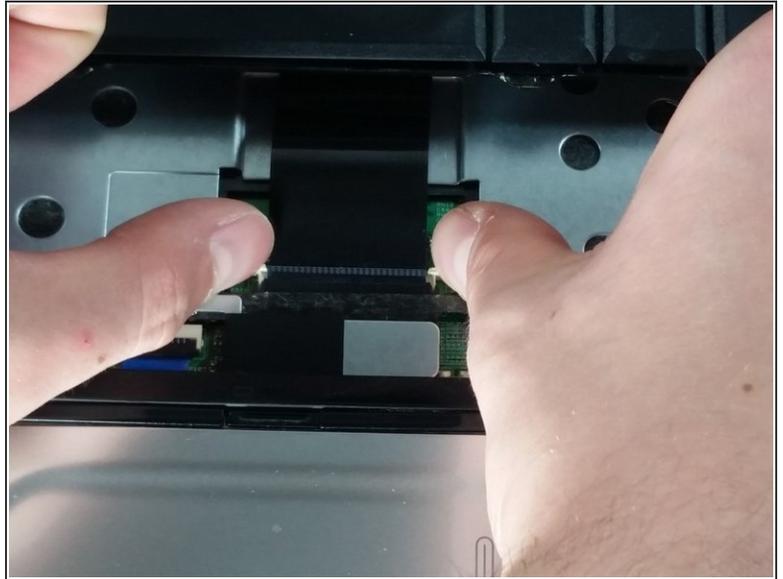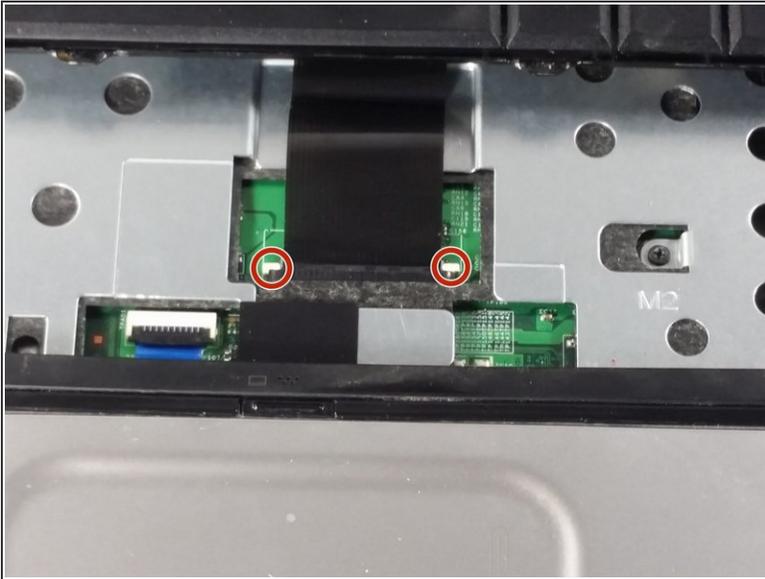


- Place your thumbs on the two small, white tabs.
- Push these tabs forward to release the connection and free the keyboard from the device.

## Step 8 — Power Button Frame

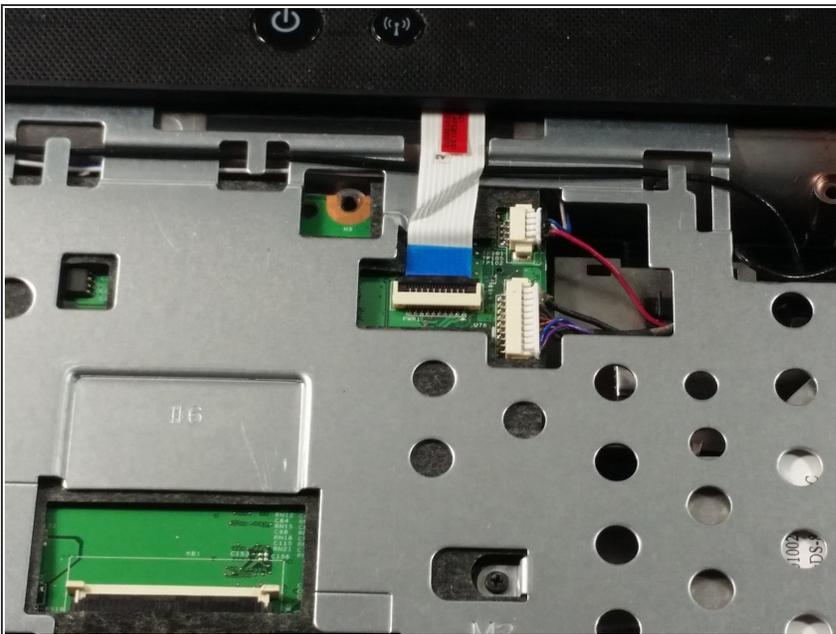

- Similarly to how you remove the keyboard, gently pry a small section of the power button frame up.

## Step 9

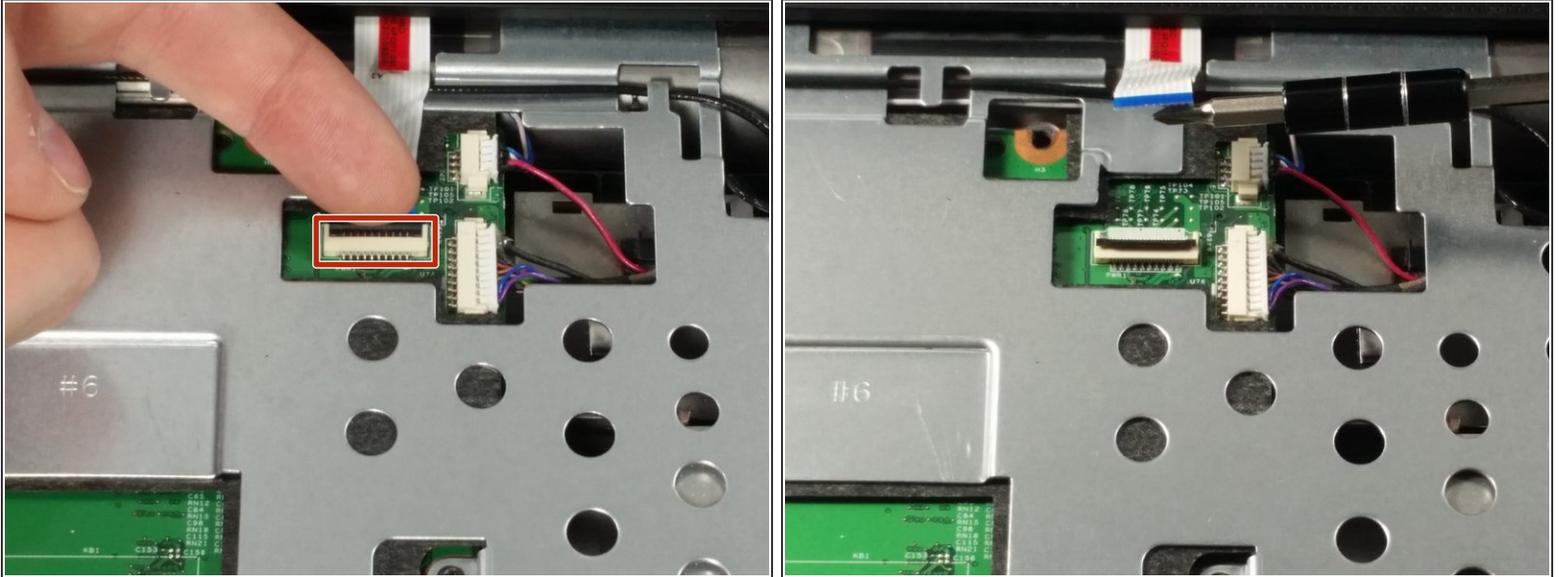

- Gently pull the white tab upwards.
- With similar force, pull the connection out.
- You are now free to pull the power button frame off of your device.

## Step 10



- Unscrew the 5mm screw holding the CD player in place.

## Step 11 — CD Player



- Slide the CD player case away from the device with medium-hard force, it should come right out.

To reassemble your device, follow these instructions in reverse order.