


HP 7 Plus 1302 Motherboard Replacement


Written By: Damaris Torres-Crespo

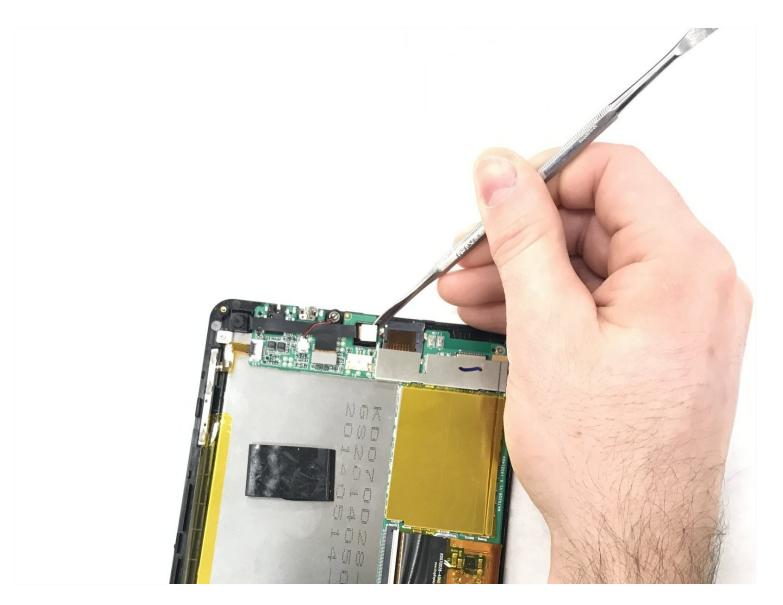


TOOLS:

iFixit Opening Tool (1)
T5 Torx Screwdriver (1)
Spudger (1)
Metal Spudger (1)
Phillips #000 Screwdriver (1)

Step 1 — Back Cover

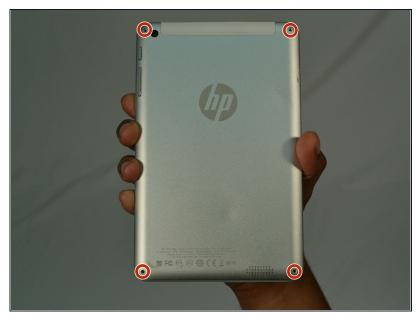

- Using the T5 Torx Screwdriver, remove the T5x3mm screws located in all 4 corners.
- ⚠ Device should be turned off and unplugged before starting the replacements.

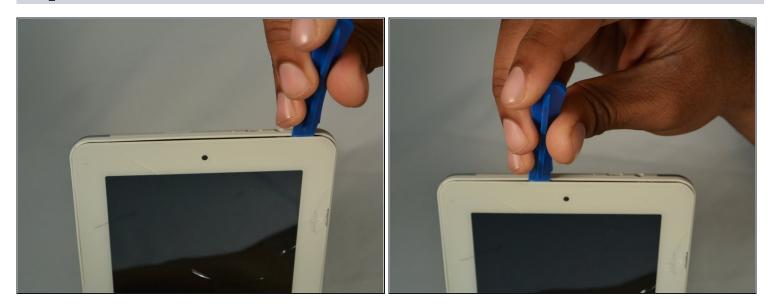

- Use the plastic opening tool to push in between the front and the back of the tablet.
- Slide the plastic opening tool around all 4 sides of the tablet to separate the back cover.

⚠ Be careful when you are trying to remove the back as it can damage the screen if you force it too much.





- Continue sliding the plastic opening tool around the tablet until all 4 sides are separated from each other.
- Remove the back cover.

Step 4 — Battery






- Push out the battery connector using the spudger.
- Swing the battery connector clear of the connector socket.



• Lift the battery from the device.

Step 6 — Motherboard

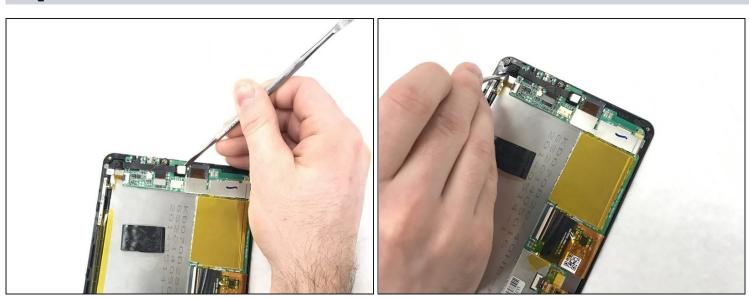

• Pry the connector that attaches the front and back camera with a metal spudger.





• Pull the camera from the connectors.

Step 8





• Identify the three T5x1mm screws and remove them with a Phillips #000





- Unplug the connector with the <u>tweezers</u>.
- Remove the tape.

Step 10






- Flip the ZIF connector with the metal spudger.
- Pull the ribbon connector out.






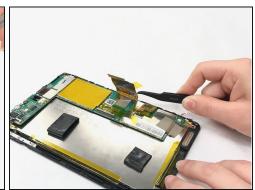


- Pull the orange tape with the tweezers.
- Flip the ZIF connector with the spudger.
- Pull the ribbon connector with the tweezers.

Step 12

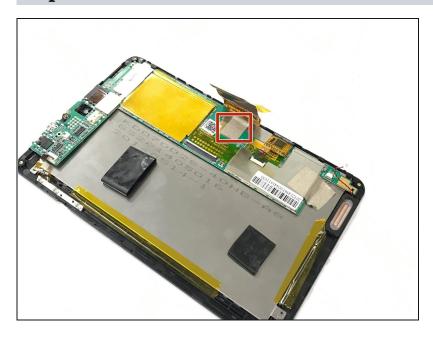

• Remove the gray tape below the ribbon connector.

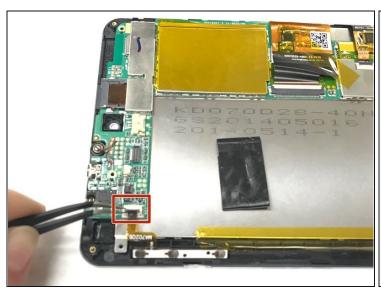




- Flip the ZIF connector.
- Pull the ribbon connector out with the tweezers.

Step 14



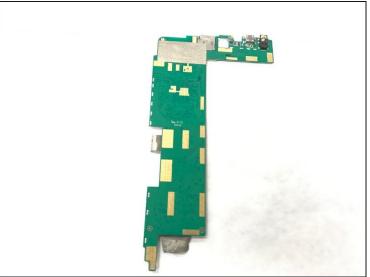

• Pull the circuit board off.

To reassemble your device, follow these instructions in reverse order.