



Sony DVP-FX730 Cover Replacement

To access the internals of the Sony DVP-FX730,...

Written By: Rogelio Garcia




INTRODUCTION

To access the internals of the Sony DVP-FX730, the cover must be removed. If there is a problem with one of the components on the cover, it may need to be replaced. A screwdriver should be used to remove screws and rubber feet to remove the cover successfully.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Cover

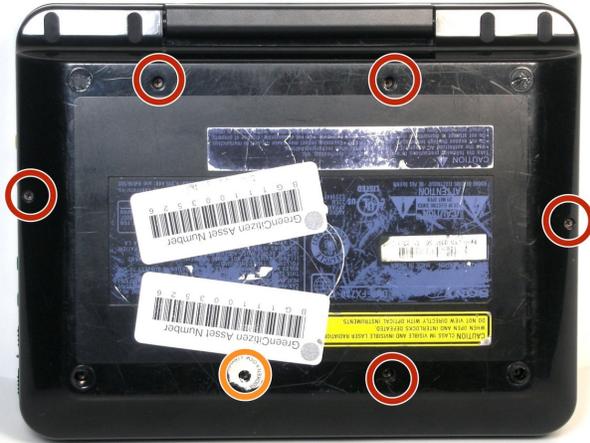

- Remove the five exposed 7.9 mm screws using a Phillips screwdriver.
- Punch through the warranty sticker with the spudger.
- Remove the screw underneath with the Phillips screwdriver.

Step 2



- Remove the rubber feet using the spudger.
- Remove the screws that were covered by the rubber feet.

Step 3



- Hold on to the corners of the cover and gently lift the cover.

⚠ The tray is still connected to the base with wires.

Step 4



- Gently remove the wires with tweezers by pulling up on the base they are attached to.

To reassemble your device, follow these instructions in reverse order.