



# Sony DVP-FX730 Battery Replacement

If there is a problem with the device's supply...

Written By: Andrew Ward



# INTRODUCTION

If there is a problem with the device's supply of power, the battery may need to be replaced.

## TOOLS:

Spudger (1)

Phillips #0 Screwdriver (1)

## Step 1 — Cover



- Remove the five exposed 7.9 mm screws using a Phillips screwdriver.
- Punch through the warranty sticker with the spudger.
- Remove the screw underneath with the Phillips screwdriver.

## Step 2



- Remove the rubber feet using the spudger.
- Remove the screws that were covered by the rubber feet.

## Step 3



- Hold on to the corners of the cover and gently lift the cover.
- ⚠ The tray is still connected to the base with wires.**

## Step 4





- Gently remove the wires with [tweezers](#) by pulling up on the base they are attached to.

## Step 5 — Battery




- Identify the battery with the 2 blue stickers.

## Step 6

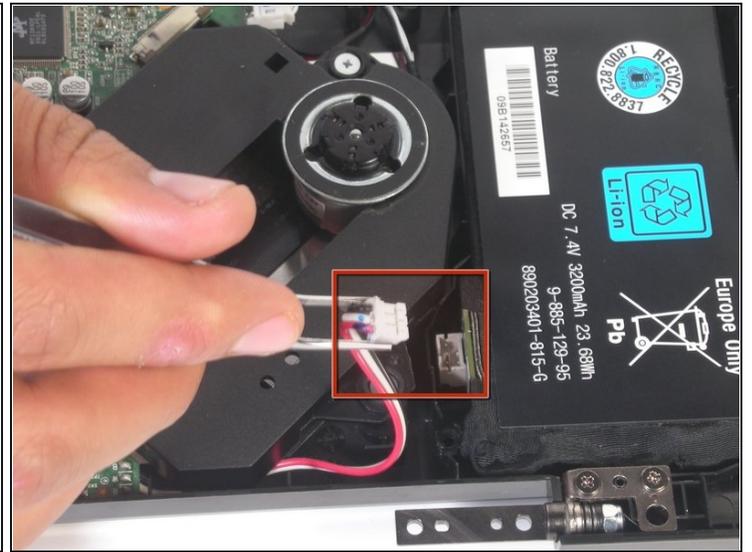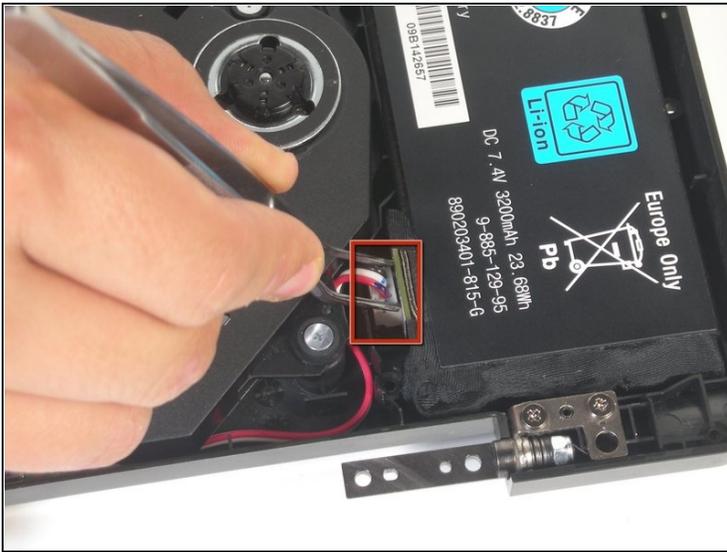

- Remove the white and red wires from the battery by pulling on the base with [tweezers](#).

## Step 7

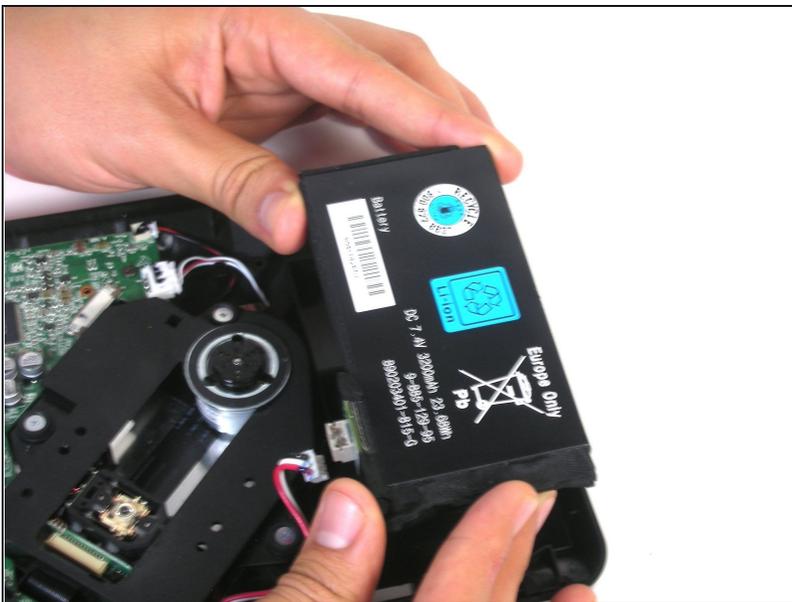

- Remove the battery from the case.
- It will still be held down at the bottom with a piece of tape, so you may need to pull up with force.

To reassemble your device, follow these instructions in reverse order.