



Packard Bell EasyNote TJ65-CU-030GE Battery Replacement

Replace the battery of your Packard Bell EasyNote TJ65-CU-030GE.


Written By: Jasmin



INTRODUCTION


The removal of the battery is one of the easiest tasks on the Packard Bell EasyNote TJ65-CU-030GE. It is strongly recommended to remove the battery before conducting repairs on the laptop. No tools are needed.

Step 1 — Battery

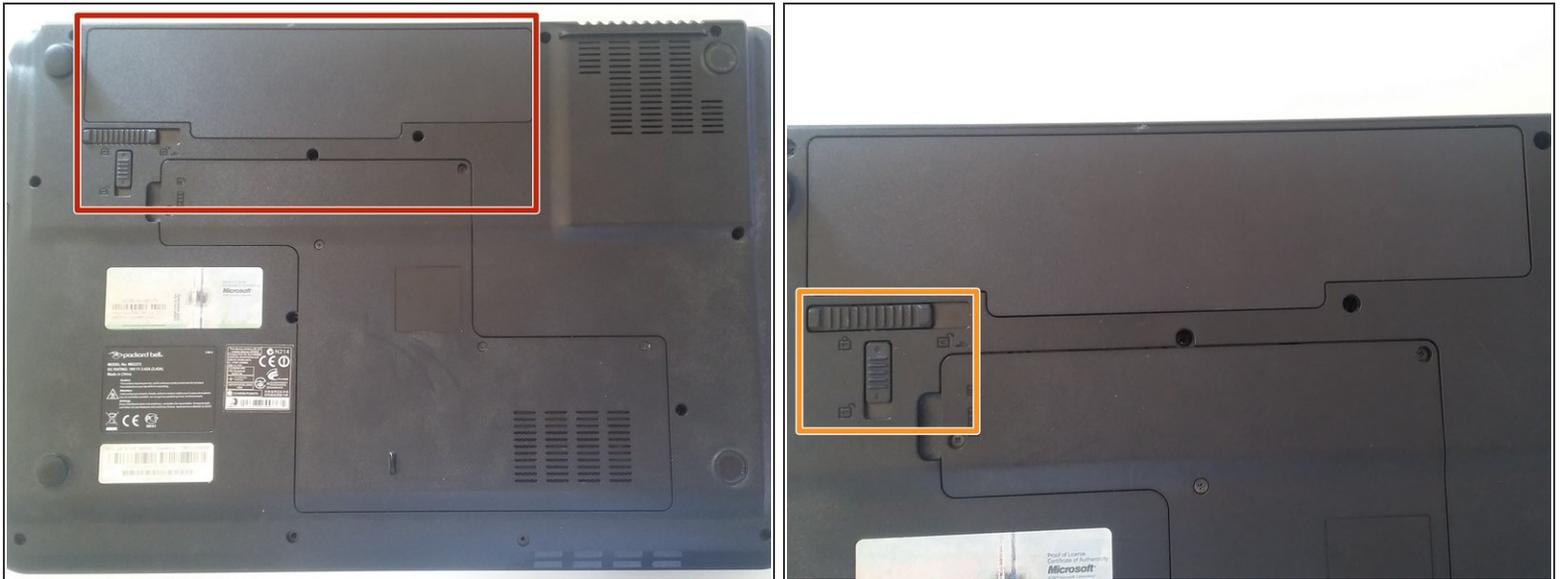

- The battery is located on the top left corner of the backside of the device.
- On the left side underneath the battery drawer, you can see two battery lock switches located in the shape of a T.
- ⓘ At the beginning, both switches should be switched to the locked position.

Step 2

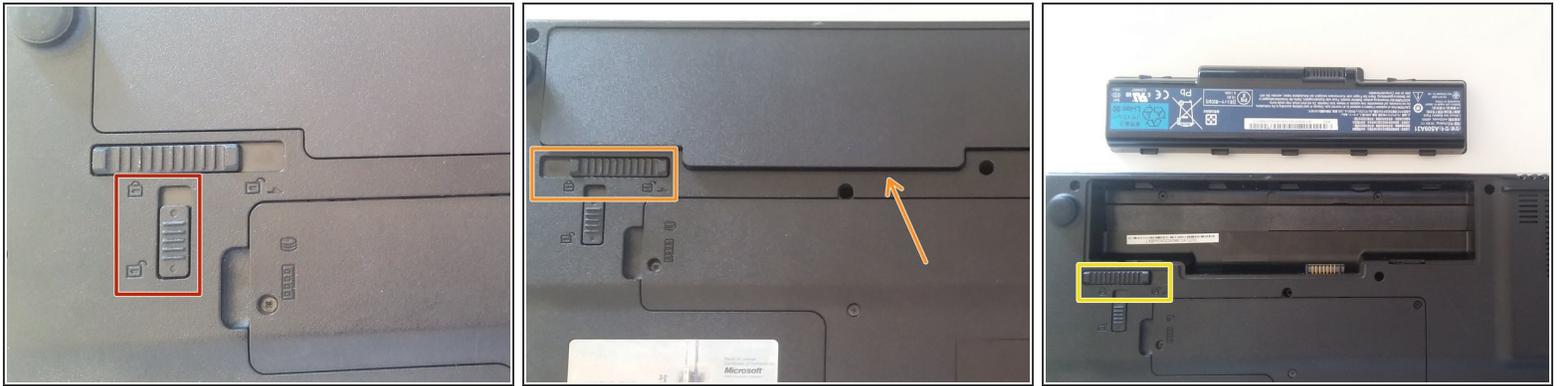

- Slide the vertical battery lock switch downwards to the image of the unlocked padlock.
- Now you can move the horizontal battery lock switch to the right.
 - ⓘ You need to apply some pressure to fully move over the switch. At the hardest part, the battery drawer will spring open.
- Now you can remove the battery block completely.
 - ⓘ By doing this, the horizontal switchlock will jump back to its original position on the left side.

To reassemble your device, follow these instructions in reverse order.