



# Sony Cyber-shot DSC-HX90V Battery Replacement

A point and shoot camera made by Sony, 18 MP- 1/2.3" BSI-CMOS sensor and 1920-1080 video resolution.

Written By: Marin Rusinov



## INTRODUCTION

This guide will show you how to replace the battery.

## Step 1 — Battery



- ⓘ Ensure the camera is turned off prior to the removal of the battery.
- Place the camera upside down with the top sitting on the flat surface.
- Using your fingers, slide the door lock to the unlock position.

## Step 2



- Open the battery compartment door.
- Remove the battery from the compartment by turning the camera upside down.
- ★ Insert the new battery into the compartment matching the positive battery lead to the positive terminal and the negative battery lead to the negative terminal on the camera.

To reassemble your device, follow these instructions in reverse order.