


Tapwave T2907US Zodiac 2 Touchscreen/Display Replacement

Use this guide when you need to replace your...

Written By: Daniel Wiseman

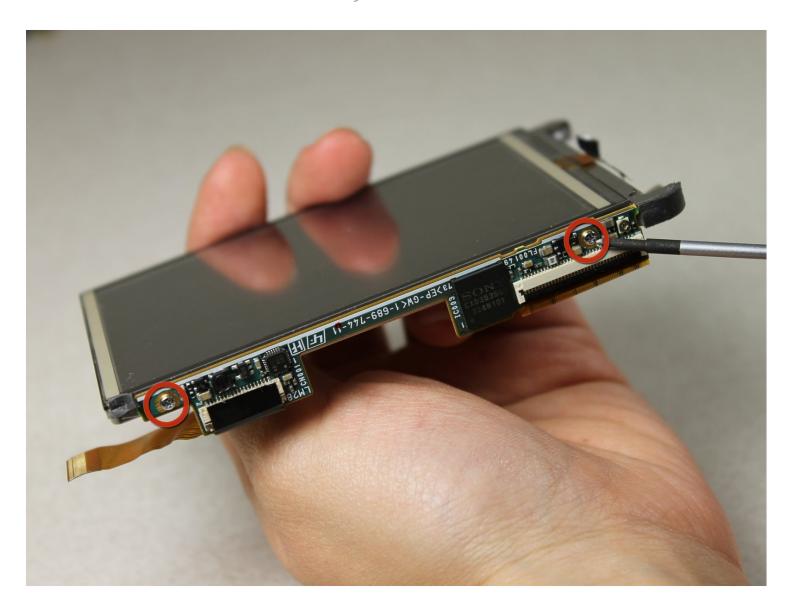

INTRODUCTION

Use this guide when you need to replace your display due to a clumsy mistake.

TOOLS:

Tweezers (1)
Phillips #00 Screwdriver (1)
Spudger (1)
T5 Torx Screwdriver (1)

Step 1 — Back Cover



• Remove the four Torx T5 screws from the back panel.




- Wedge a spudger in between the front and back panel.
- Apply leverage downwards to the spudger in order to remove the back panel.

Step 3 — Battery



- Slide the battery out from under the brown wire-tape.
 - Be careful of the wires still connected to the other end of the battery. Do not pull or damage may occur.

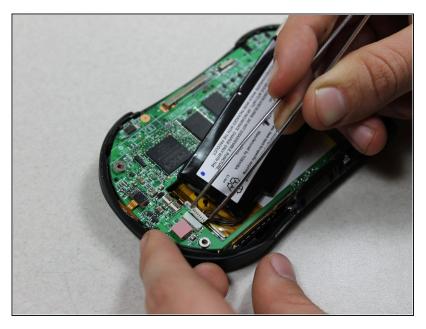


 Slowly pull the white plug from its receptor. Grasp its sides firmly with a pair of tweezers and gently wiggle from side to side.

Step 5 — Motherboard




Unscrew the 2 Philips #00 screws on each end of the motherboard.

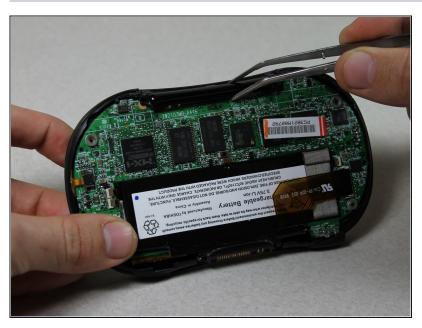



• Pull off the black memory card slot piece with <u>tweezers</u>.

Step 7

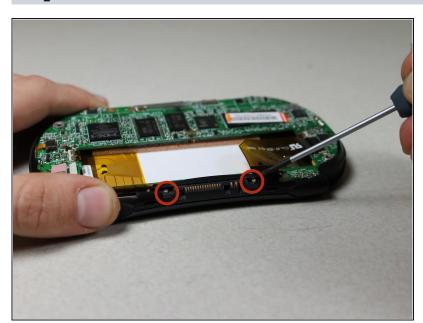


 Unscrew the 2 Philips #00 screws on each side of the charging port.

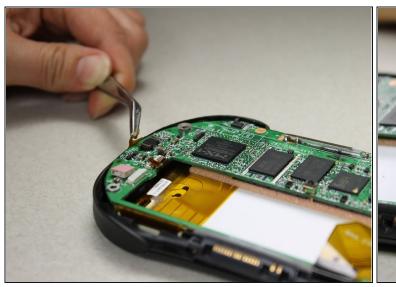

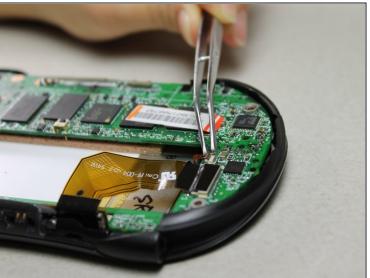


• Disconnect 2 brown wire-tape ends from each end of the motherboard. Gently pull straight out with tweezers.

Step 9

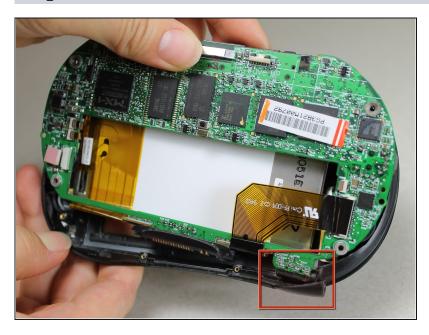

- Pull the motherboard and screen component diagonally up and left away from the auxiliary port entrance to remove.
- i Glue connecting the auxiliary port to the casing may make it difficult to remove. Gently apply force as needed.

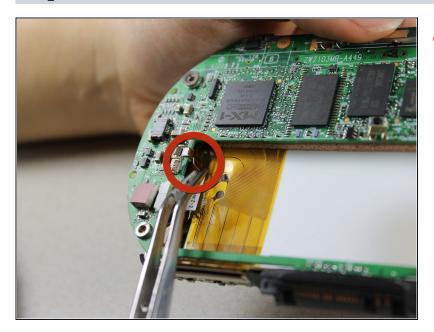

 Disconnect the 2 brown wiretape ends from the left side of the battery slot on the motherboard using tweezers.

Step 11









- Disconnect the large brown wire-tape from the motherboard.
 - Peel the black tape back from the wire-tape using tweezers.
 - Lift the black, hinged, plastic lock with tweezers to release the wire-tape.
 - The screen and motherboard components can now be separated from each other.

Step 12 — Touchscreen/Display

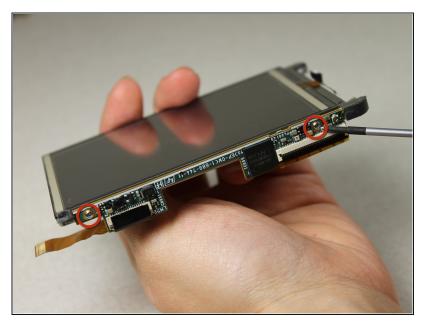


 Unscrew the 2 Philips #00 screws from the bottom edge of the screen component.

Step 13

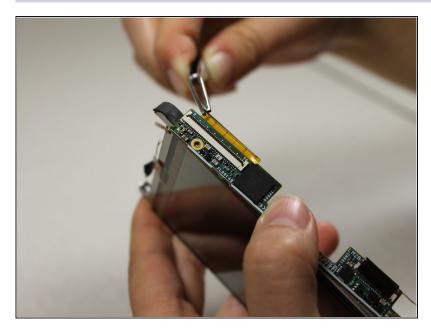

- Take off the brown wire-tape from the small circuit board component.
- Lift up so that the black plastic hinge piece swings open and the tape can be removed.



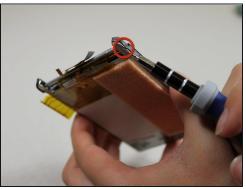



- ⚠ Warning: If you are too rough with the screwdriver, you can permanently damage the display.
- Use a Slot SL1.5 screwdriver to pry the touchscreen shell from the display component using the 4 slots around the entire component

To reassemble your device, follow these instructions in reverse order.