



Nikon COOLPIX P2 Case Replacement

Step-by-step instructions on replacing the plastic outer casing of the camera.

Written By: Jessica Brough



INTRODUCTION

Replace the outer casing of your camera if it is damaged.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Case




- Remove the screw located near the speaker port using a Phillips 00 screwdriver.

Step 2

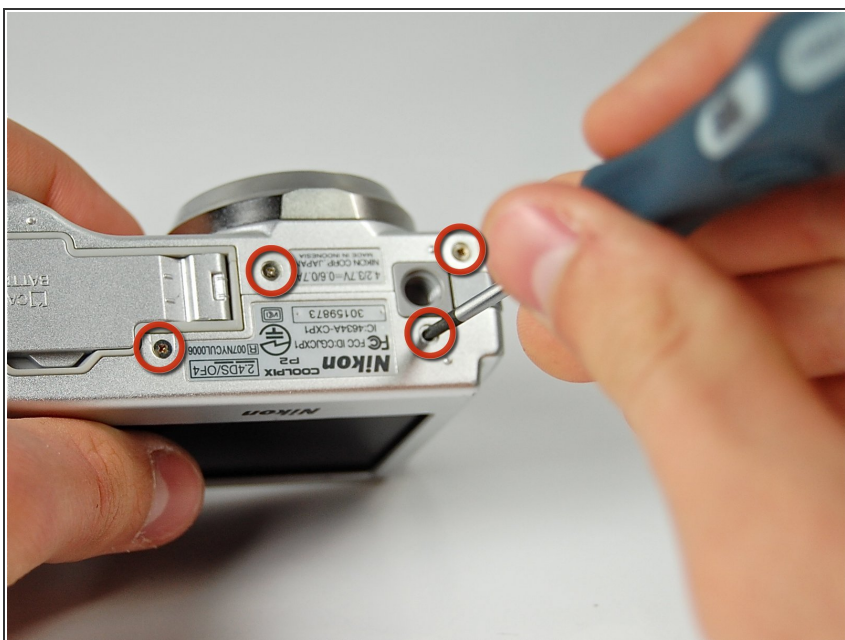

- Turn camera upside down so that the battery compartment is facing you.
- Remove all four screws from the bottom of the camera with a Phillips 00 screwdriver.

Step 3

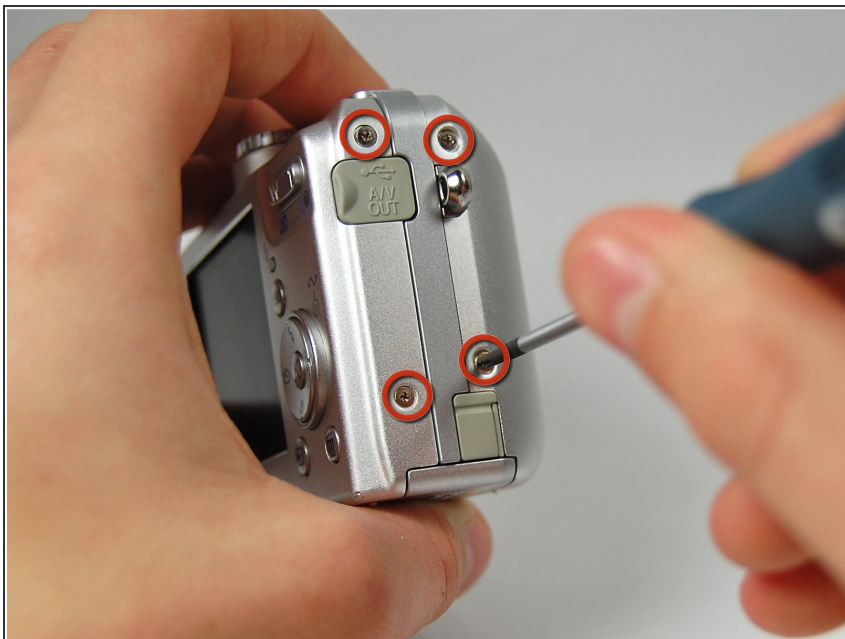

- Rotate the camera to the opposite side where the A/V outlet is located.
- Unscrew and remove all four screws with a Phillips 00 screwdriver.

Step 4




- Turn the camera so that the Wi-Fi adapter is facing you.
- Unscrew and remove all four screws with a Phillips 00 screwdriver.

Step 5



- Using a plastic opening tool, pry the front casing of the camera.
- Continue this motion all around the front casing of the camera.
- Gently pull apart the front casing from the rest of the camera.

Step 6

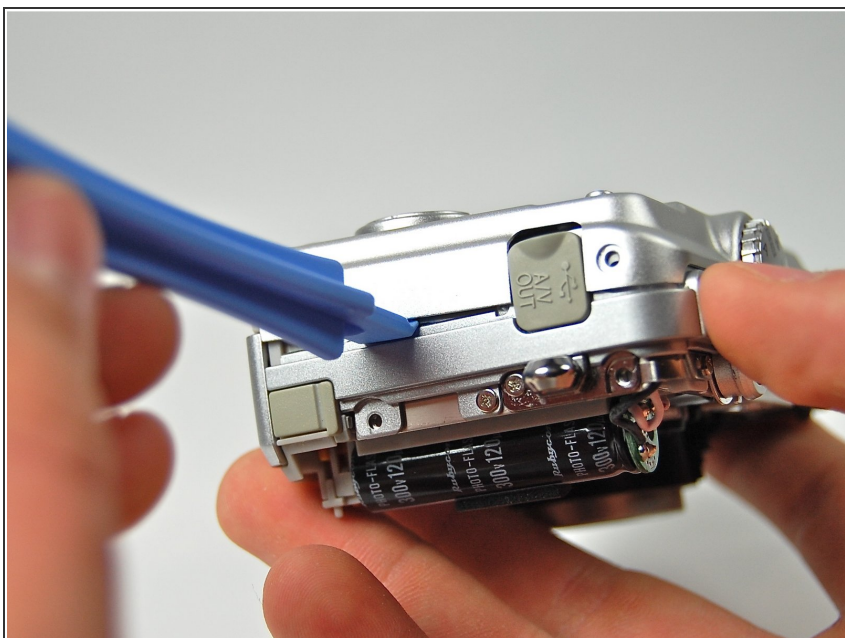

- Using the plastic opening tool pry the back casing of the camera.



Step 7



 Orange ribbon is fragile

- Carefully pull apart the back casing of the camera from the front of the camera without tearing the orange ribbon.

Step 8

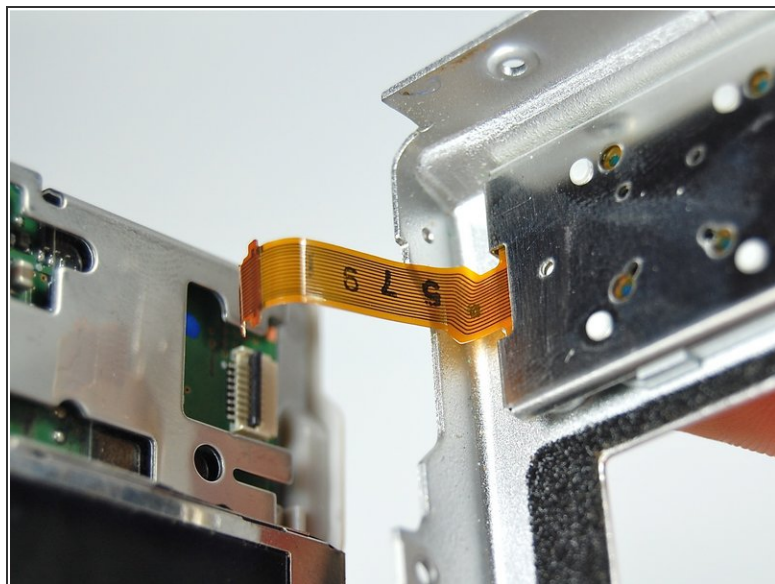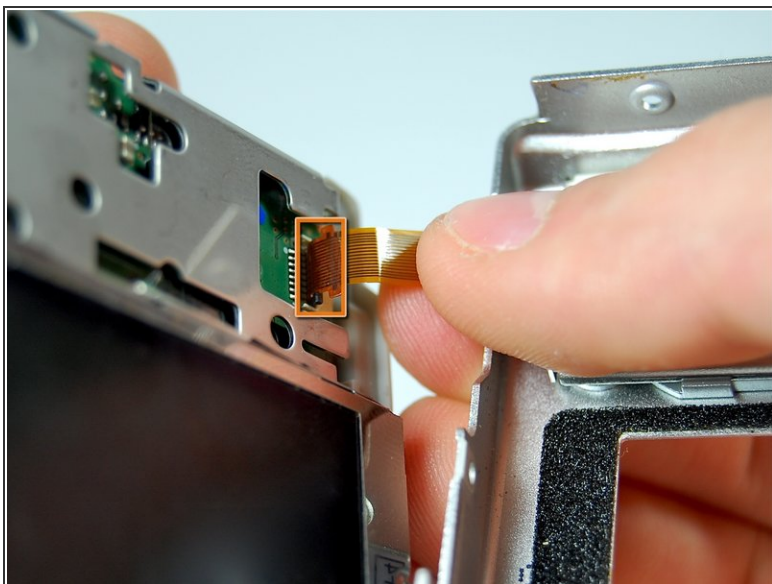

- Pull down the on the black latch to carefully separate the orange ribbon from the motherboard.
- Pull apart the orange ribbon and front casing from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.