



Sony Ericsson W350a Speaker Replacement

How to replace the speaker in a Sony Ericsson W350a phone.

Written By: Ldellos



 **TOOLS:**


- [Pro Tech Toolkit](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Place the phone face down on a flat smooth surface so that the camera, logos, and speaker face up.
- Using the provided notch on the bottom of the back cover, insert a plastic opening tool and lift upwards to remove the back cover of the phone.

Step 2

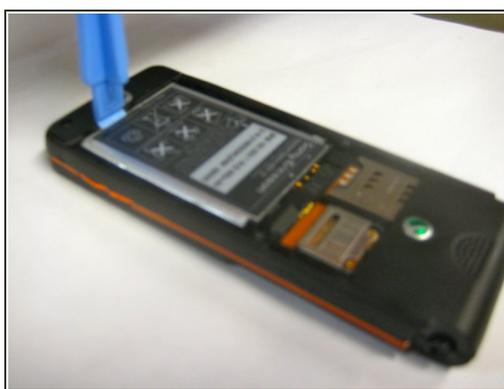

- Set the cover to the side upon removal.
- Insert the plastic opening tool into the crevice between the camera and the battery of the phone. Using a gentle prying motion, lift the end of the battery and remove.
- After removal, recycle the defective battery appropriately.

This document was generated on 2021-06-01 02:56:09 AM (MST).

Step 3 — Speaker




- Flip the phone over and remove the Sony Ericsson sticker that is over the phone's ear speaker.
- Using a T5 screwdriver, loosen and remove the two screws under the Sony Ericsson sticker by turning them counterclockwise.

Step 4



- Using a mini Phillips screwdriver, remove two screws by turning them counterclockwise.

Step 5

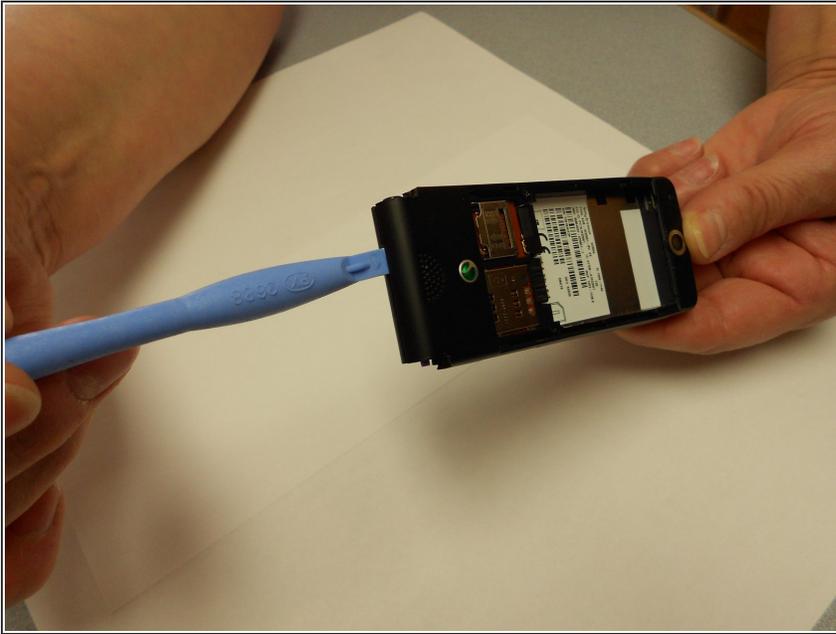


- Insert an opening tool in the bottom crack between the front and back plates and use a gentle upward pull to separate the back case from the front case.
- ⓘ Side buttons/controls may fall from their place in between the back and front casings.

Step 6





- Using a T5 screwdriver, remove the two screws by turning them counterclockwise.

Step 7

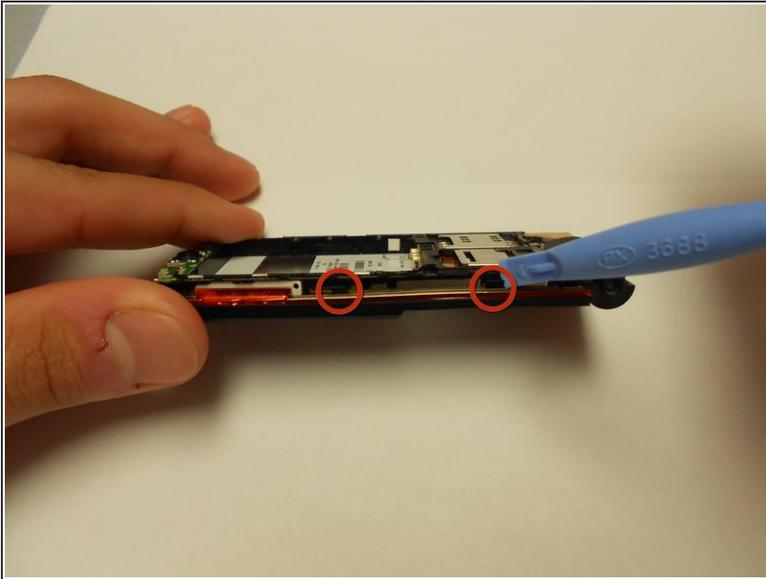

- Using an opening tool and a gentle outward motion, separate the front plate from the inner phone workings.

Step 8

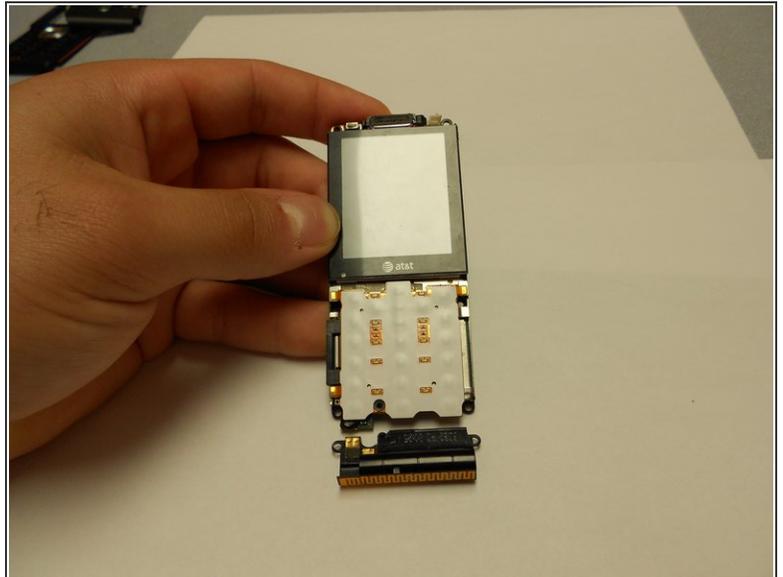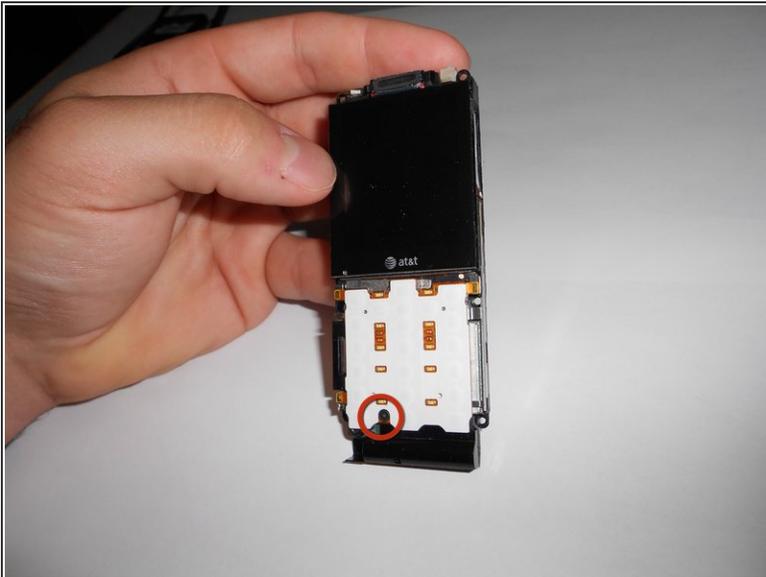

- Using a Phillips head screwdriver, remove the screw from the front number pad by turning it counterclockwise.
- Remove the speaker from the phone.

To reassemble your device, follow these instructions in reverse order.