



Fujifilm FinePix S4800 Rear Case Replacement

This guide shows you how to remove the rear case of your Fujifilm FinePix S4800.

Written By: Stephen Calabrese



INTRODUCTION

It happens to best of us. Your device hits the floor and now the case is damaged. Don't panic, because all you need are a screwdriver and a tool to remove the plastic case and you can replace this component very easily.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [JIS Driver Set](#) (1)
-

Step 1 — Battery



- ⓘ Make sure that the camera is powered off before continuing.
- Rotate the camera so that the label on the base of the camera is facing up.
- On the battery compartment door, there is a slider that says "open". Slide it down and push the door to the right to release the door.

Step 2



- Remove all four batteries and set them aside.
- ✦ When replacing the batteries, be sure to note the markings on the face of the battery compartment. These markings let you know which side of the battery ("+" or "-") needs to be facing up in each slot.

Step 3 — Rear Case



- Remove the three 5.0 mm JIS #000 screws on the bottom of the camera.

Step 4



- Rotate the camera so that the HDMI port is facing up.
- Remove the two 5.0 mm JIS #000 screws.

Step 5



- Rotate the camera so that the text "30x superwide 24-720mm" is facing up.
- Remove the two 5.0 mm JIS #000 screws.

Step 6



- Press the pop-up button highlighted in the picture to release the flash mechanism.
- Remove the two 5.0 mm JIS #000 screws highlighted in the picture.

Step 7



- Use a plastic opening tool to separate the rear case from the camera on each of the sides until the panel is completely separated.
- ⚠** The plastic case is fragile, so take your time on each side making sure to pry each side evenly as you continue around the camera with the tool.

Step 8



- Gently, remove the rear case from the camera and set it aside.

To reassemble your device, follow these instructions in reverse order.