




# Sony Cyber-shot DSC-P100 Camera Flash Replacement

Give a short summary.

Written By: Katie McCraw

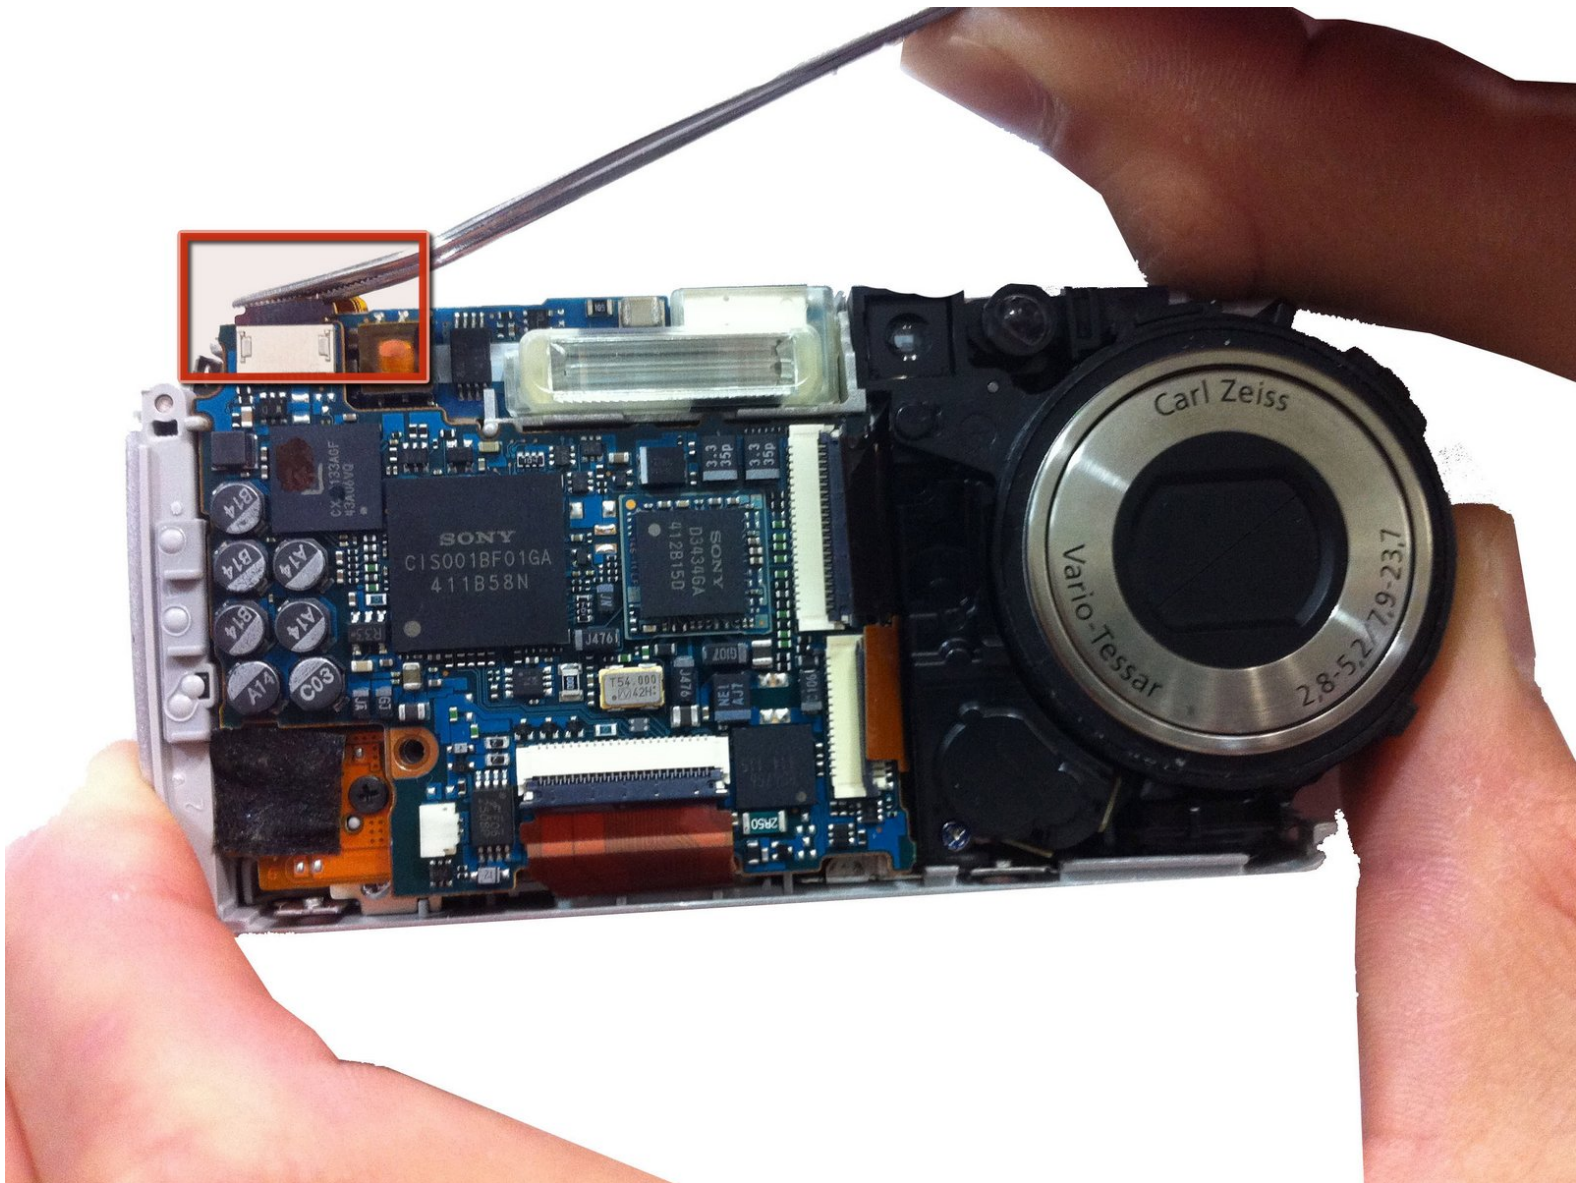

---

## INTRODUCTION

This is a step-by-step guide to disassembling and replacing the flash in the Sony Cyber-shot camera.

---

### TOOLS:

- [Heavy-Duty Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Front Casing



- First locate the appropriate screws for detachment.


## Step 2



- Remove the five screws shown using a Phillips #00 Screwdriver.
- ⓘ It is important to put the small screws in a safe location in order to reassemble the casing.




### Step 3

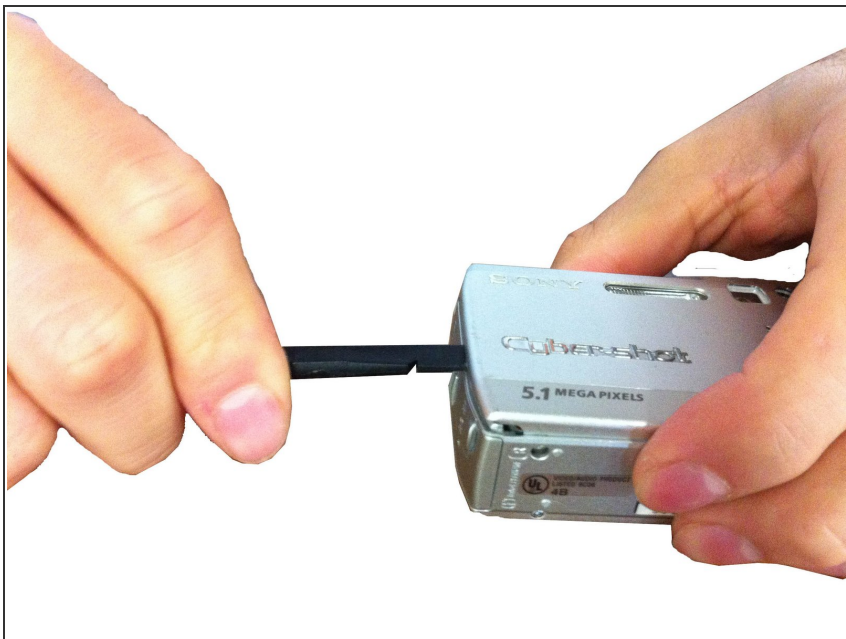

- Using a spudger, carefully pry open the front casing.



### Step 4

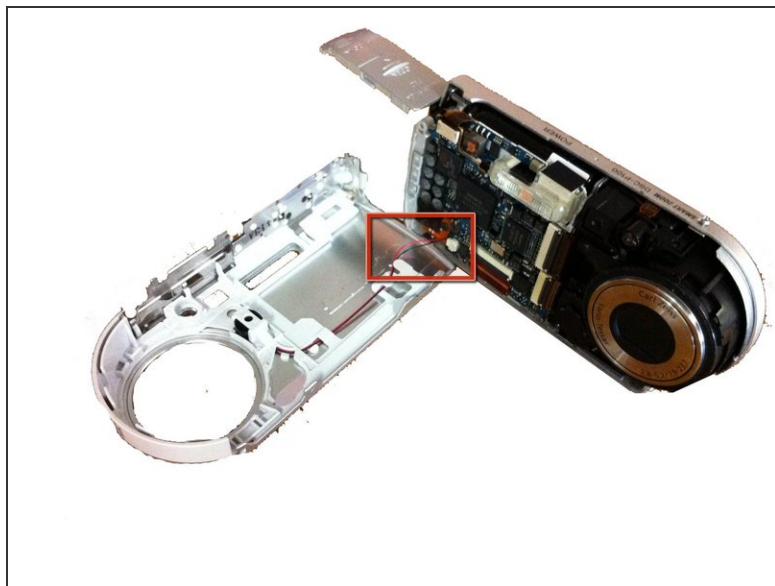

- Carefully separate the front casing from the camera body.




**⚠ CAUTION:** Be careful not to break the wire connecting the front casing and the camera.

## Step 5 — Camera Flash

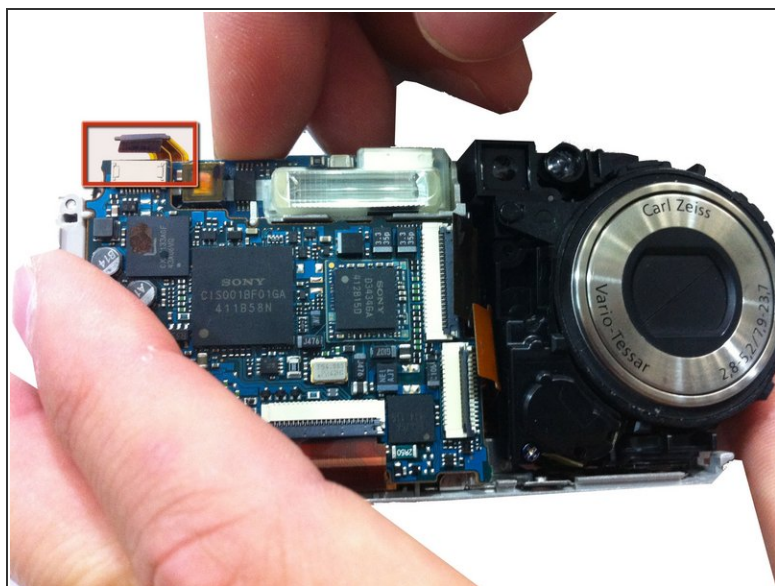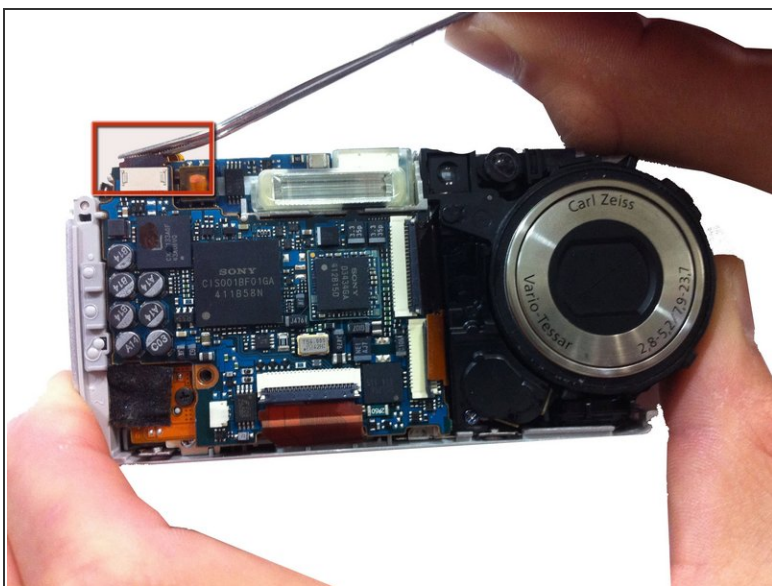

- Using tweezers, gently pull the ribbon trace out of its housing found on the left side of the flash.

## Step 6

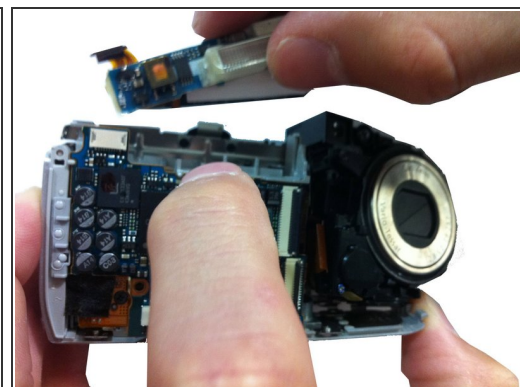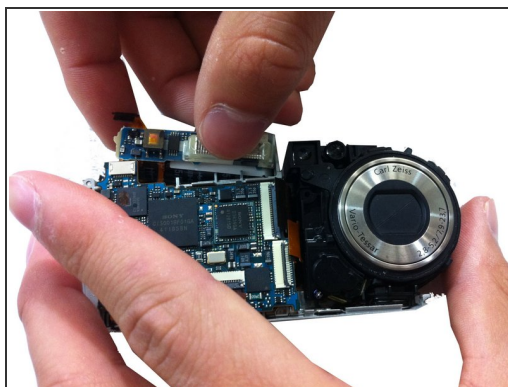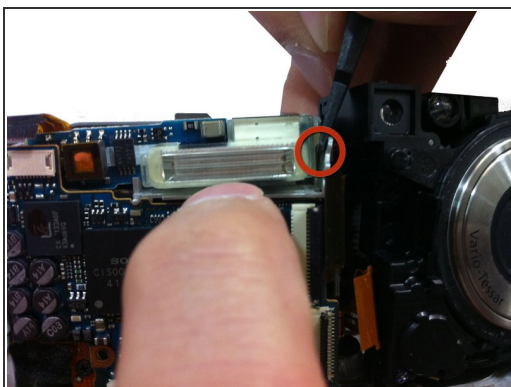

- Using a spudger, pry the small latch between the lens and the flash open to release the flash.
- Pull the flash away from the camera.

To reassemble your device, follow these instructions in reverse order.