



# Fujifilm FinePix 4700 Zoom Back Cover Replacement

This guide will help you install and remove the back cover on the camera.

Written By: Sarthak Patel





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover



- Use the Phillips #00 screwdriver to remove the 7 screws on the sides of the camera:
  - Four 3.95mm Phillips screws located on the bottom of the camera
  - Two 3.95mm Phillips screws located on the right side of the camera
  - One 3.95mm Phillips screw located on the left side of the camera

## Step 2



- Slide open the battery compartment cover with your thumb.


### Step 3



- Wedge the edge of the spudger between the front and back case, near the corner of the flash.
- Carefully run the spudger along the right edge of the camera, creating an opening.
- Insert the spudger into the left side of the camera, above the screw hole. Then carefully run it along this edge.




## Step 4

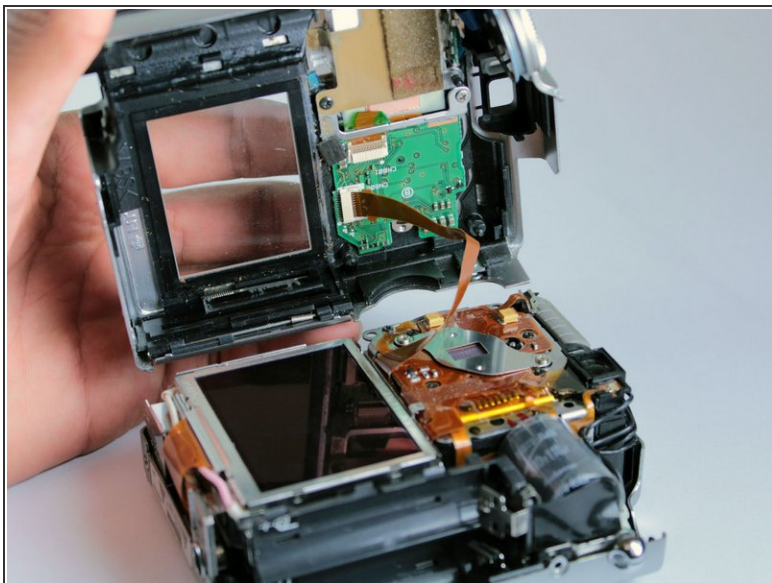

**⚠** Watch out for the orange ribbon that is still attached to the back cover when you lift it up. It is very delicate and might rip.

- Slowly lift the back cover straight up, lightly jiggling it if necessary.
- Remove the battery compartment cover.

## Step 5

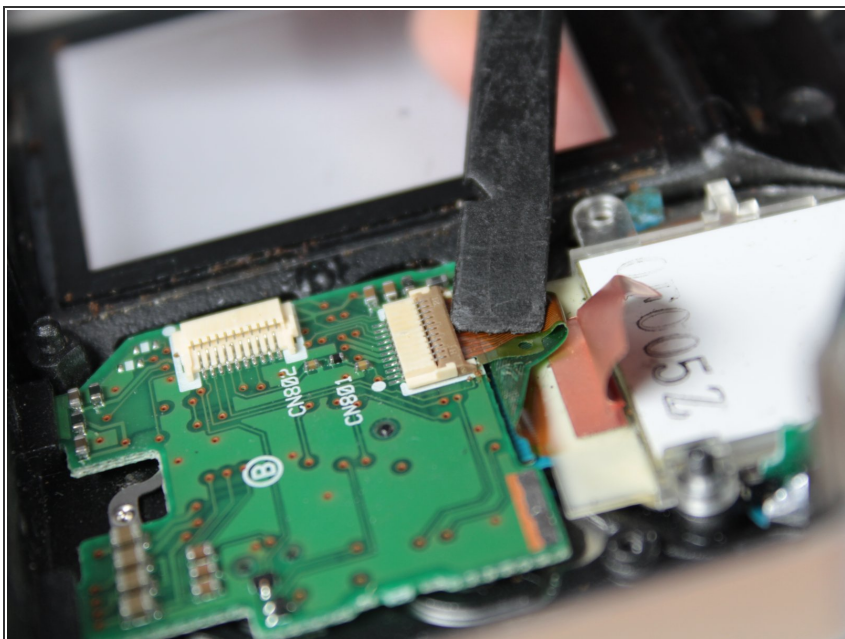

- Gently insert the spudger under the clip holding the orange ribbon. The clip should lift up and the ribbon will slide out.
- This step will free the back cover from the rest of the camera.

To reassemble your device, follow these instructions in reverse order.