 


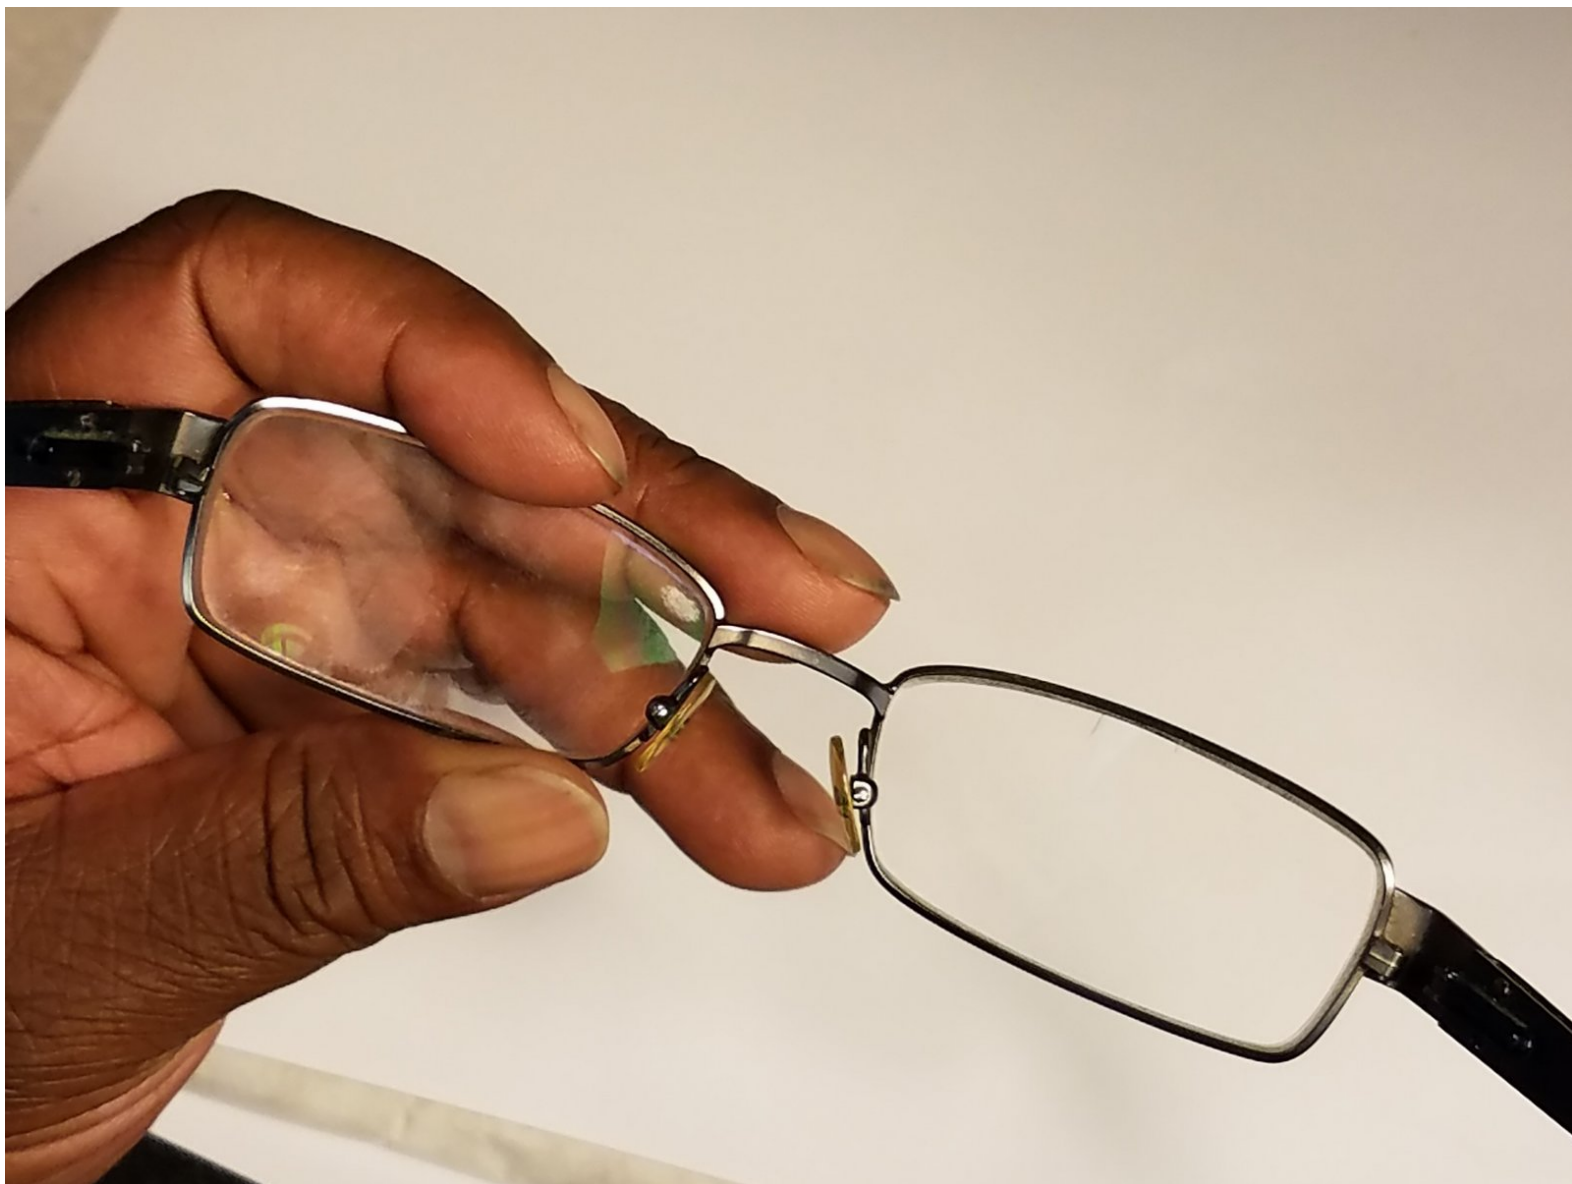

PE254 Nose Pad Replacement

This guide will walk you through replacing your...

Written By: Julianna Lewis



INTRODUCTION

 
This guide will walk you through replacing your eyewear nose pads.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [Scotch tape](#) (1)
 - [eyeglass screws](#) (1)
 - [Eyeglass Nose Pads](#) (1)
-

Step 1 — Nose Pad

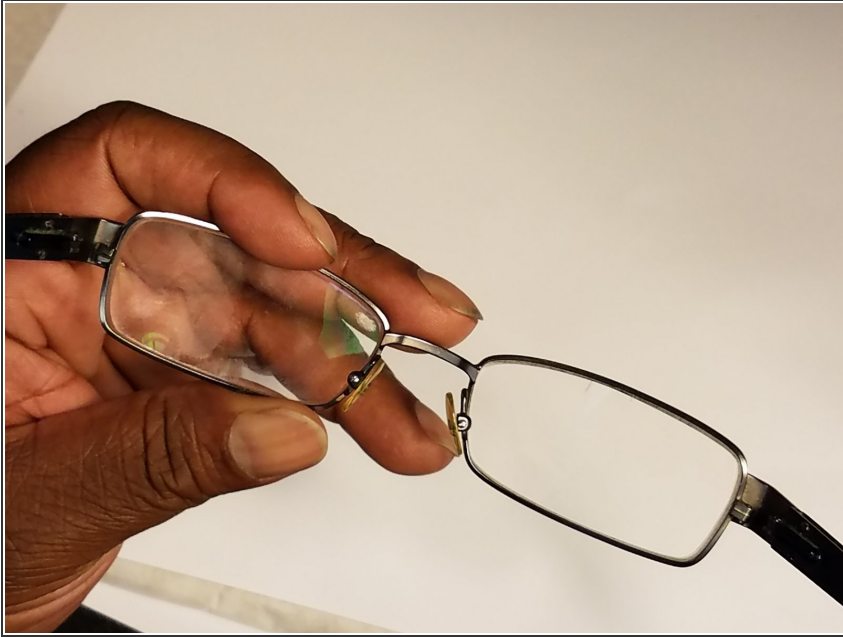

- Assess the eyewear for nose pad damage or cracks.

 Step 2

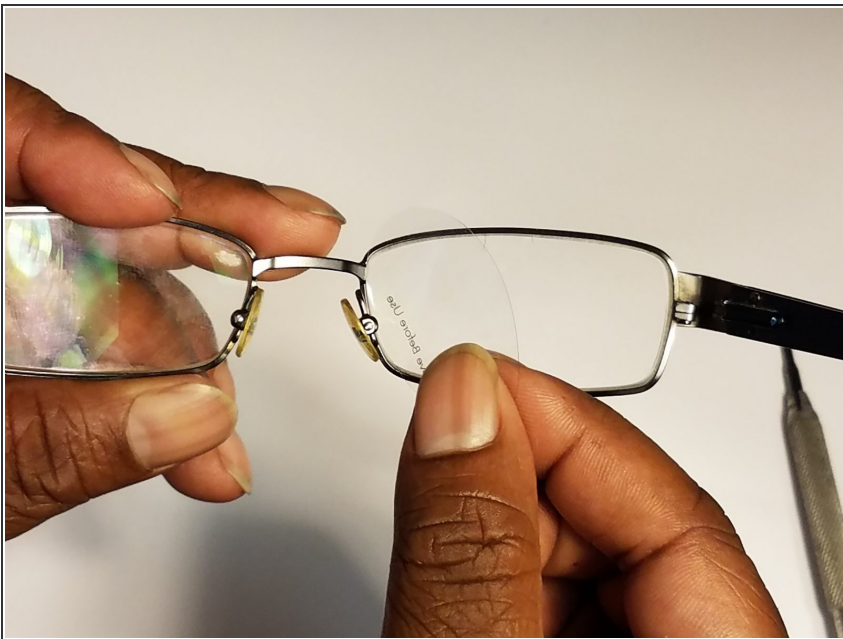



- Place a 3-inch strip of tape on the lenses to protect them from being scratched.

Step 3



- Unscrew the nose pad screw using a Phillips-head screw driver. Turn the screw counter-clockwise until the screw can be removed

  Step 4

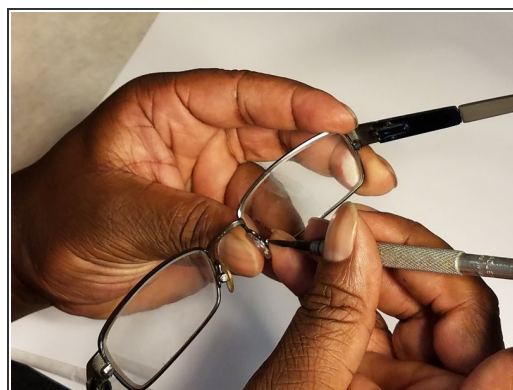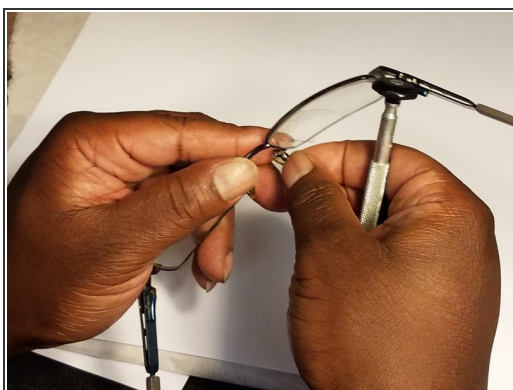

- Remove the old nose pad and replace with a new one.

Step 5



- Place the screw back inside of the nose pad and turn clockwise until the screw is tight. Do not overtighten.

Step 6



- Repeat steps on the other side
- Be careful when readjusting the pads.