



HP Envy m6-k022dx RAM Replacement

Replace your ram stick to replace a damaged stick, or to upgrade your laptop's ram for increased processing speed.

Written By: Anthony Stubbs



INTRODUCTION

Replace your random access memory (RAM) stick to increase your computer's ability to do everyday tasks, such loading applications and increasing the realism in video games.



TOOLS:

- [Phillips Head Screwdriver: Size PH1](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [6GB DDR3L SDRAM](#) (2)

Step 1 — Lower Case




- There are 12 phillips head screws which need to be unscrewed before removing the backplate of the laptop.

Step 2



- Next, use a size PH1 Philips head screw driver to remove the screws.

Step 3

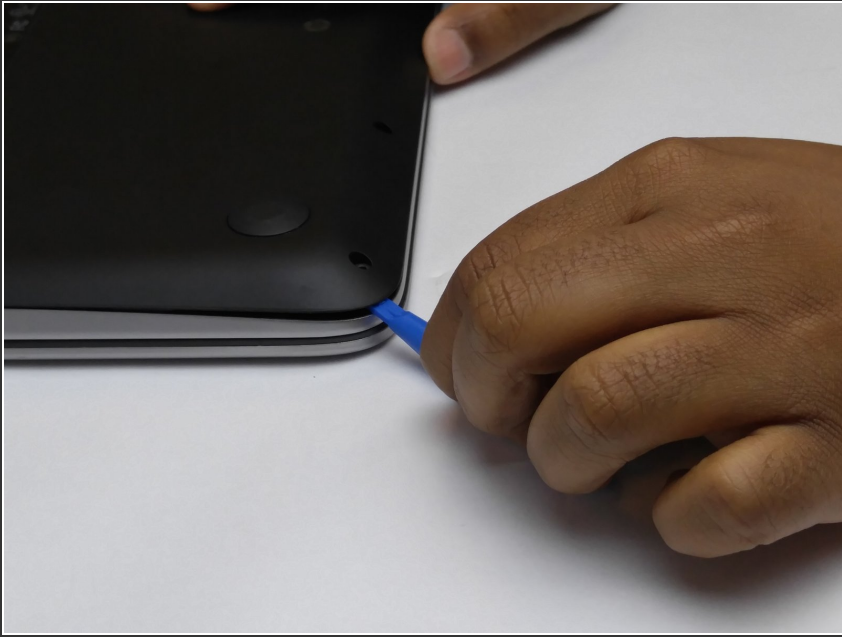


- Then, use a prying tool to help uncouple the backplate.

Step 4




- Finally, use both hands to lift up and take off the back plate of the computer.

Step 5 — RAM

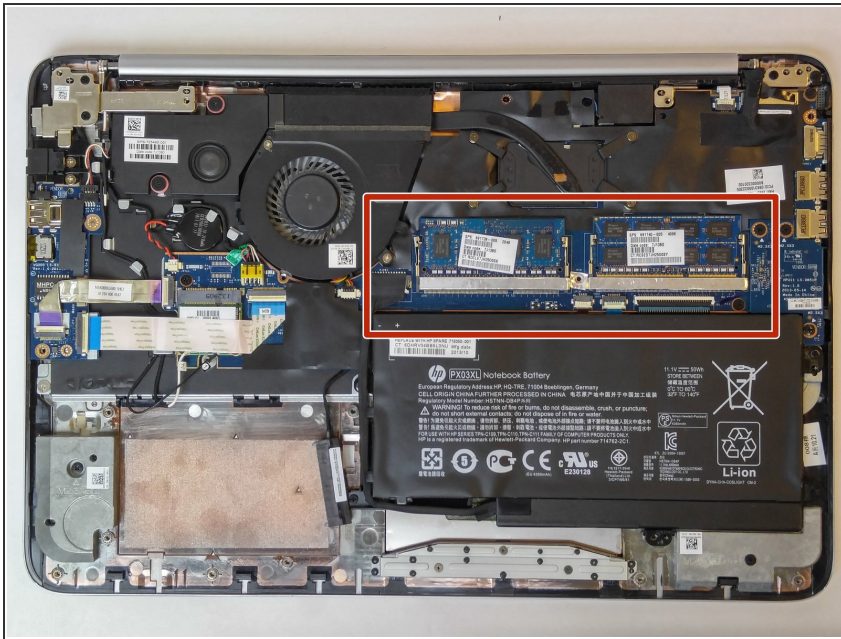

- The RAM sticks are located in the right upper corner of the laptop of the laptop.

Step 6

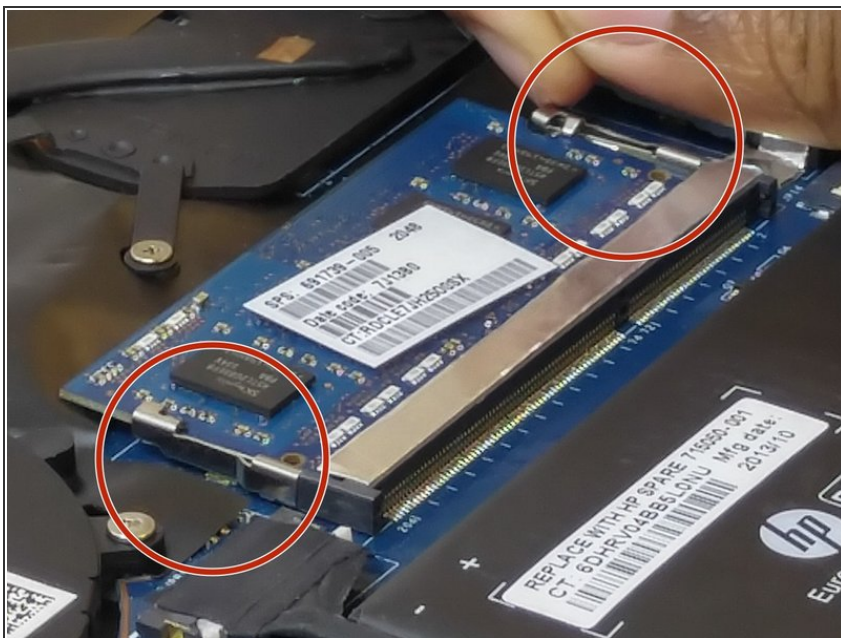

- There are two clips holding each RAM stick in place; one on each side of each stick.
- Gently pull each clips outwards, away from the RAM sticks. They will easily unclip from the RAM.

Step 7



- Grab the top of the RAM stick and pull directly up, towards the outer edge of the laptop.
- The RAM sticks will slide out from their slots relatively easily. They are now ready to be replaced.

To reassemble your device, follow these instructions in reverse order.