



# Sony NEX-5T Lens Replacement

Guide on removing the lens from the camera.

Written By: William Kleinman



## INTRODUCTION

The lens is what the camera uses to zoom and focus on a subject. There are different lenses for different uses, but they can all be removed in the same way.

## Step 1 — Lens



- With the camera facing you, push down on the button located to the bottom left of the lens.

## Step 2



- While holding down the button, twist the lens counter-clockwise until you hear and feel a firm click.

### Step 3



- Lift the lens away from the camera body.

### Step 4



- ☑ To put the lens back on , line up the white dot on the lens with the white dot on the e-mount. Twist clockwise until you hear and feel a firm click.

To reassemble your device, follow these instructions in reverse order.