



2006-2011 Honda Civic Automatic Transmission Fluid Replacement

A video tutorial on how to change the automatic transmission fluid by drain and fill method on a 2006-2011 Honda Civic 8th generation.

Written By: eCuration



INTRODUCTION

Doing this procedure every 30, 000 miles can really help keep your Honda transmission in good working order.



TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stands](#) (1)
- [Wheel Chocks](#) (1)
- [Torque Wrench](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [Oil Drain Pan](#) (1)
- [Long Neck Funnel](#) (1)
- [Paper Towels](#) (1)



PARTS:

- [Automatic Transmission Fluid 1 qt.](#) (2.5)

To reassemble your device, follow these instructions in reverse order.