



Acer Chromebook R11 CB5-132T-C1LK Bottom Panel Replacement

Removing the bottom panel allows access to the main components of a laptop.

Written By: Alan Shan



INTRODUCTION

Prerequisite Only

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

Optional

Step 1 — Bottom Panel



- Using a Phillips screwdriver, remove all eleven 7.0 mm screws from the bottom of the Chromebook.

Step 2



- Find the seam along the edge of the device.
 - Wedge a finger into the groove and separate the panel from the device. If necessary, use a spudger.
- ⚠** The panel will still be connected to the device by internal wiring, so pull it off with some caution. It is best to flip the panel to the side once the seam has been broken.

To reassemble your device, follow these instructions in reverse order.