



# Casio Exilim EX Z55 LCD Screen Replacement

This guide shows how to remove the LCD screen...

Written By: Laura



# INTRODUCTION

This guide shows how to remove the LCD screen from the Casio Exilim EX Z55 camera. You may have to replace a broken or shattered screen.

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[Phillips #00 Screwdriver](#) (1)

---

### Step 1 — Front Case



- Remove eight 1.8 mm screws from the left and right sides of the camera using a Phillips #00 screwdriver

## Step 2



- Remove the four 3.7 mm screws from the bottom of the camera using a Phillips #00 screwdriver.

## Step 3




- Separate the front case from the body of the camera.

## Step 4 — Back Case




- Separate the back case from the body of the camera.

## Step 5 — LCD Screen

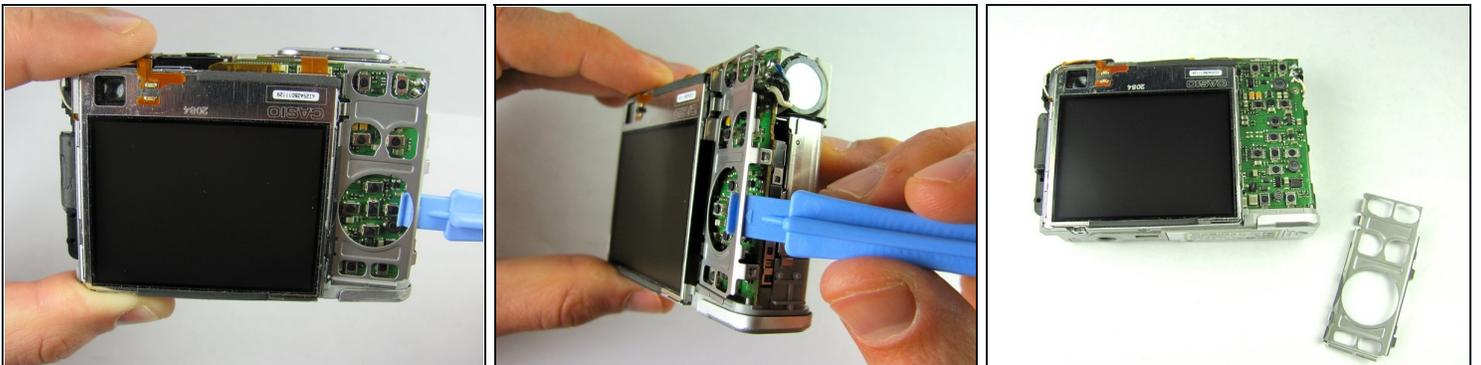


- Remove the metal grating located to the right of the LCD screen by inserting the plastic opening tool under the grating and pulling up.

## Step 6

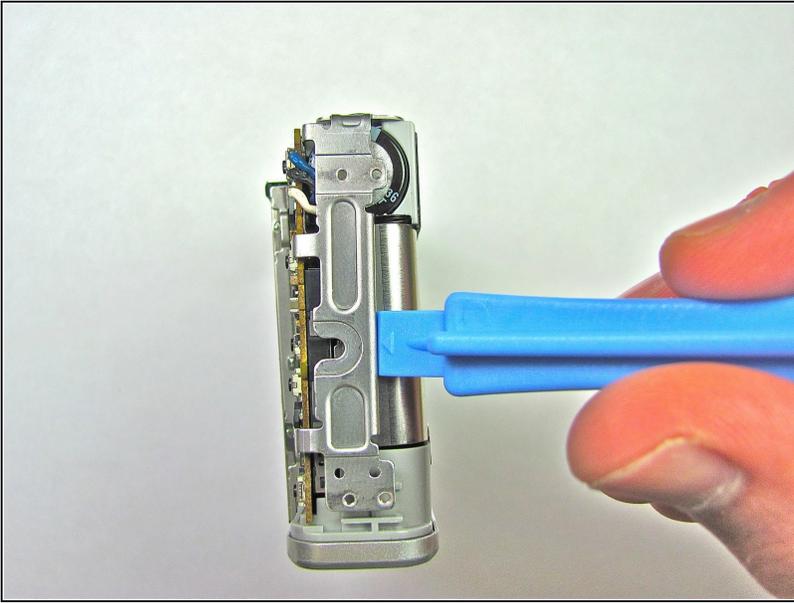

- Before removing the side metal bracket, first remove the attached strap knob by twisting it off.
- Then, remove the side metal bracket by inserting the plastic opening tool under the bracket and pulling up.

## Step 7

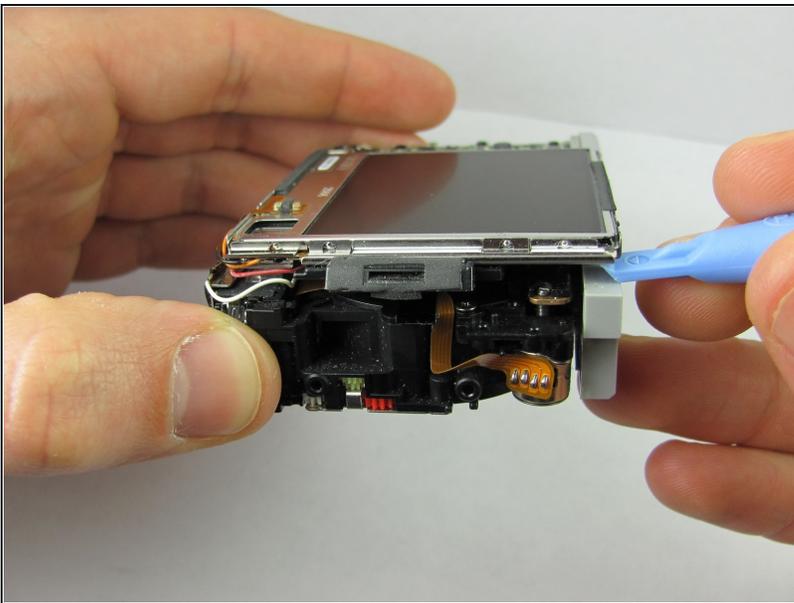

- Using the plastic opening tool, pry up the LCD screen starting at one of the corners. Insert the tool under one of the corners and lift up.

## Step 8



- Continue to lift the LCD screen all the way up.

**⚠ Be careful not to rip any wires connecting the LCD screen to the top of the camera.**

To reassemble your device, follow these instructions in reverse order.