




# 1998-2002 Honda Accord Engine Air Filter Replacement

A video tutorial on how to change an old worn out engine air filter on a 1998-2002 Honda Accord.

Written By: eCuration

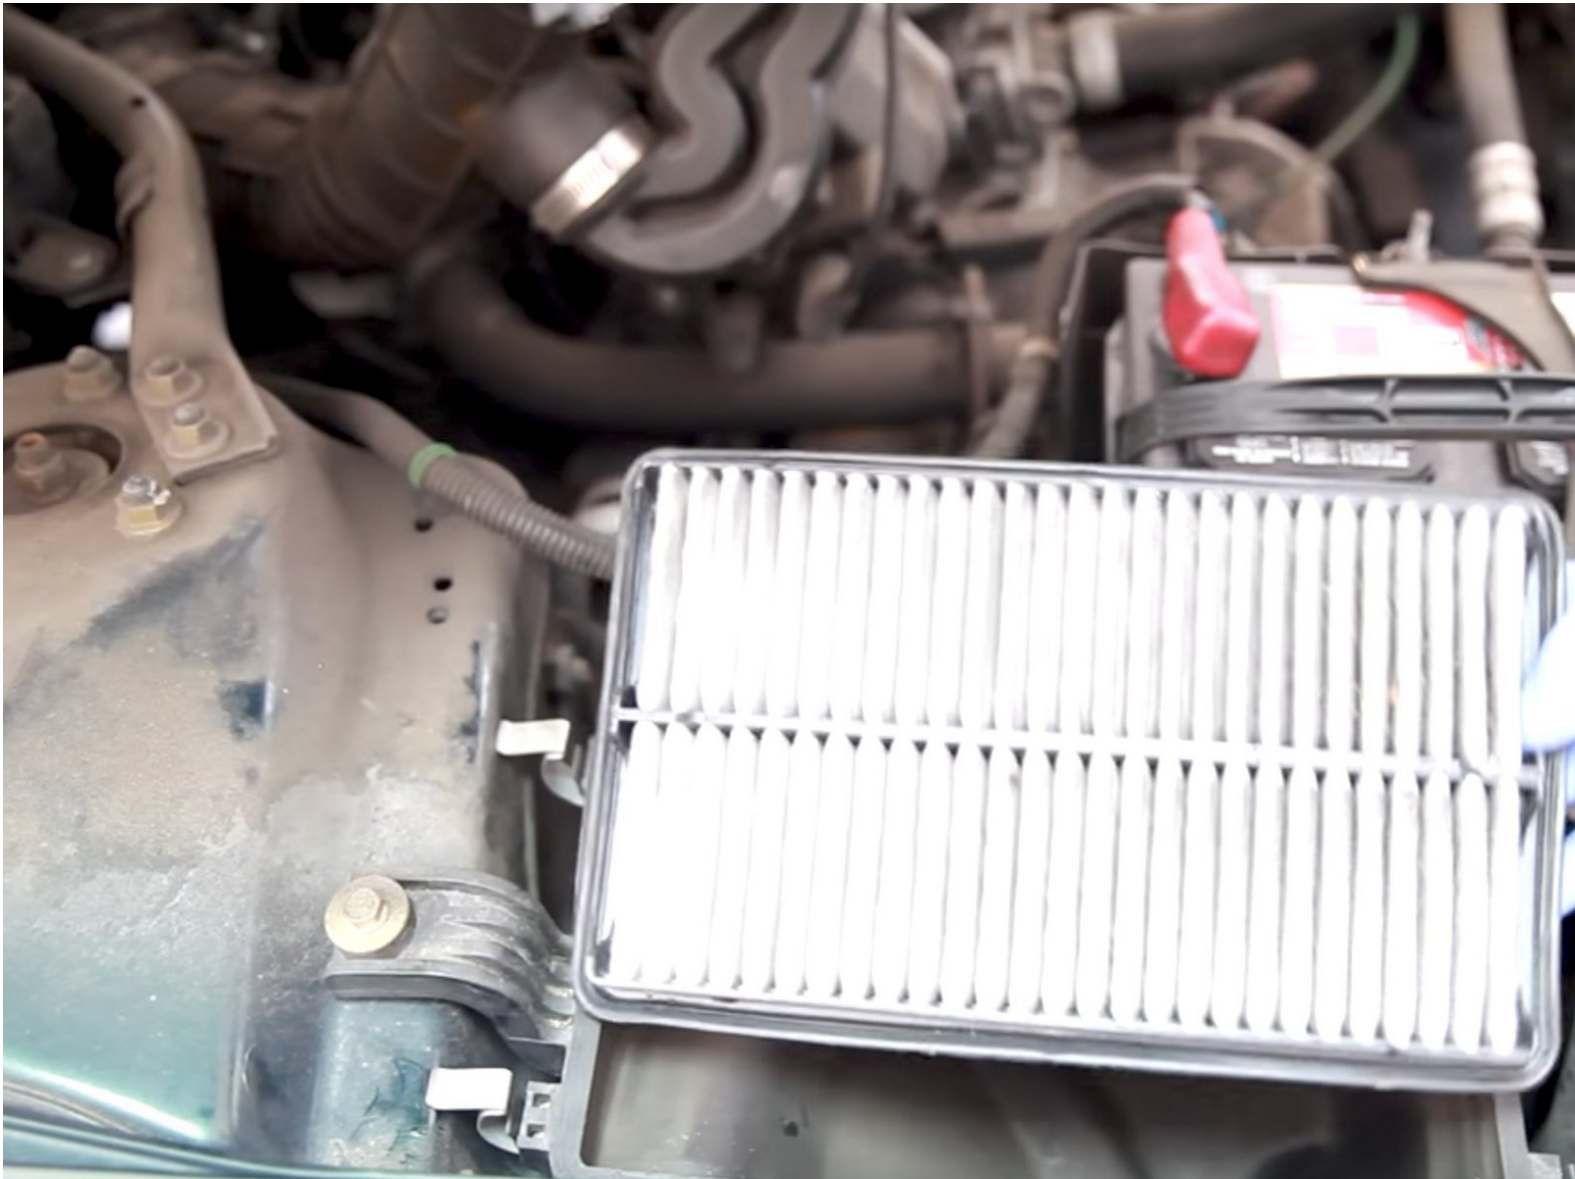

## INTRODUCTION

The engine air filter should be replaced once every 15,000 to 30,000 miles depending upon your driving conditions.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



### TOOLS:

- [Pair of Hands](#) (1)



### PARTS:

- [Engine Air Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.