



# Vornado 133 Compact Air Circulator Fuse Replacement

The Vornado 133 has a small fuse in the plug...

Written By: Erin Klein



# INTRODUCTION

The Vornado 133 has a small fuse in the plug end as a safety feature; if the fuse has burnt out, your fan will not start. This guide will illustrate how to remove and replace the fuse.

---

## TOOLS:

[Tweezers](#) (1)

[Spudger](#) (1)

## PARTS:

[Fuse \(2.5 amp, 125 volt\)](#) (1)

 
---

## Step 1 — Fuse




- Ensure the unit is powered off and remove the plug from the outlet.

## Step 2

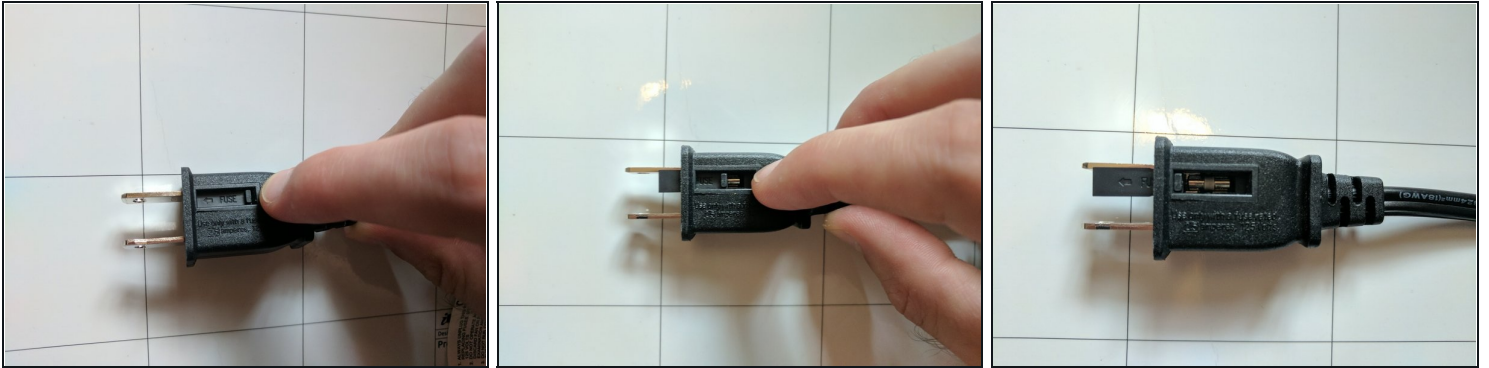

- Slide open the fuse access cover on the top of the plug by moving it towards the end of the plug.

## Step 3

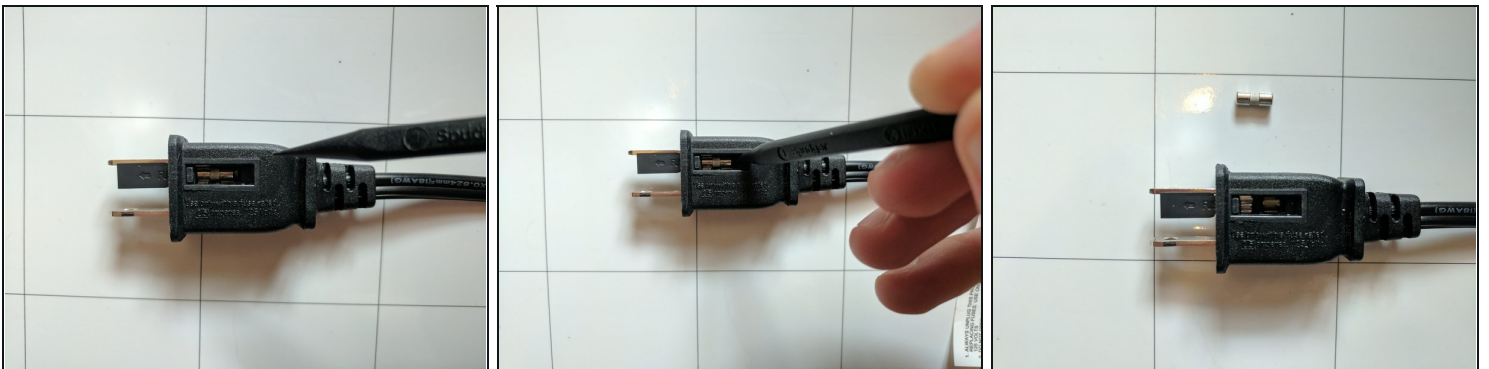 

- Use a pair of [tweezers](#) or a small plastic spudger to remove the fuse from the fuse casing. Remove the end nearer to the fan body first, then the end nearer to the plug end.
- ① The replacement fuse must be 2.5 amp, 125 volt.

**⚠ Do not push against the glass center of the fuse, only the metal end pieces.**

Follow these instructions in reverse order to install the new fuse and close the access panel.