



# HTC Vive Facerest Replacement

Use this guide to remove and replace the...

Written By: Adam O'Camb



## INTRODUCTION

Use this guide to remove and replace the facerest on an HTC Vive.



### TOOLS:

- [T5 Torx Screwdriver](#) (1)



### PARTS:

- [HTC Vive Facerest](#) (1)

## Step 1 — Unscrew the head strap mounts



**⚠** Be sure to power down and disconnect your Vive before beginning.

- Use a T5 Torx driver to remove the two 12 mm-long screws securing the head strap mounts on either side of the headset.
- ⓘ For some devices, a T6 Torx driver may work better.
- ⓘ The mounts may fall off when the screws are removed, so be careful not to lose any parts.

## Step 2 — Remove the head strap mounts



- Remove both head strap mounts.

### Step 3 — Remove the facerest



- Slide the facerest straight away from the headset to remove it.

Compare your new replacement part to the original part—you may need to transfer remaining components or remove adhesive backings from the new part before installing.

To reassemble your device, follow the above steps in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Check out our [Answers community](#) for troubleshooting help.