




Handspring Visor Deluxe PDA Touch Screen Replacement

Use this guide to replace the Touch Screen.

Written By: David Faltemier

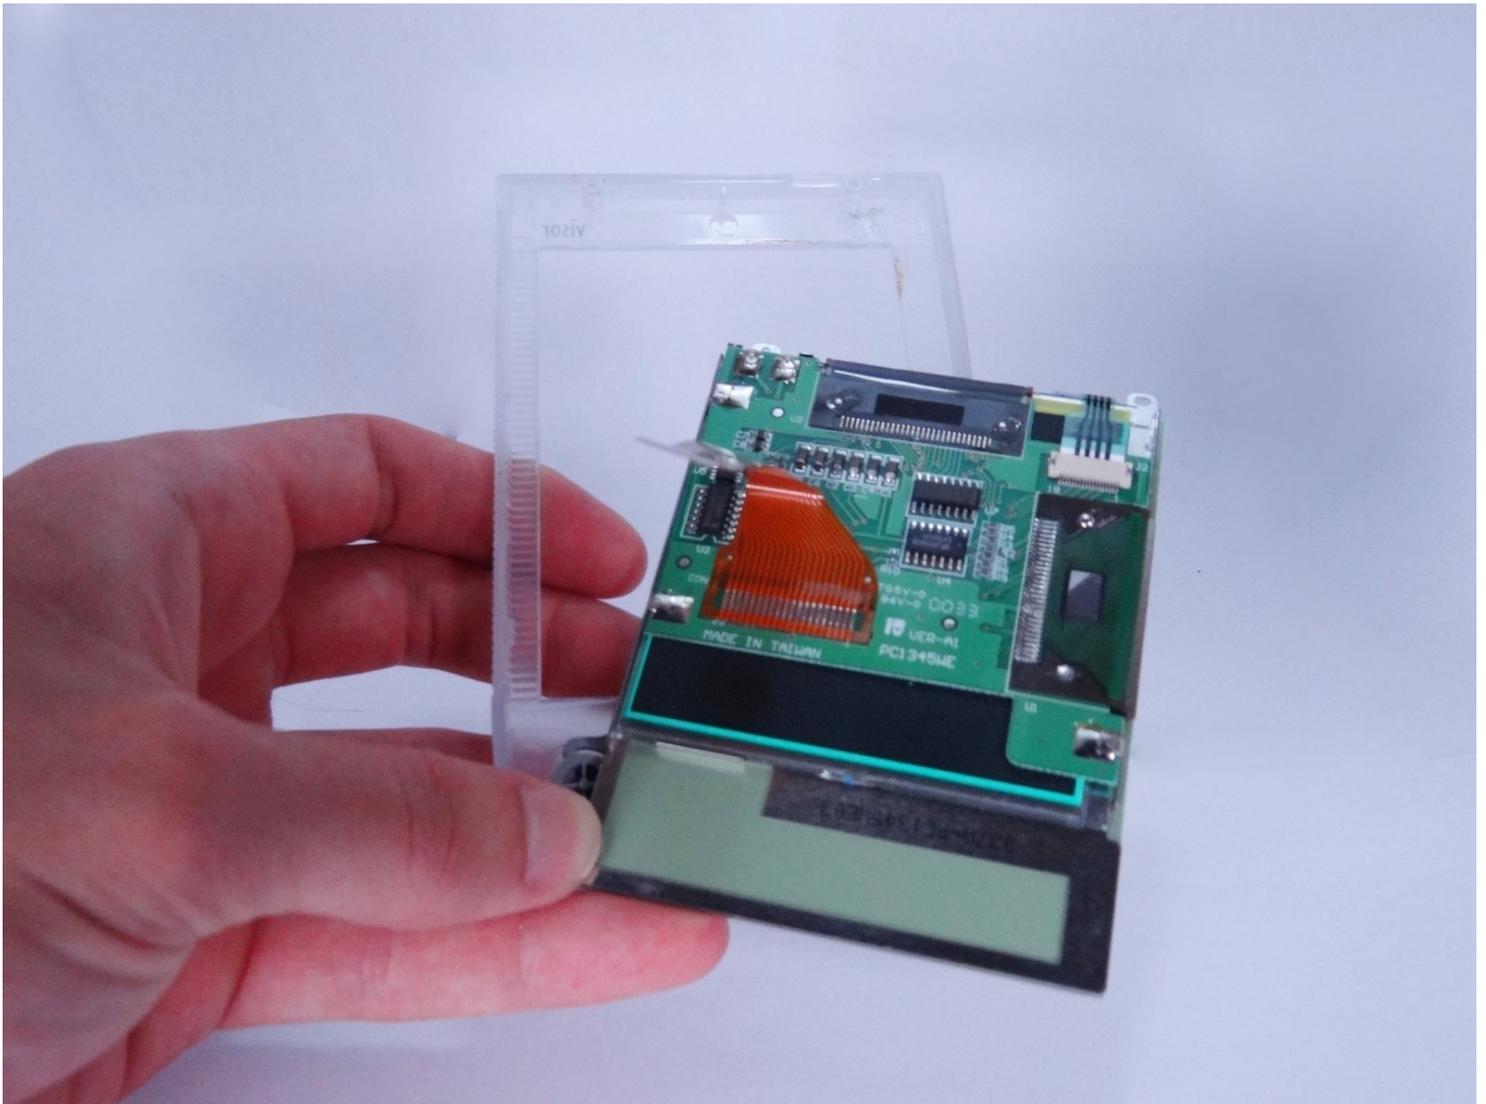

INTRODUCTION

Use this guide to replace the Touch Screen.

TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)

Tweezers (1)

Step 1 — Outside cover and stylus



- Remove the outer screen cover by releasing the top clip from the main body of the device.

Step 2




- Pull out the stylus from the top right corner of the device.

Step 3



- Slide the memory cartridge cover up and off the device.

Step 4 — Batteries

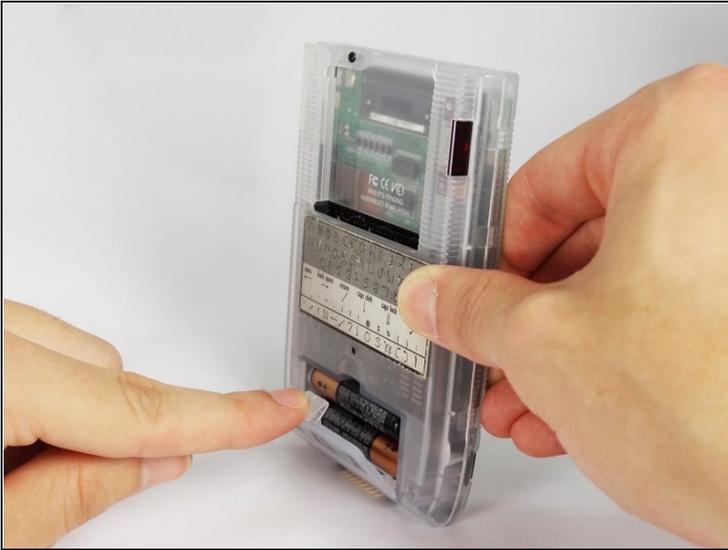


- Remove the battery cover by releasing the clip from the main body of the device.

Step 5






- Remove the batteries from the device.

Step 6 — Back Cover

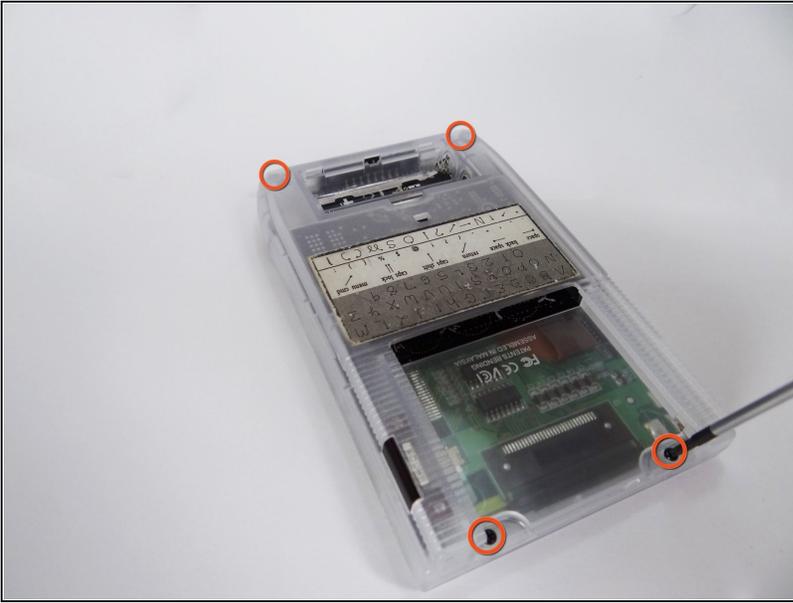

- Unscrew the four 2.94mm screws with a #00 Phillips screwdriver.
- ⓘ One end of the OEM stylus can unscrew and contains a mini #00 Phillips screwdriver.

Step 7

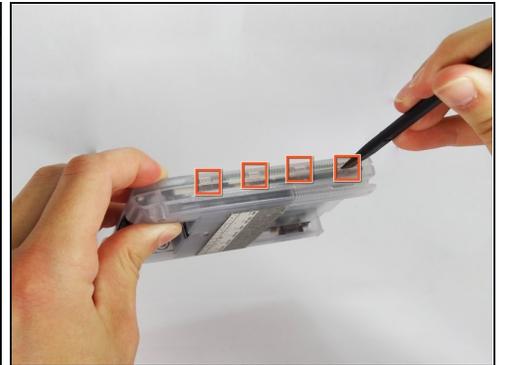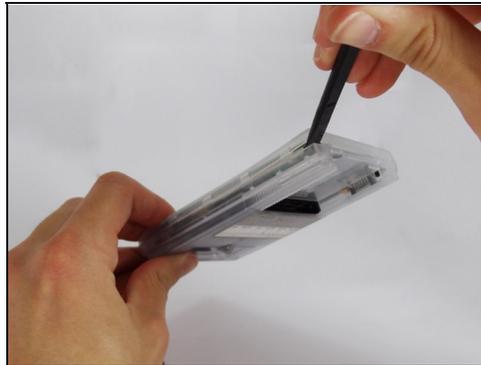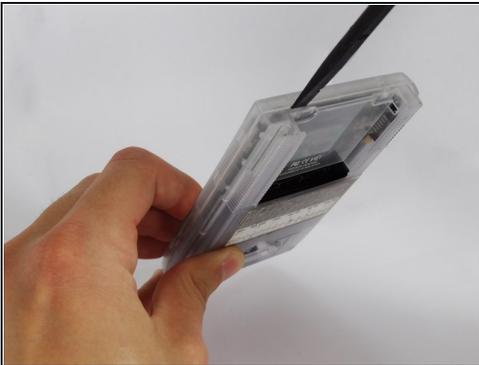

- Use the spudger to pry open the casing by applying pressure at 4 clips on both sides of the device.


⚠ Be careful while opening the casing as there is a flex strip connecting the two halves.

Step 8



- Disconnect the flex strip from the motherboard with [tweezers](#).

Step 9 — Touch Screen

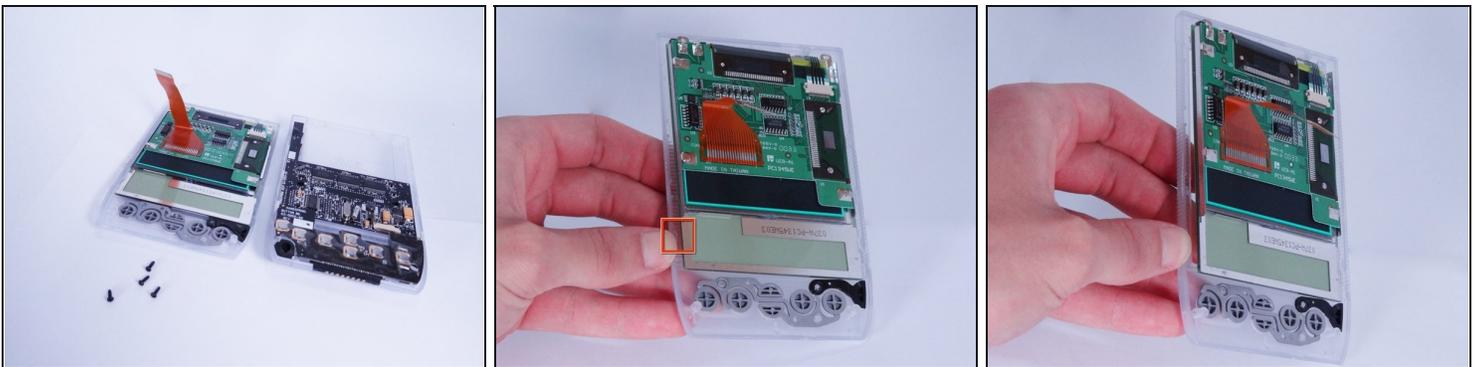

- Release the latch in bottom right corner of the touchscreen.
- ⓘ Use the spudger (if needed) to pry the screen from the front case.

To reassemble your device, follow these instructions in reverse order.