



Huawei SnapTo G-620 Microphone Replacement

If you have difficulty being heard clearly on...

Written By: Coleson Perry



INTRODUCTION

If you have difficulty being heard clearly on your Huawei SnapTo G-620, then the microphone may need to be replaced. This guide shows you how to replace your SnapTo's microphone.

TOOLS:

[Metal Spudger](#) (1)
[Spudger](#) (1)
[Tweezers](#) (1)
[iFixit Opening Tool](#) (1)
[64 Bit Driver Kit](#) (1)

Step 1 — Battery




- Pry open the back cover with your fingernail, using the divot to the lower left hand corner.
- Remove all fifteen 4mm Phillips J00 screws on the back panel.
- Using a metal spudger or your fingernail, remove the back panel.

Step 2




- Remove the pictured 4mm Phillips J00 screw.

Step 3

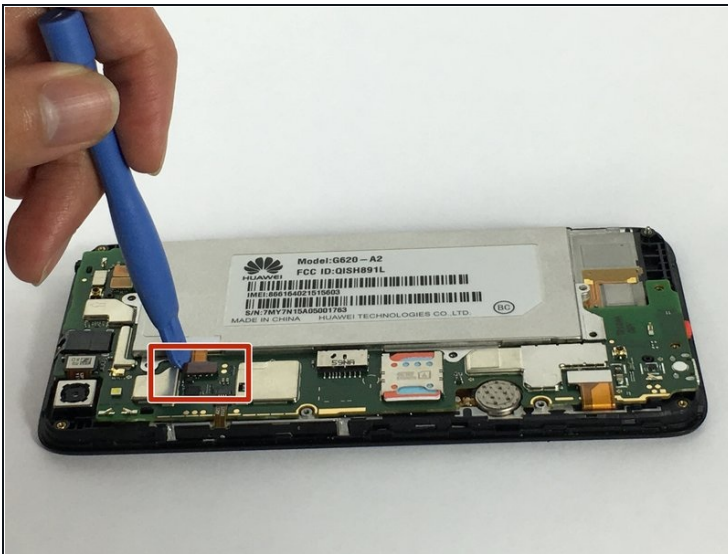

- Use a plastic opening tool to remove the pictured flat-top connector.

Step 4

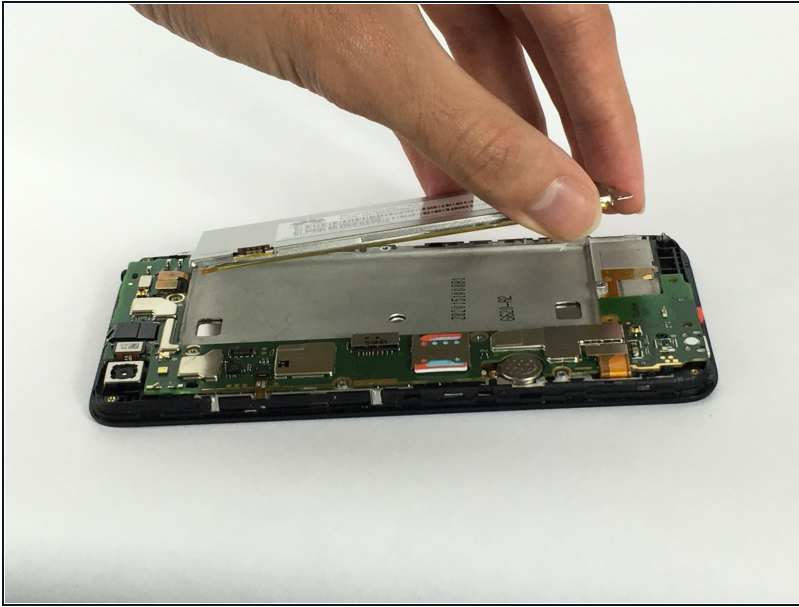



- Remove the battery.

Step 5 — Microphone





- Use a plastic opening tool to remove the pictured flat-top connector.
- Using the plastic opening tool remove the camera.

Step 6

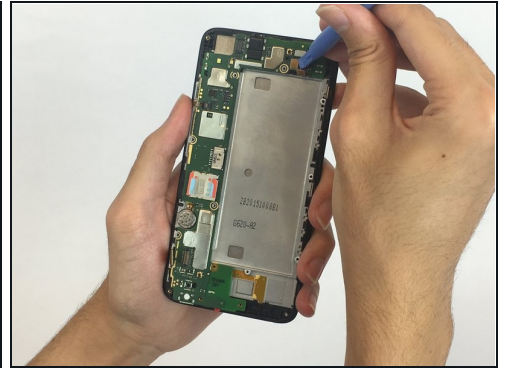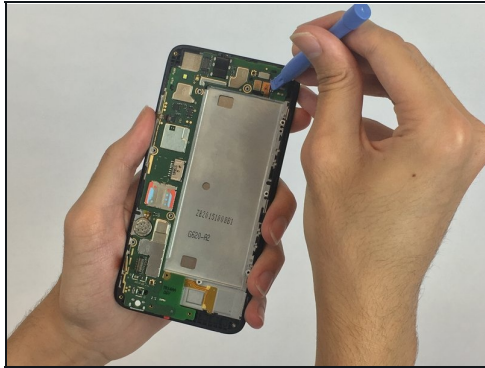

- Use the plastic opening tool to remove all the remaining flat-top connectors.

Step 7

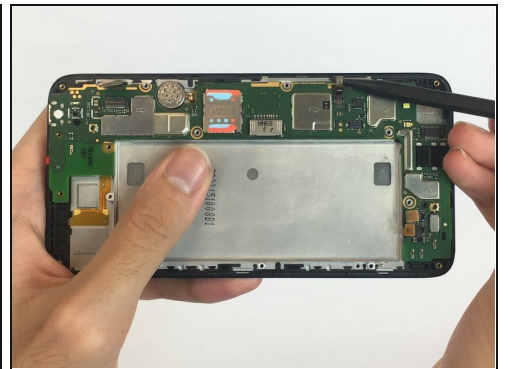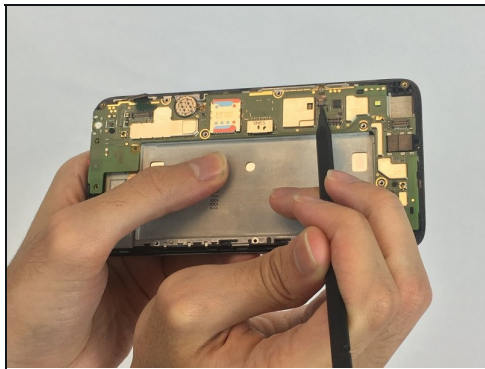

- Using the spudger, pry open the zif connector, and remove the cable.

Step 8



- Using [tweezers](#) or the spudger, remove the microphone.

To reassemble your device, follow these instructions in reverse order.