



Acer Chromebook C720-2848 Battery Replacement

This guide will help users replace the battery in their Acer Chromebook C720-2848.

Written By: Robert Escobio



INTRODUCTION

Use this guide to replace the battery in your device.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:



- [Acer Chromebook AP13J4K Battery](#) (1)

Step 1 — Back Cover

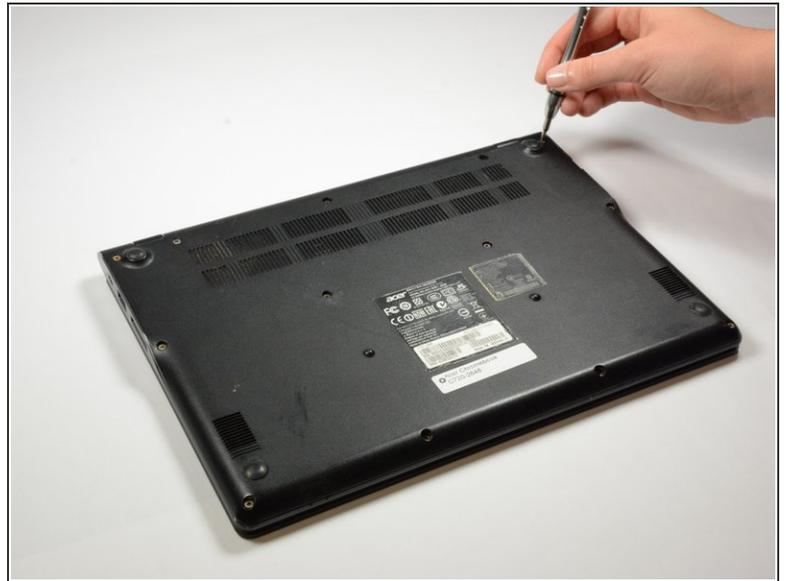

- Use a Phillips head screw driver to remove the 13 screws in these locations.

Step 2

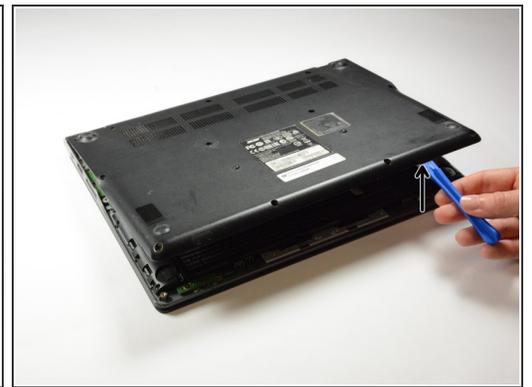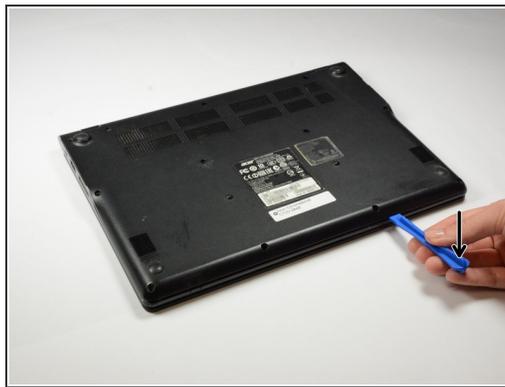

- Use a plastic spudger to pry up the bottom cover and remove it.


⚠ Be sure to pry along other edges if necessary to avoid damaging the back cover.

Step 3 — Battery



- Unscrew the 2 battery screws.
- ☑ Make sure you keep these screws separate from the back cover screws; they are different!

Step 4

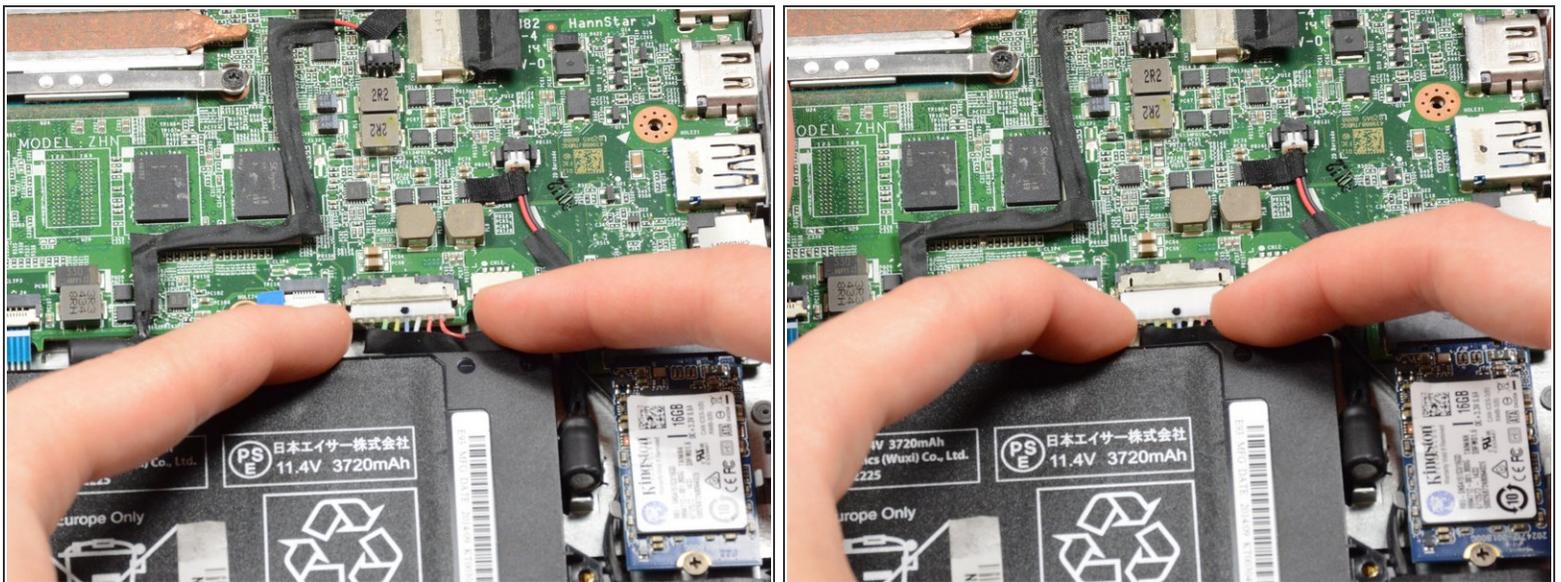

- Use two fingers to unplug the battery-to-motherboard connection.

Step 5



- Take out battery by lifting it up in the manner pictured.

To reassemble your device, follow these instructions in reverse order.